

Diagram 1


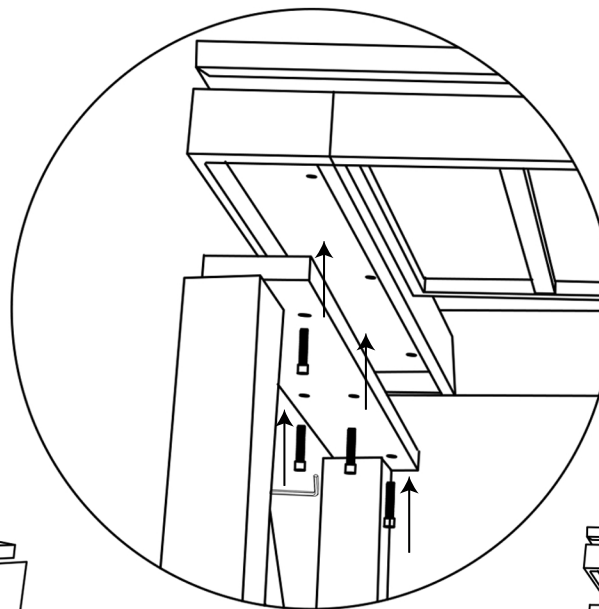


Diagram 2

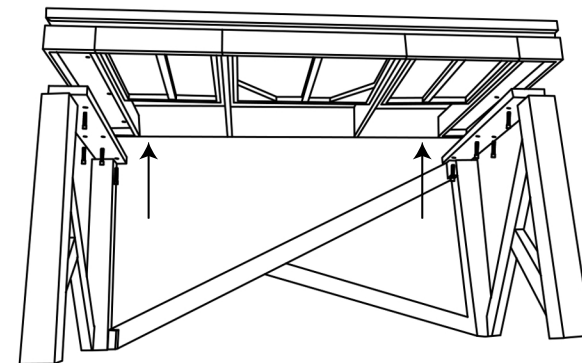

PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT.

- 1 Identify right side and left side legs.
- 2 Use the colored labels to identify the position of the stretcher, proceed to align the holes in the stretcher with inserts in the side of each leg (As shown in diagram 1).
- 3 Once the pieces are in position proceed to tight them using the alarm wrench.
- 4 Once the base is assembled proceed to align the holes of the base with we insert on the table top. Use the bolts, washer and the Allen wrench and tight as shown in diagram 2.
- 5 Make sure the bolts are tight enough to avoid movements.

ITEM	DESCRIPTION	IMAGE	SKU	# PZ
1	Conector Allen Bolt 1/4 x 70 mm 25 threads		NL-ABOLT-001	3
2	Allen Wrench 5/32		NL-HWRNCH-001	1
3	Allen Bolt 5/16"x2"25 threads		NL-ABOLT-001	8
4	Allen Wrench 1/4"		NL-ABOLT-001	1
5	WASHER 5/16"		NL-WASH-001	8

This product is manufactured by



For ROOMS TO GO

**ASSEMBLY INSTRUCTIONS**  
AUSTIN DESK: IFSC 3582 DRAWER DESK  
SKU: 26035825