





ASSEMBLY INSTRUCTIONS

FNR850 Sonoma four door sideboard






Manufactured by (CPLX) for RTG stock order

SKU#: 26085008


PARTS

S.NO.	DESCRIPTION	QTY.
A	 WOODEN CASE	1 PC
B	 WOODEN LEG	2 PC
C	 WOODEN HANDLE	4 PC
D	 WOODEN LEG PATTI	1 PC

HARDWARE


S.NO.	DESCRIPTION	QTY.
1	 ALLEN BOLT (6x25mm)	8 PC
2	 ALLEN BOLT (8x30mm)	9 PC
3	 WASHER (8x25mm)	9 PC
4	 ALLEN KEY (4mm)	1 PC
5	 ALLEN KEY (5mm)	1 PC

STEP-1

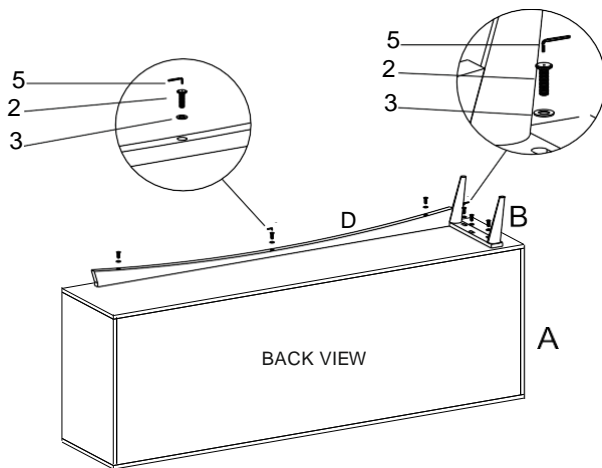


Do Not Completely Tighten The Allen Bolts Till Installation Complete.

STEP-2

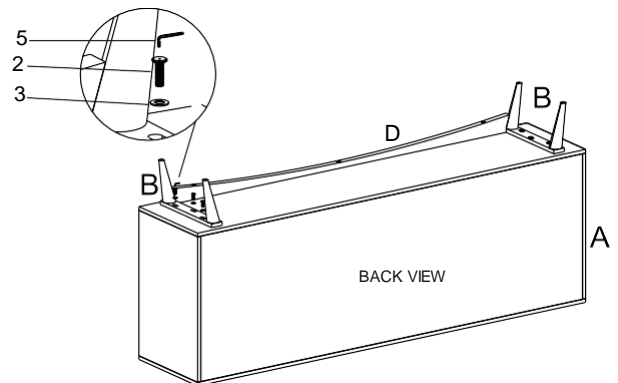


Now Can Tighten All The Allen Bolts.

STEP-3

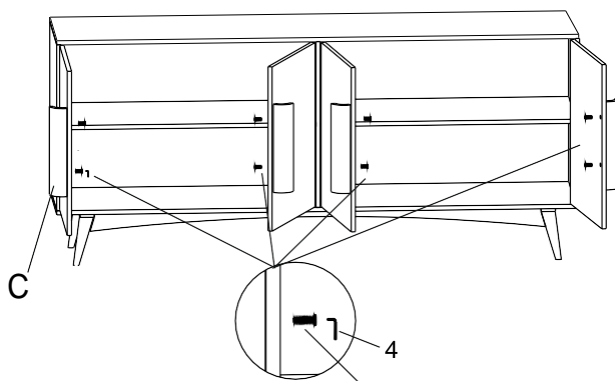

FINAL PRODUCT

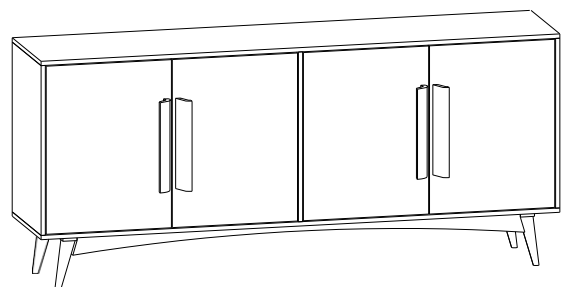

Adjust The Leveler According To The Balance



ASSEMBLY INSTRUCTIONS

FNR850 Sonoma four door sideboard


Manufactured by (CPLX) for RTG stock order

SKU#: 26085008

ANTI TIP HARDWARE

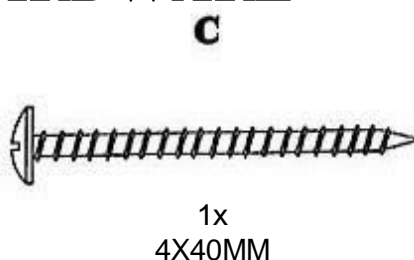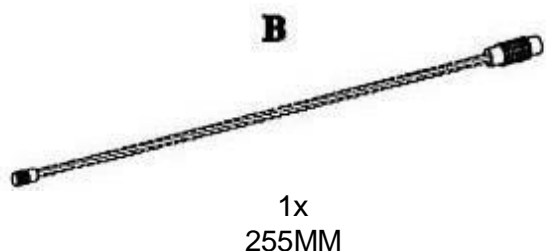

STEP 1

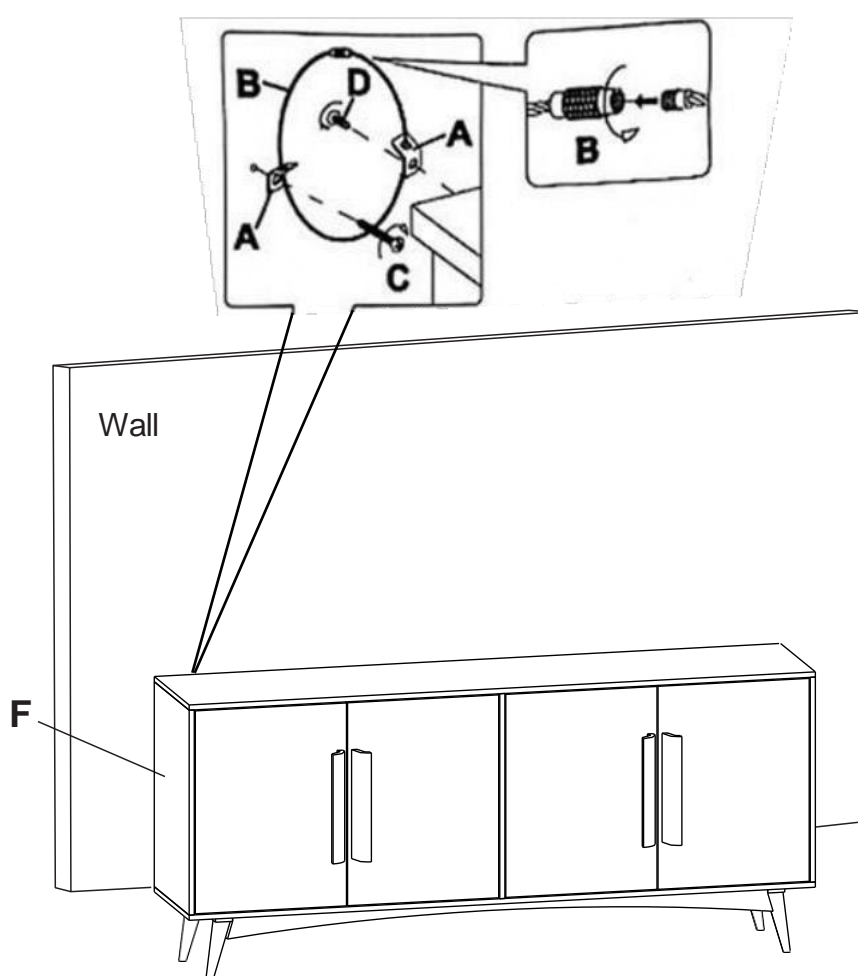

The Instruction on the bottom is:

To prevent the sideboard (F) from tipping, mount one side of the Tipping Restraint to the backside of the sideboard (F) and the other side to the wall.