

# Assembly Instructions

HMIS F048/F049-03 CREDENZA

SKU #: 26704800/26304927


\*\*\*Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

Code	PARTS LIST		
1	Table Top		1Pc
2	Strecher		1Pc
3	Right Leg		1Pc
4	Left Leg		1pc

Step	Code	Hardware List		
2-3	A	Allen Bolt - Ø1/4x20x19mm		16Pcs
		Flat washer - Ø1/4x16x1.5mm		16Pcs
		Lock washer - Ø1/4"		16Pcs
2-3	B	Allen Key - 4mm		1Pc
4	C	The Furniture Tipping Restraint		1Set

TOOLS REQUIRED (NOT PROVIDED)	
Description	Sketch
Phillips screwdriver	

Step 1: Assembly the legs(3,4) with the Strecher(2) and The table top(1).  
 Step 2: Then locate Bolts (A) into drilled holes on the legs with on the strecher(3) and tighten them through by Allen Key (B) provided.  
 Do not fully tighten all bolts until the assembly is completed.

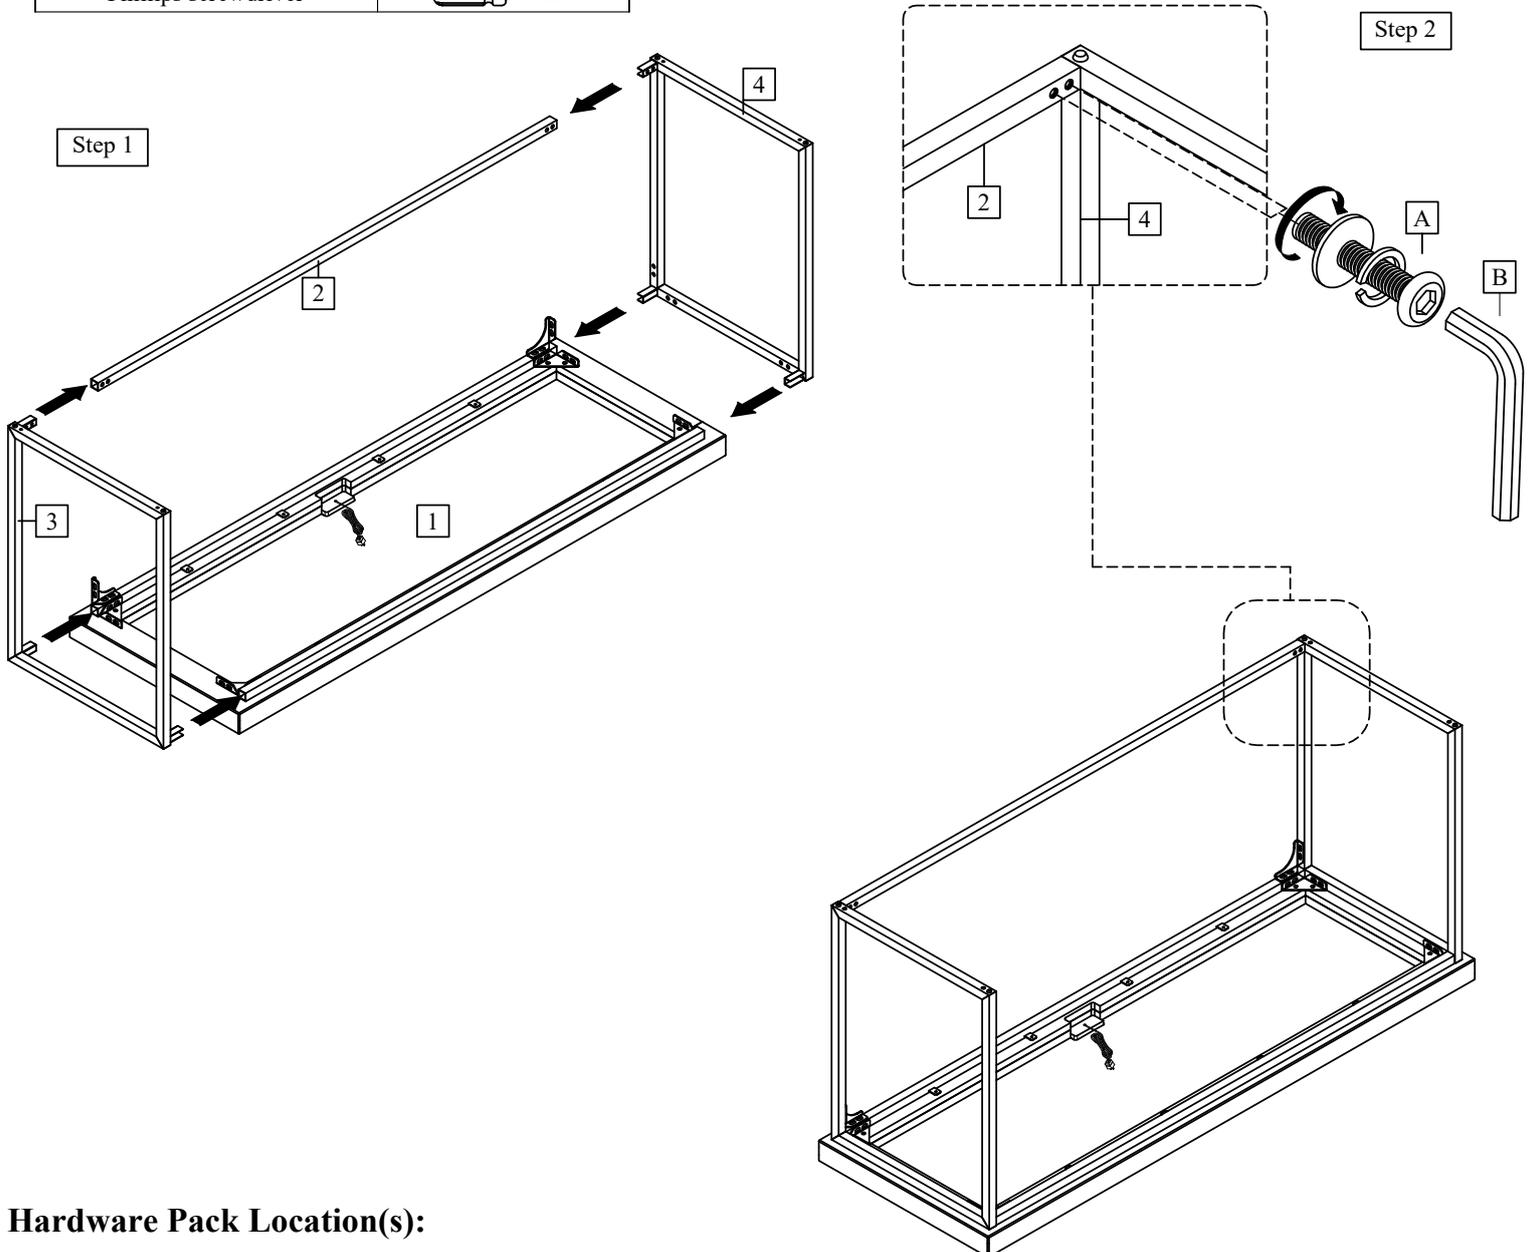

Hardware Pack Location(s):

HMIS F048/F049-03 CREDENZA, SKU #: 26704800/26304927

This product is manufactured by HMIS for

**ROOMS TO GO** ▶

# Assembly Instructions

HMIS F048/F049-03 CREDENZA

SKU #: 26704800/26304927


\*\*\*Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

Step 3 (Fig A+B): Then locate Bolts (A) into drilled holes on the legs with on the table top(1) and tighten them through by Allen Key (B) provided.

Do not fully tighten all bolts until the assembly is completed.

Step 4: Turn the table to upright position carefully and Tighten all the bolts. Assembly completed.

RECOMMENDED: Install the anti-tipping kit (C).

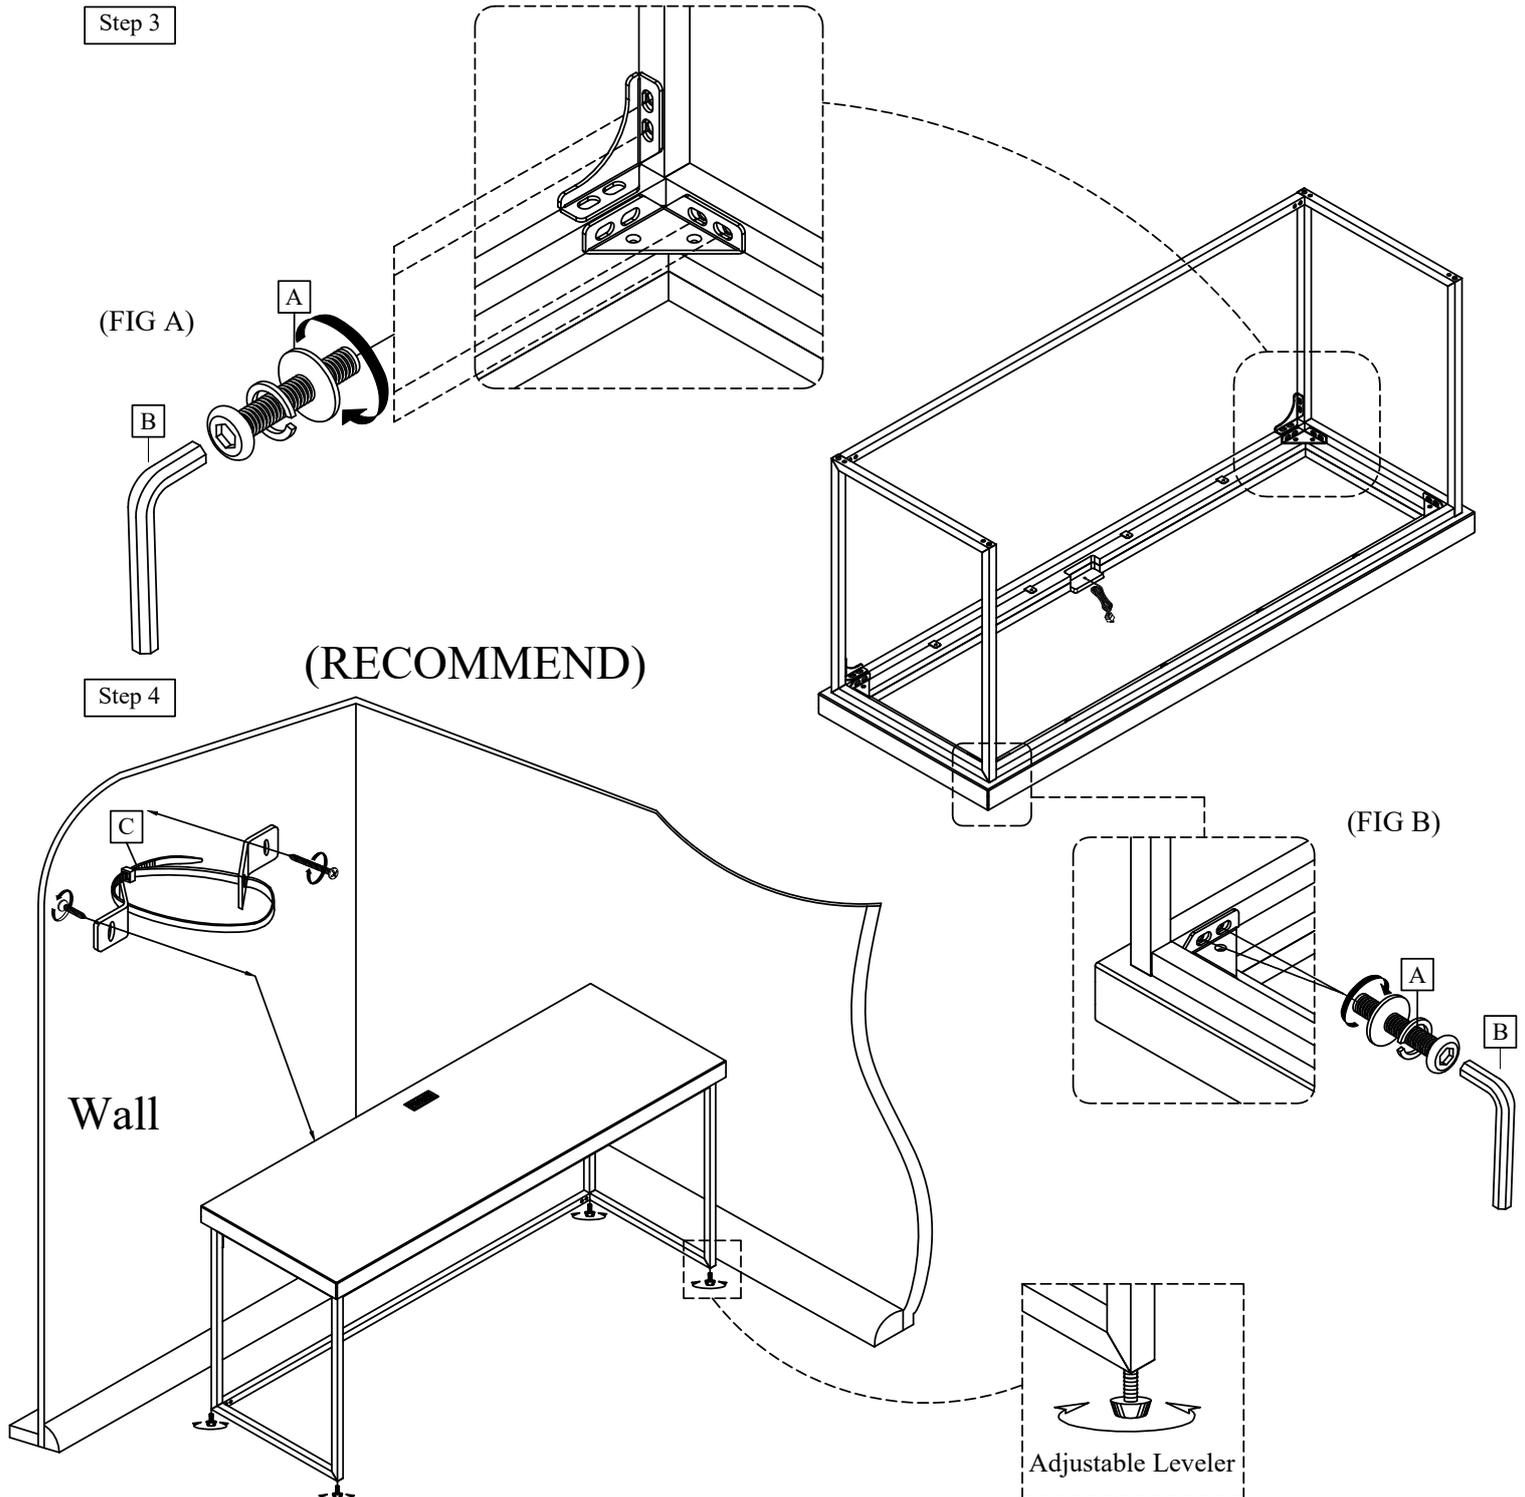

This product is manufactured by HMIS for

**ROOMS TO GO** ▶

MADE IN VIETNAM

2 OF 2