## **Assembly Instructions**

HMIS F1823-03 CREDENZA SKU #:26718239


\*\*\*Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

	I				
Code	PARTS LIST				
1	Table Top		1Pc		
2	Strecher		1Pc		
3	Right Leg		1Pc		
4	Left Leg		1pc		

3	Kigiii Leg		V	IPC		Turmente Tipping Residen
4	Left Leg			1pc		ep 1: Assembly the legs(3,4) we p 2: Then locate Bolts (A) into
						1
TOOLS REQUIRED (NOT PROVIDED)					recher(3) and tighten them thrown not fully tighten all bolts untiled.	
Description			Sketcl	h	עם ן	o not fully tighten all boits unit

Step	Code	Hardware List				
		Allen Bolt - Ø1/4x20x19mm		16Pcs		
2-3	Α	Flat washer - Ø1/4x16x1.5mm		16Pcs		
		Lock washer - Ø1/4"		16Pcs		
2-3	В	Allen Key - 4mm		1Pc		
Furniture Tipping Restraint						

ith the Strecher(2) and The table top(1). o drilled holes on the legs with on the ugh by Allen Key (B) provided. until the assembly is completed.

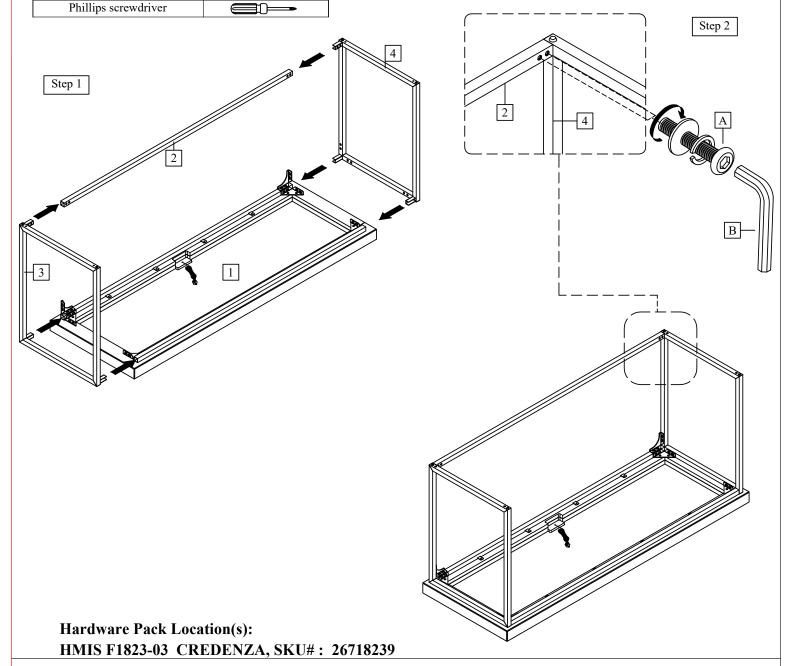

This product is manufactured by HMIS for

1 OF 2 MADE IN VIETNAM

## **Assembly Instructions**


HMIS F1823-03 CREDENZA SKU #:26718239


\*\*\*Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

> Step 3 (Fig A+B): Then locate Bolts (A) into drilled holes on the legs with on the table top(1) and tighten them through by Allen Key (B) provided.

Do not fully tighten all bolts until the assembly is completed.

Step 4: Turn the table to upright position carefully and Tighten all the bolts. Assembly completed.



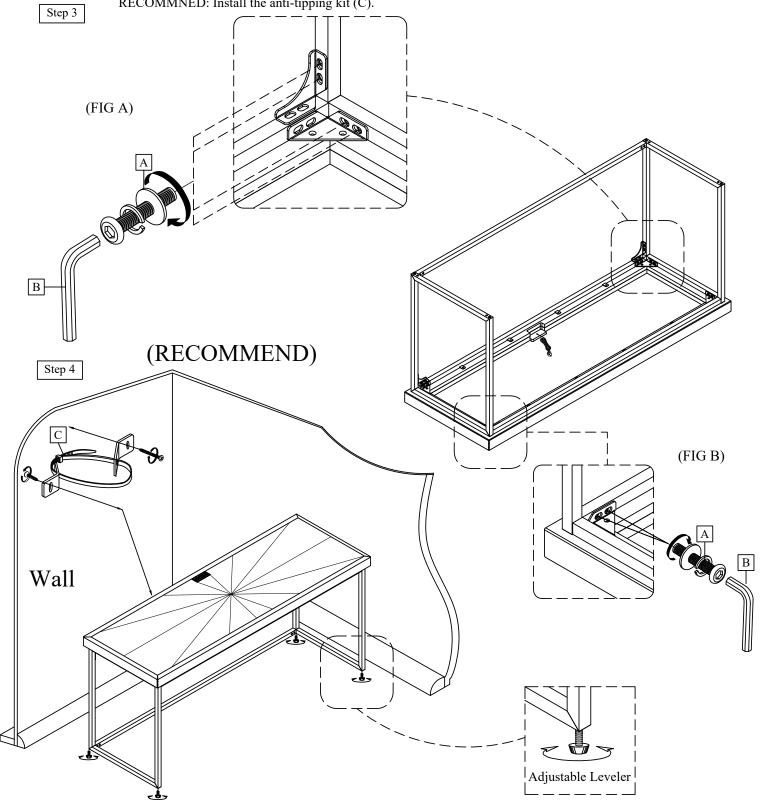

This product is manufactured by HMIS for

2 OF 2 MADE IN VIETNAM