Assembly Instructions

HMIS F048/F049-05 CASTER ROLLING FILE

SKU # 26904804/26504921

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

Code	PARTS LIST		
1	Cabinet		1Pc
2	Metal Rods		2Pcs


Never open more than one drawer at a time.

Step 1: Pull the bottom drawer out carefully.


Step 2 : Place metal rods (2) in groovers .


Step 3 : Put the bottom drawer in carefully.


RECOMMNED: Install the anti-tipping kit(A).




TOOLS REQUIRED (NOT PROVIDED)			
Description	Sketch		
Phillips screwdriver			

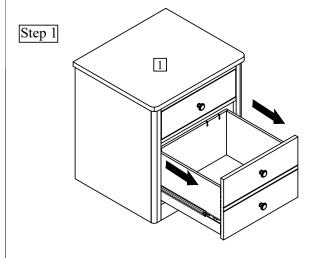

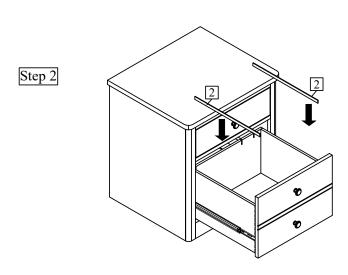

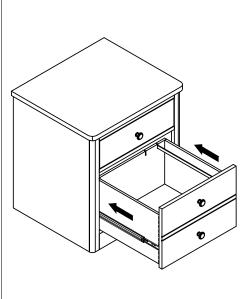

Step 3

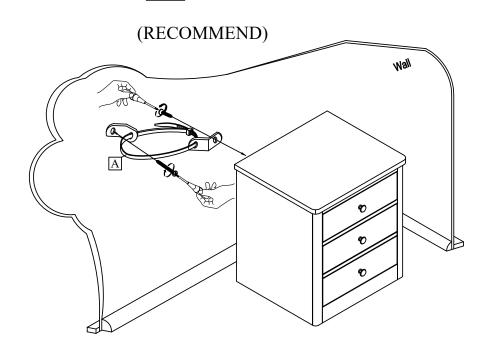

Step 4

This product is manufactured by HMIS for

ROOMS TO GO

MADE IN VIETNAM 1 OF 1