
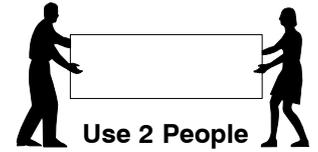


0070 Full Bed

Assembly Instructions

WI-0521


1 Assembled View

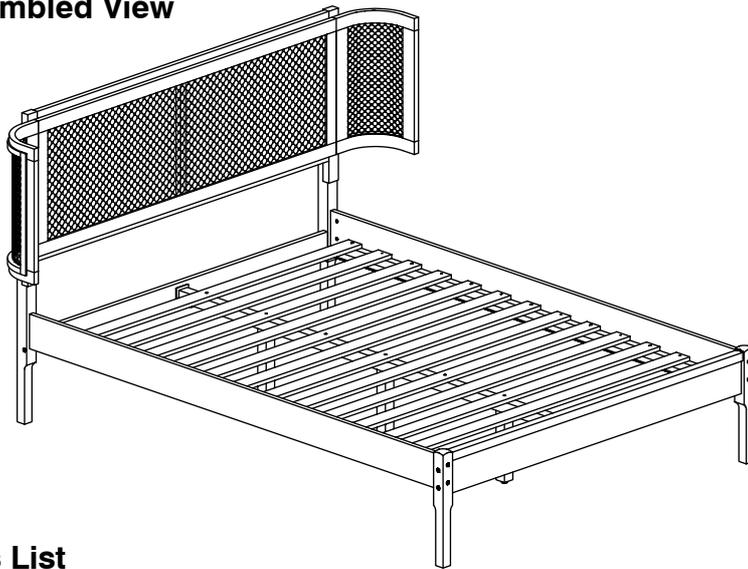


Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List


Parts in Box A:

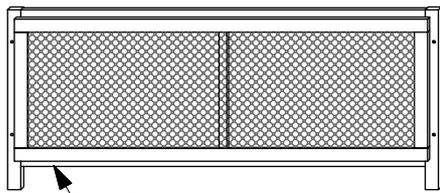


A Headboard Panel x 1



B Headboard Support x 1




C Headboard Post (Left Hand) x 1




D Headboard Post (Right Hand) x 1

Parts in Box B:

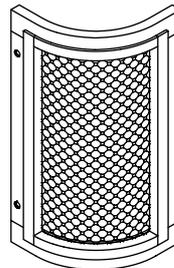

E Headboard Side Panel (Left Hand) x 1

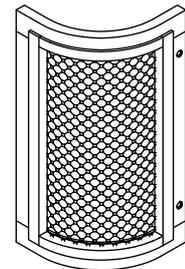

F Headboard Side Panel (Right Hand) x 1




K Footboard Post (Left Hand) x 1



L Footboard Post (Right Hand) x 1

Parts in Box C:



G Footboard Panel x 1




H Side Rail x 2



J Long Support x 1



M Support Leg x 3

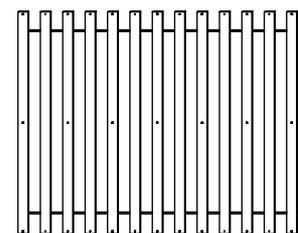

N Set of Bed Slats x 1

0070 Full Bed


Assembly Instructions

WI-0521


3 Hardware List



1 M4 Allen Key
x 1

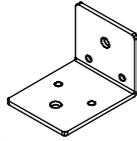


2 Center Rail
Bracket x 2



3 Adjustable
Foot x 3



4 Barrel Nut
x 17



5 Wood Screw
(M4 x 32mm)
x 12



6 Wood Dowel
(10 x 40mm)
x 8



7 Spring
Washer
x 4



8 Flat
Washer
x 4



9 M6 x
15mm JCB
x 4



10 M6 x
40mm JCB
x 26




11 M6 x 90mm JCB
x 14




12 M6 x 100mm JCB
x 3

4 Fix the Adjustable foot to the bottom of the Support Leg (M).

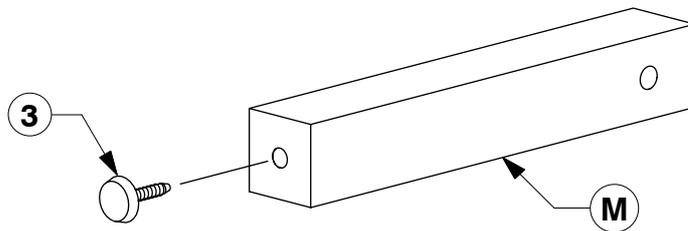

x3

5 Fit the Center Rail Bracket to the Footboard Panel (G).

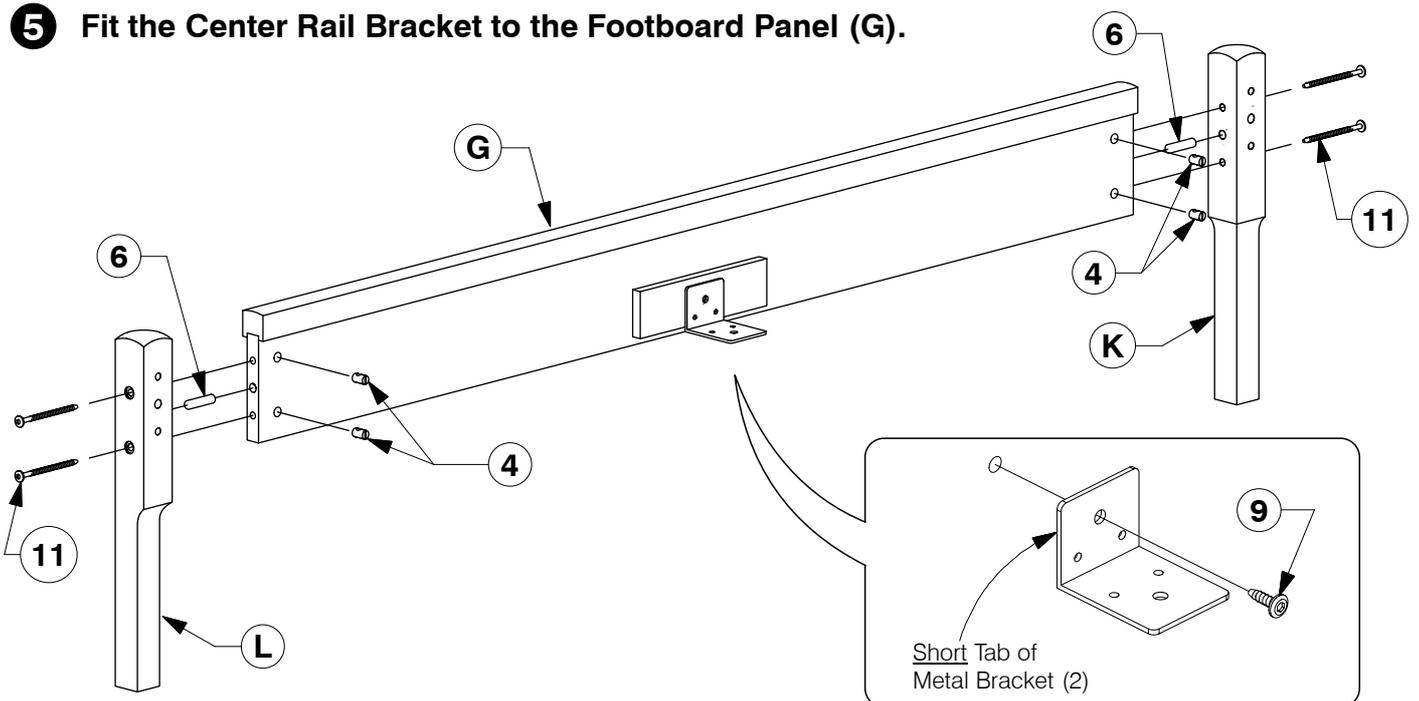


0070 Full Bed


Assembly Instructions

WI-0521

- 6** Fit the Center Rail Bracket to the Headboard Support (B).

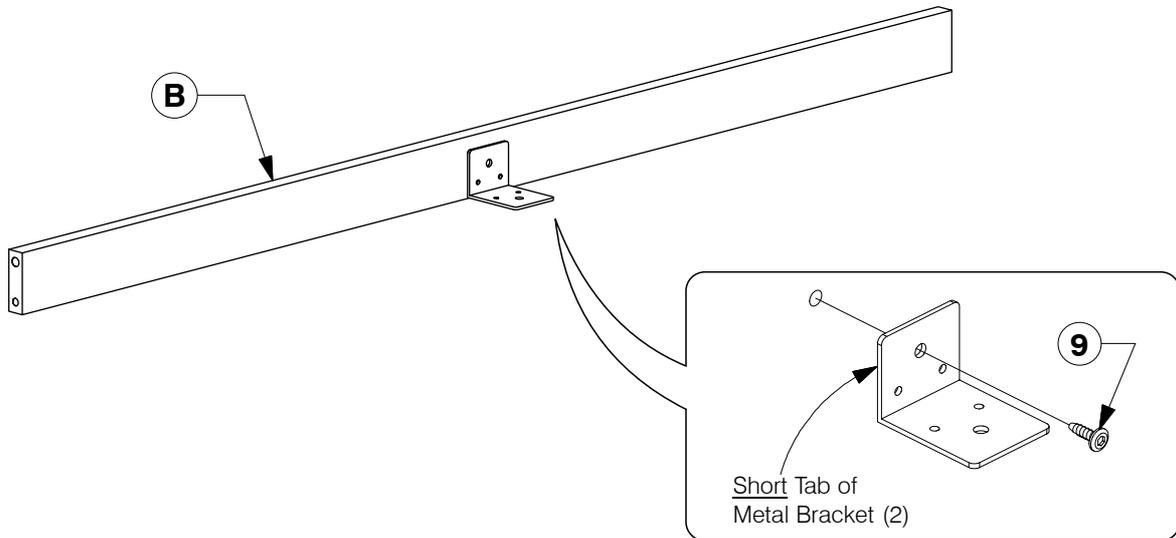

- 7** Assemble the Headboard Support (B) to the Headboard Post (C & D).

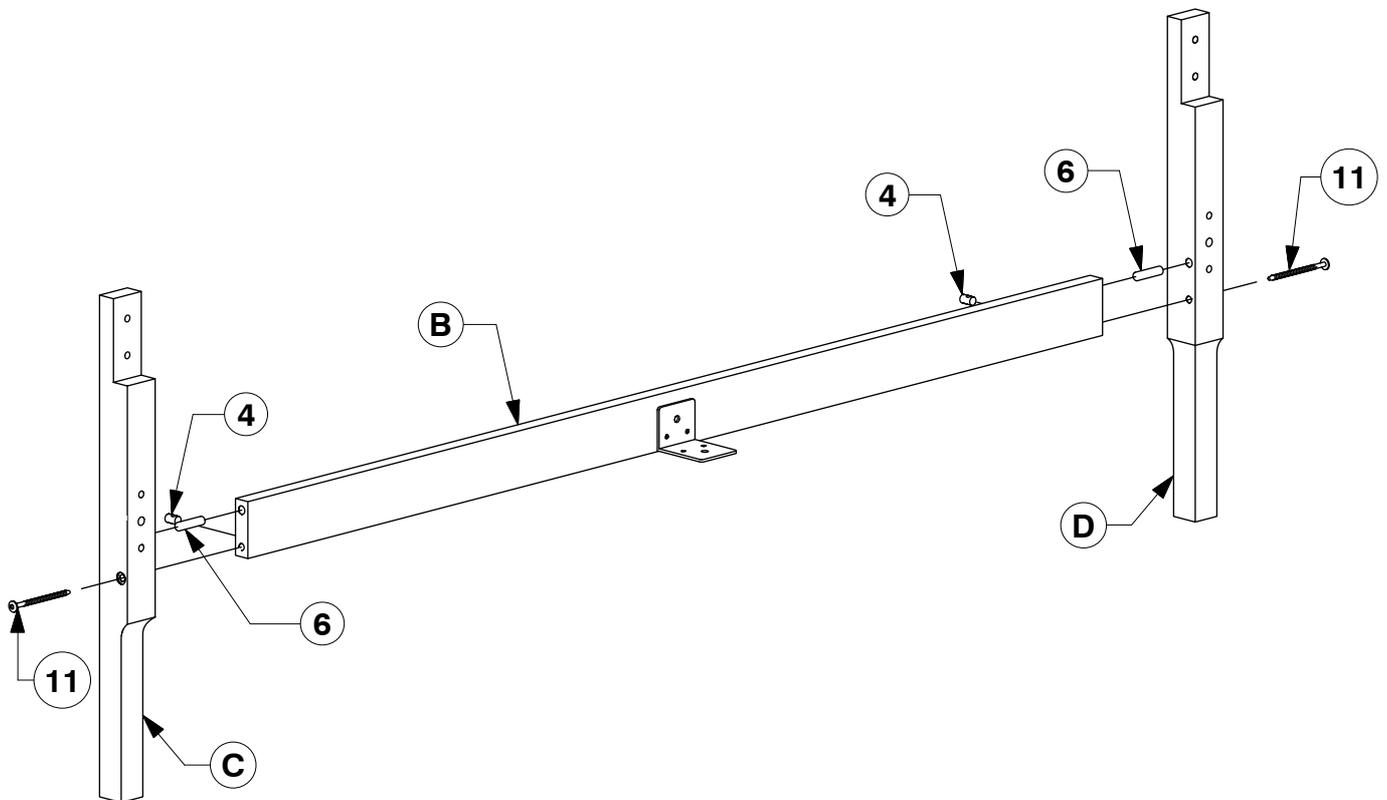


0070 Full Bed


Assembly Instructions

WI-0521

- 8** Assemble the Headboard Panel (A) to the Headboard Post (C & D).

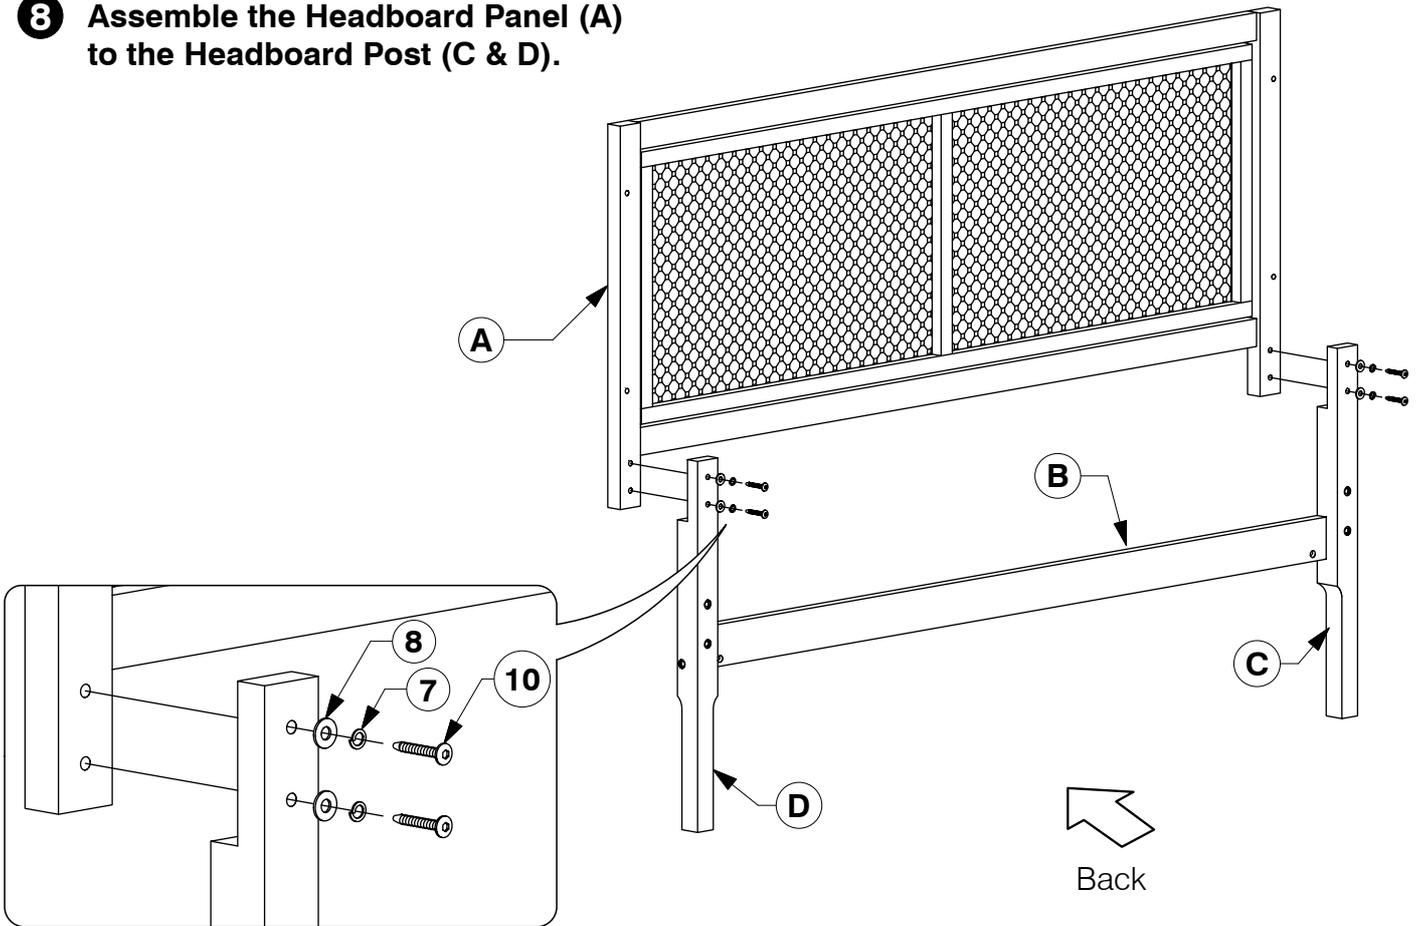

- 9** Fit the Headboard Side Panel (E & F) to the Headboard Panel (A).

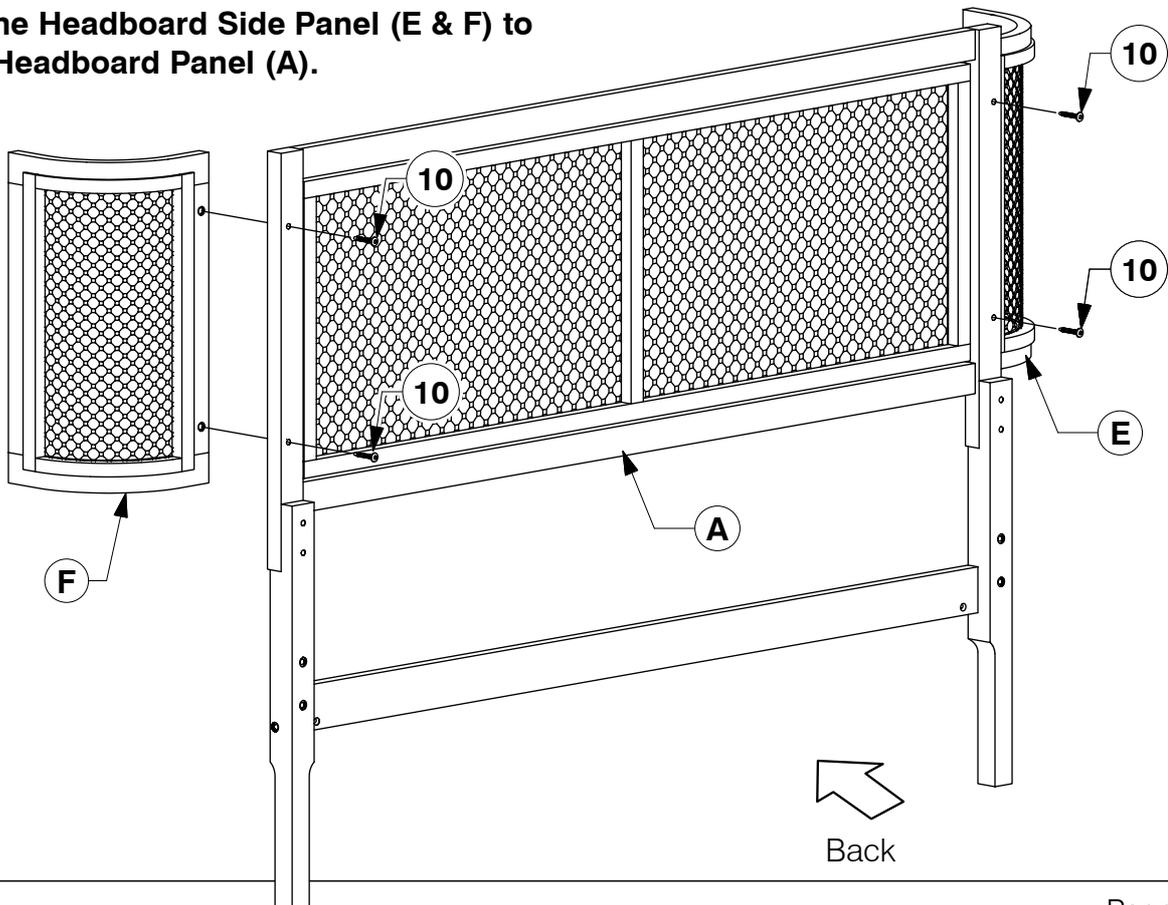


0070 Full Bed


Assembly Instructions

WI-0521

- 10** Assemble the Side Rail (H) to the Headboard & Footboard.

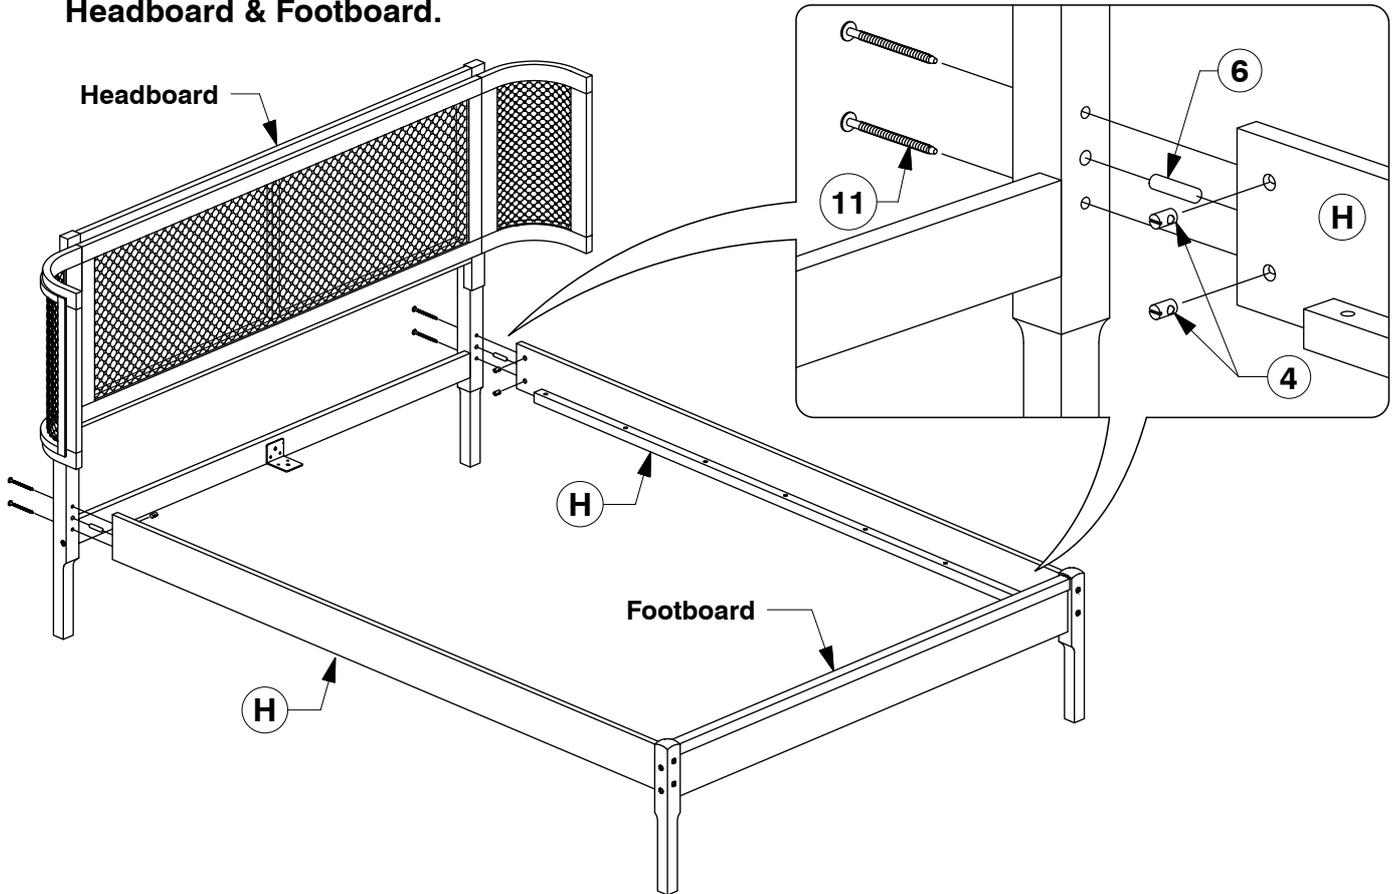

- 11** Bolt the Long Support (J) to the Center Rail Brackets on the Headboard & Footboard.

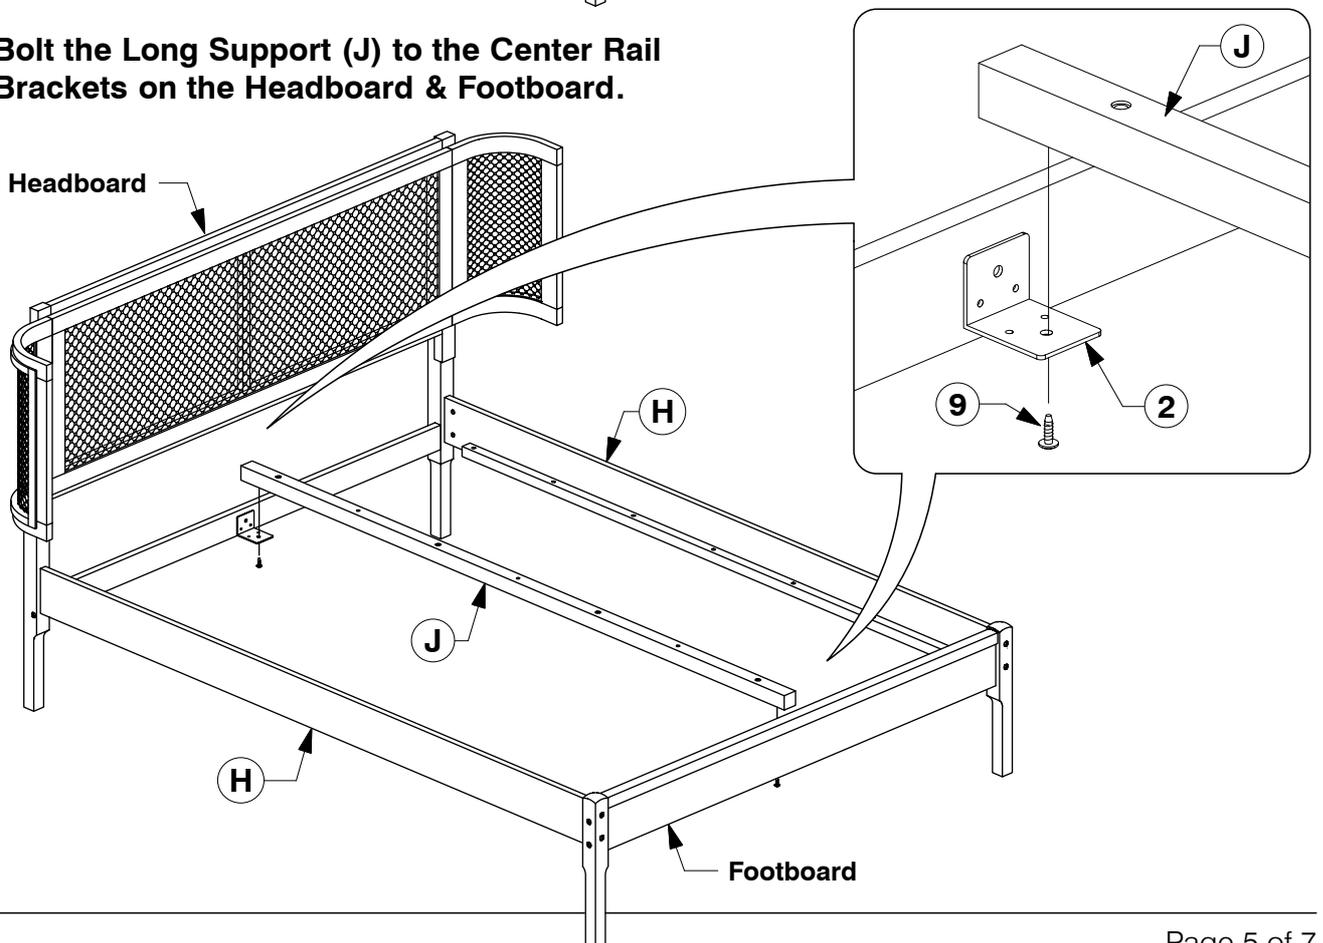


0070 Full Bed


Assembly Instructions

WI-0521

- 12** Fit the first 3 Slats and assemble the Support Leg (M) to the Bed Slat (N). Bolt & screw the Bed Slats (N) to the Side Rail (H) & Long Support (J).

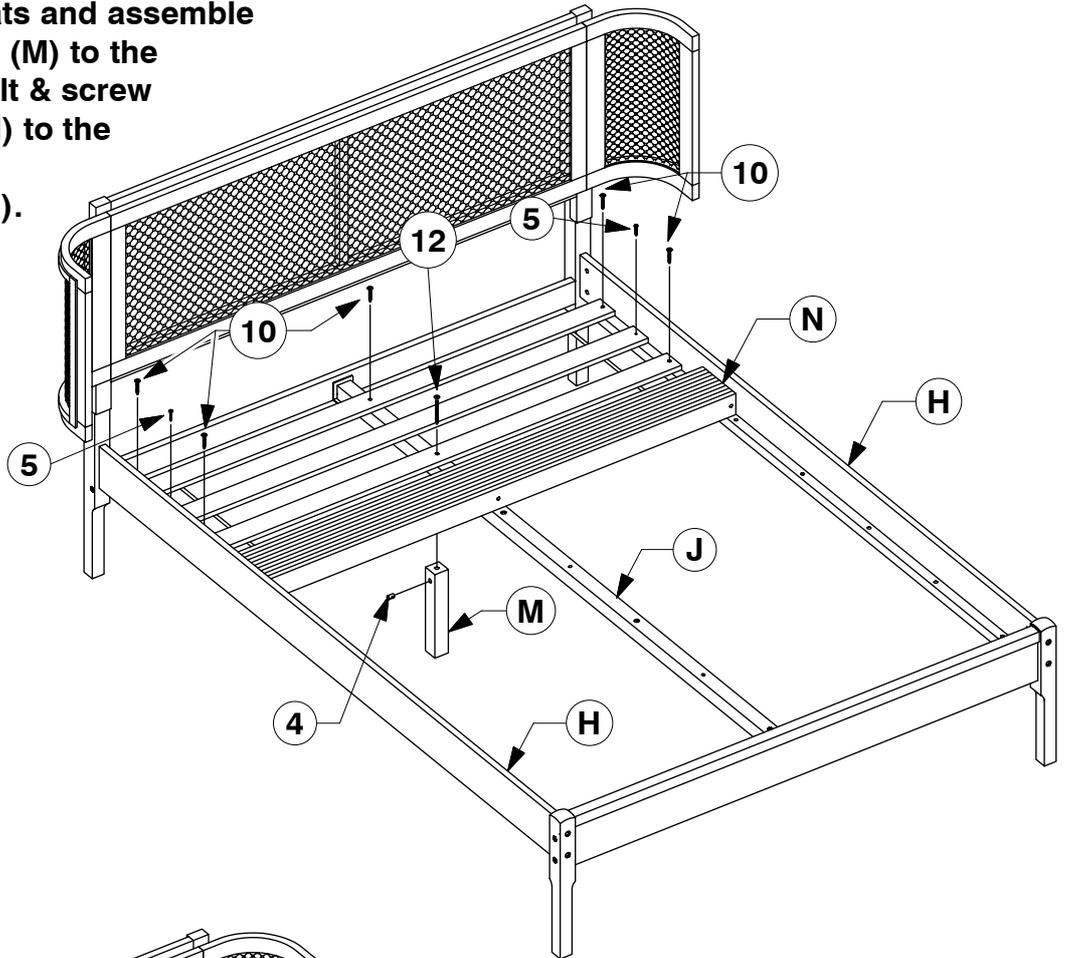

- 13** Fit the other Slats out and assemble the Support Leg (M) to the Bed Slat (N). Bolt & screw the Bed Slats (N) to the Side Rail (H) & Long Support (J).

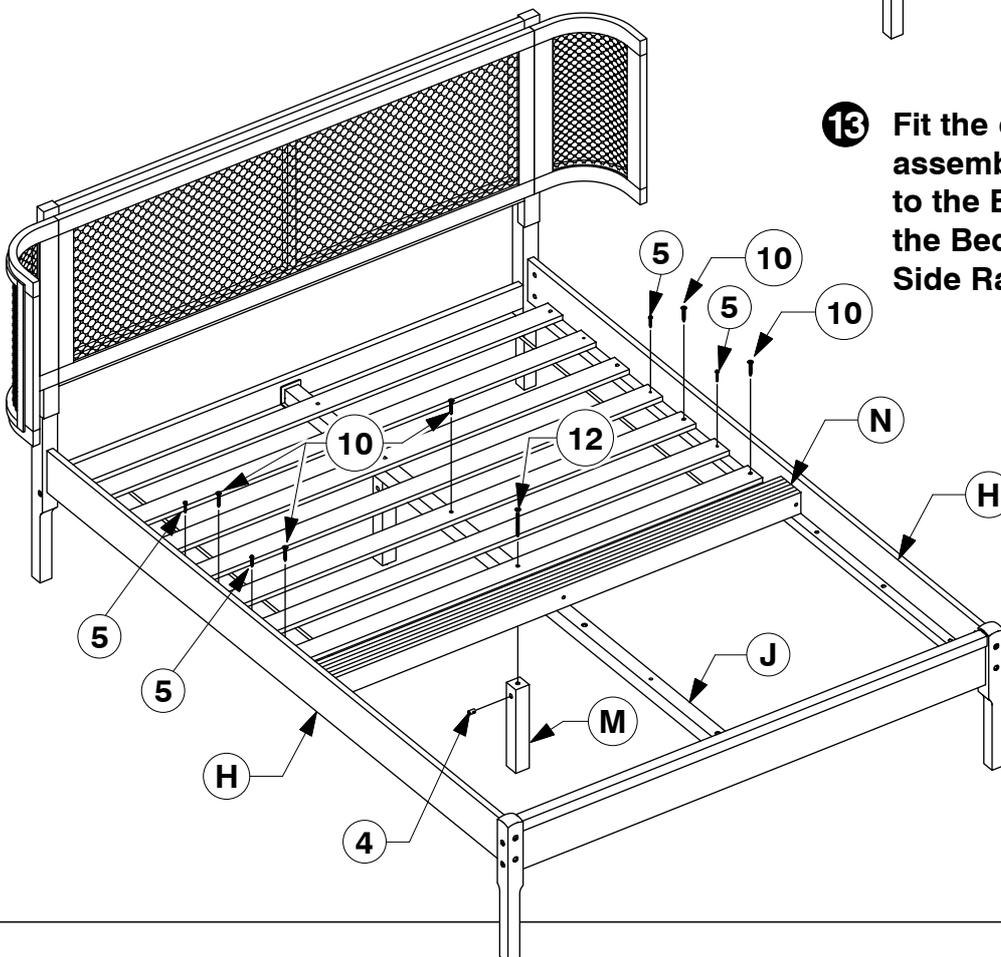


0070 Full Bed

Assembly Instructions

WI-0521

- 14** Fit the other Slats out and assemble the Support Leg (M) to the Bed Slat (N). Bolt & screw the Bed Slats (N) to the Side Rail (H) & Long Support (J).

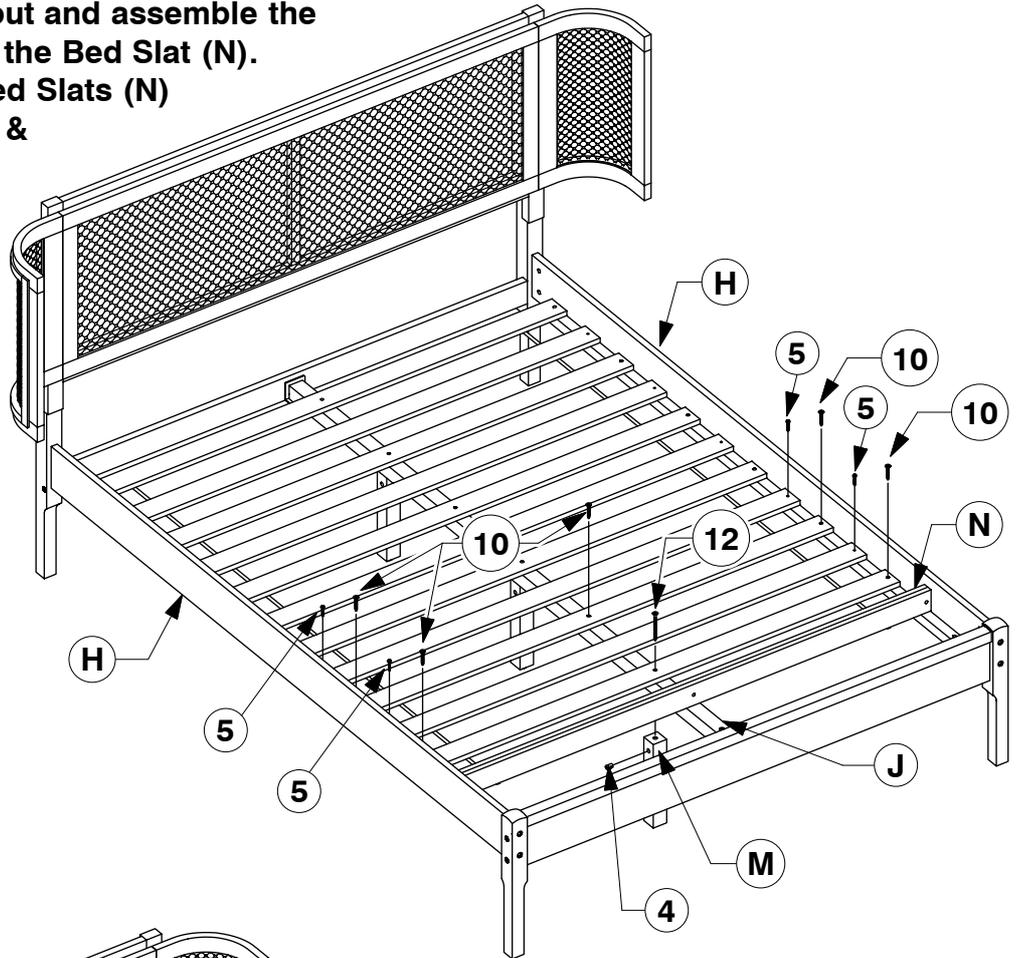

- 15** Bolt & screw the remaining Bed Slats (N) to the Side Rail (H).

