



SKYLINE
FURNITURE
MFG.

410 HEADBOARD

ASSEMBLY INSTRUCTIONS FOR 410, 100, & 100NB SERIES

HEADBOARD COMPONENTS



(1) Headboard*



(2) wings*



(2) metal legs

*images might vary from actual product

HEADBOARD & SIDE RAILS HARDWARE



(8) 2" x 5/16" bolts



(4) 5/8" x 5/16" bolts



(4) 1" x 1/4" bolts

You will need:

- phillips screwdriver
- flat head screwdriver
- pliers



(20) 1 1/4" washers



(4) 1/4" nuts

*Open all hardware packets in both packages before starting assembly.

IF YOU HAVE ANY QUESTIONS, PLEASE CALL US AT 1.800.542.7553

LIMITED WARRANTY

SKYLINE FURNITURE INC. guarantees its upholstered furniture against defects in construction for a period of one (1) year. When a structural defect is brought to our attention, we will repair or replace it at our option at no charge to the customer (includes parts and labor, not transportation costs). Fabric wearability for upholstered furniture is not covered by the warranty. Vacuum for regular cleaning.

PLEASE DISPOSE OF PLASTIC BAG (S) AND CARTON (S) RESPONSIBLY.

LIMITE DE GARANTIA

SKYLINE FURNITURE INC. garantiza sus muebles tapizados contra defectos en construcción por un periodo de un (1) año. Cuando un problema de estructura es traído a nuestra atención, nosotros repararemos o remplazaremos sin ningun cargo a nuestro cliente (incluye partes y trabajo, no costo en transportacion). Descoloramiento del material de muebles tapizados no es cubierto por la garantía. Regularmente puede aspirar.

POR FAVOR TIRAR BOLSA (S) Y CAJA (S) RESPONSABLEMENTE.


GARANTIE LIMITÉE

SKYLINE FURNITURE INC. garantit ses meubles rembourrés contre les défauts de construction pendant une période d'un (1) an. Lorsqu'un vice de construction nous est signalé, nous réparons ou remplaçons le meuble, selon notre choix, sans frais pour le client (incluant les pièces et la main-d'oeuvre, mais excluant les frais de transport). La durabilité du tissu des meubles rembourrés n'est pas couverte par la garantie. Nettoyer régulièrement avec un aspirateur. VEUILLEZ JETER LE OU LES SAC(S) EN PLASTIQUE ET BOÎTE(S) DE FAÇON RESPONSABLE.



SKYLINE
FURNITURE
MFG.


STEP 1

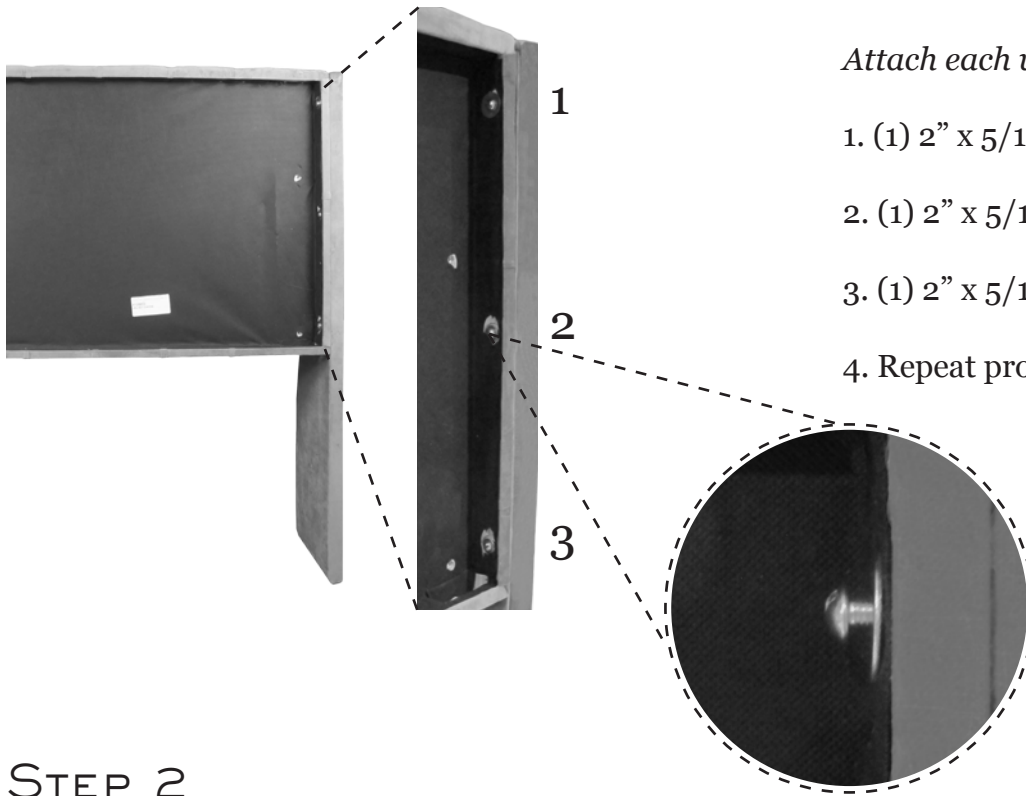

Attach each wing to headboard using:

1. (1) 2" x 5/16" bolt and (1) 1 1/4" washer
2. (1) 2" x 5/16" bolts and (1) 1 1/4" washer
3. (1) 2" x 5/16" bolts and (1) 1 1/4" washer
4. Repeat process for the other wing.

STEP 2

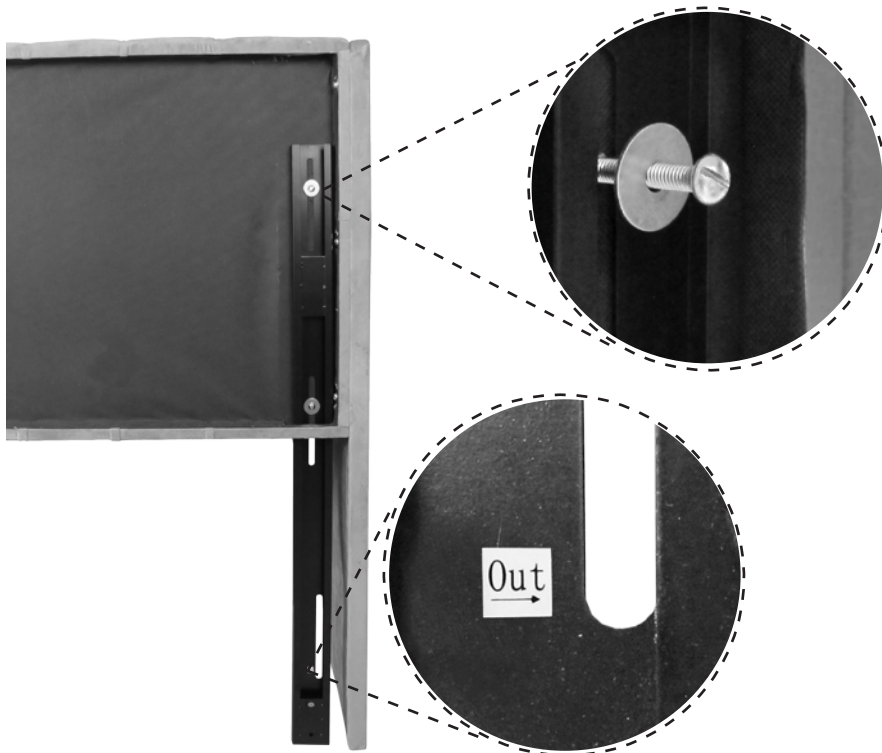

Insert metal legs through the holes in the headboard. Make sure that you place the correct leg facing "Out."

Attach each metal leg to the headboard using (2) 5/8" x 5/16" bolts and (2) 1 1/4" washers for each leg.