


ovls

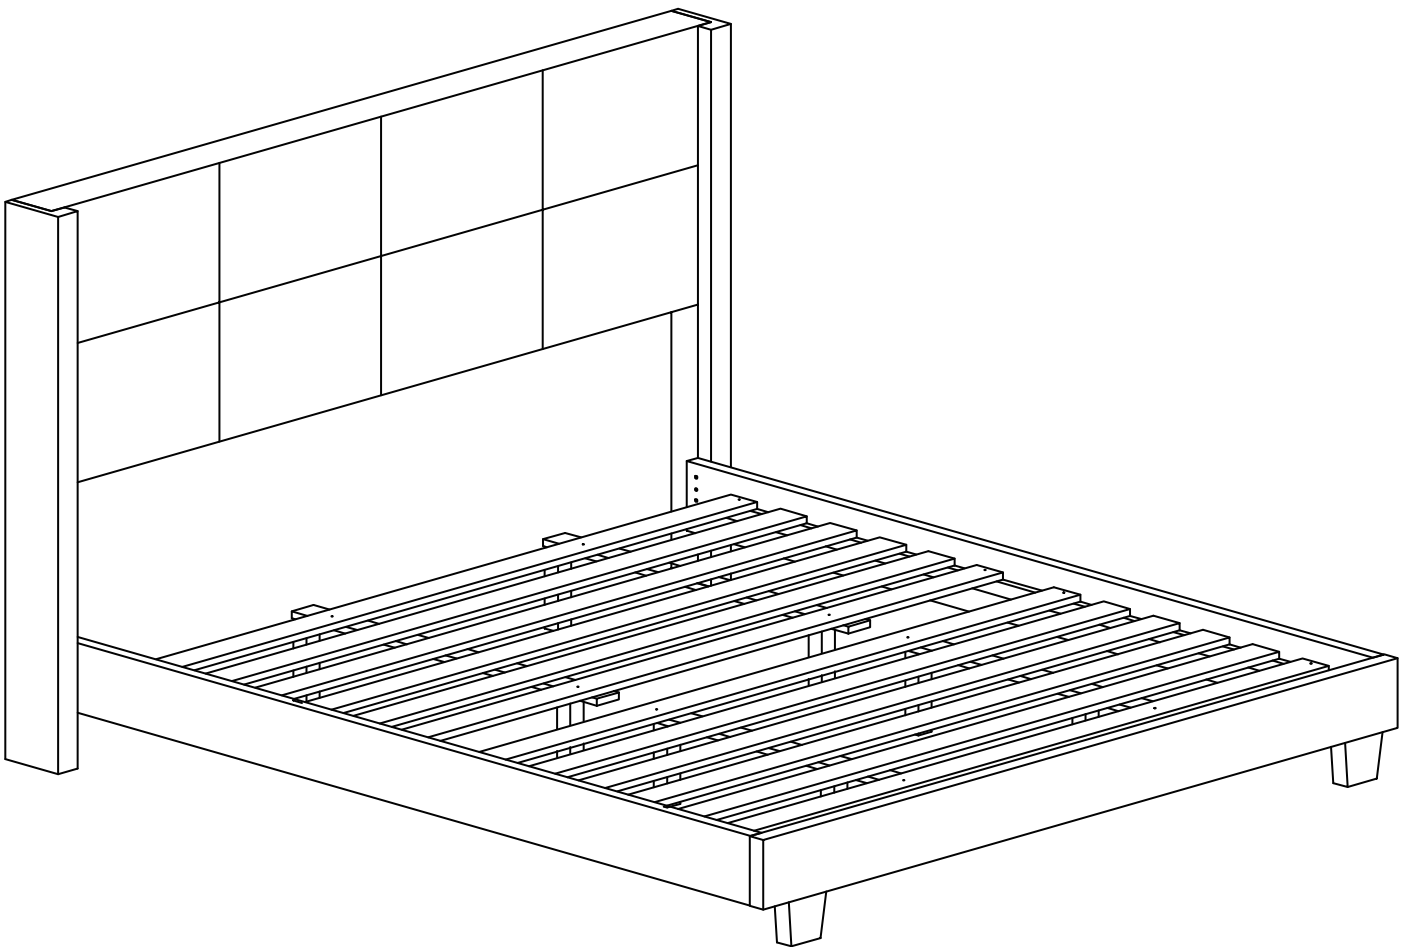


AL32015KG













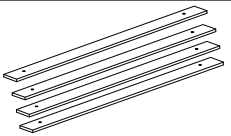

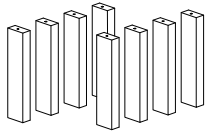

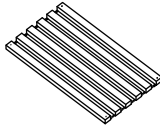


PLEASE DO NOT RETURN TO STORE!


Email our support team: help@ovis.co

**Bed Parts are Inside the Headboard Panels. Open
Velcro Back Panels to Find parts for Assembly.**

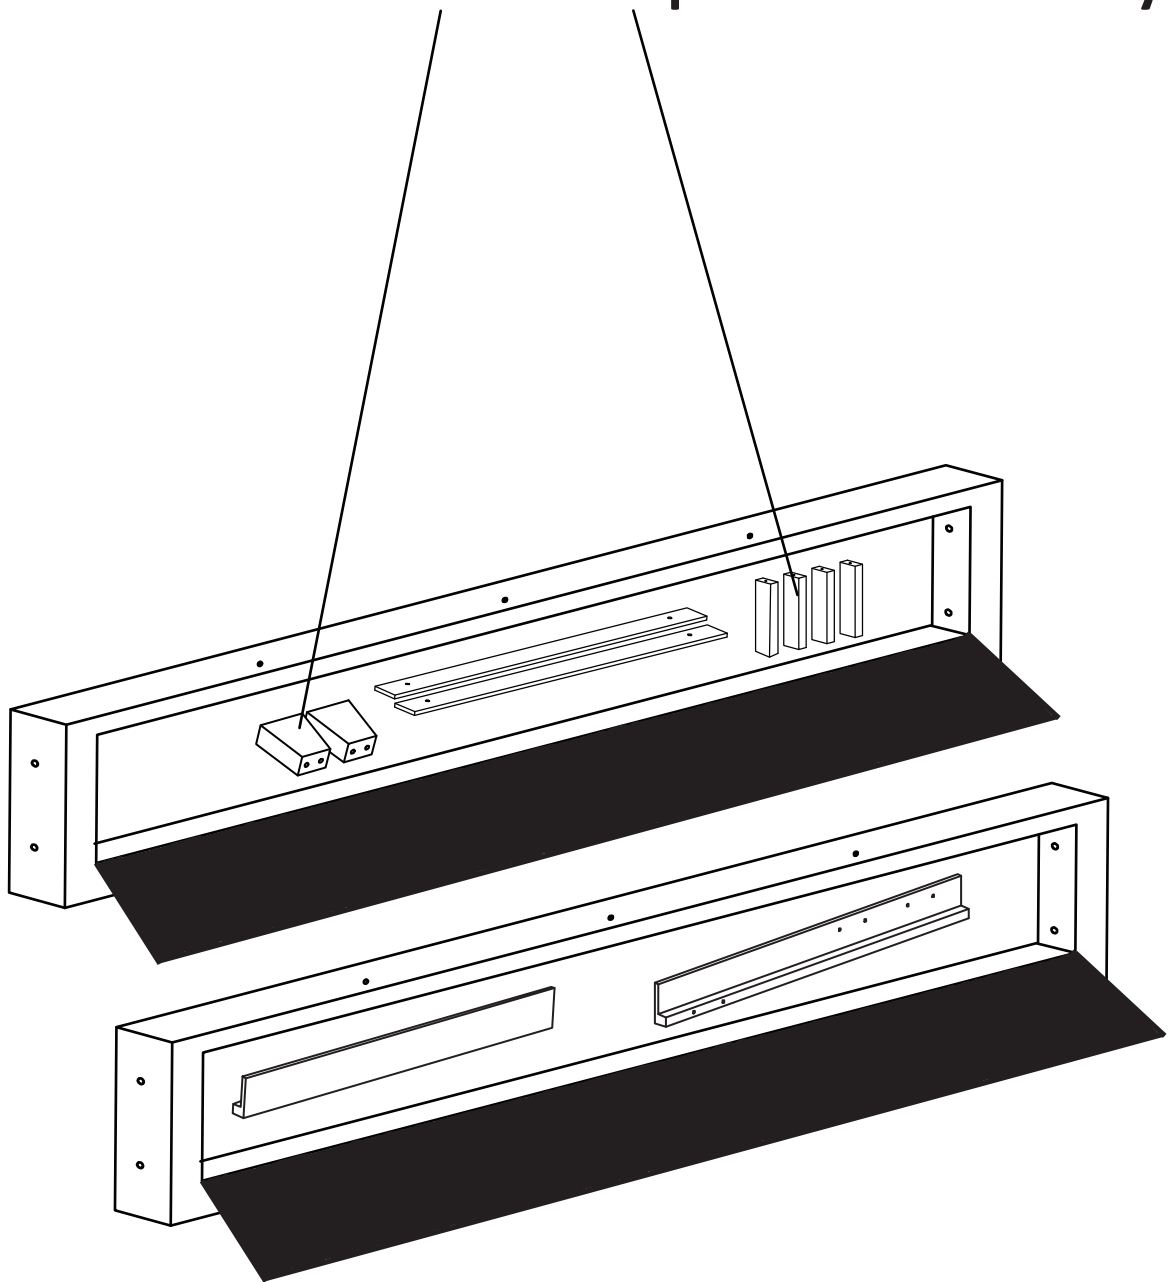


PARTS AND HARDWARE / PIEZAS Y HARDWARE


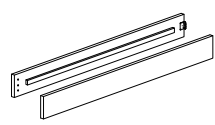
No.	SKETCH ESQUEMA	DESCRIPTION La Description	QTY CANTIDAD	No.	SKETCH ESQUEMA	DESCRIPTION La Description	QTY CANTIDAD
A		Headboard Panel Panel De La Cabecera	1	K		Allen Key M5x70mm Llave Allen M5x70mm	1
B		Headboard Panel Panel De La Cabecera	1	L		Allen Key M4x65mm Llave Allen M4x65mm	1
C		Headboard Legs Patas De Cabecera	1	M		Allen bolt M6x30mm Perno Allen M6x30mm	11
D		Headboard Legs Patas De Cabecera	1	N		Allen bolt M6x45mm Perno Allen M6x45mm	8
E		Side Rail Largueros Lateral	2	O		Allen bolt M6x50mm Perno Allen M6x50mm	4
F		Footboard Pie De Cama	1	P		Allen bolt M6x65mm Perno Allen M6x65mm	6
G		Center Slats Listones	4	Q		Flat washer M6 Arandela plana M6	17
H		Slat Support Legs Tas De Apoyo De Listones	8	R		Screw M4x32mm Tornillo M4x32mm	8
I		Slat Roll Rollor De Listones	2	U		Adjustable Leveler Nivelador ajustable	8
J		Plastic Leg Patas Del Pie De Cama	2			help@ovis.co	





PHILIPS SCREWDRIVER
REQUIRED
(NOT INCLUDED)


Open Velcro Back Panels to Remove All Parts for Assembly.

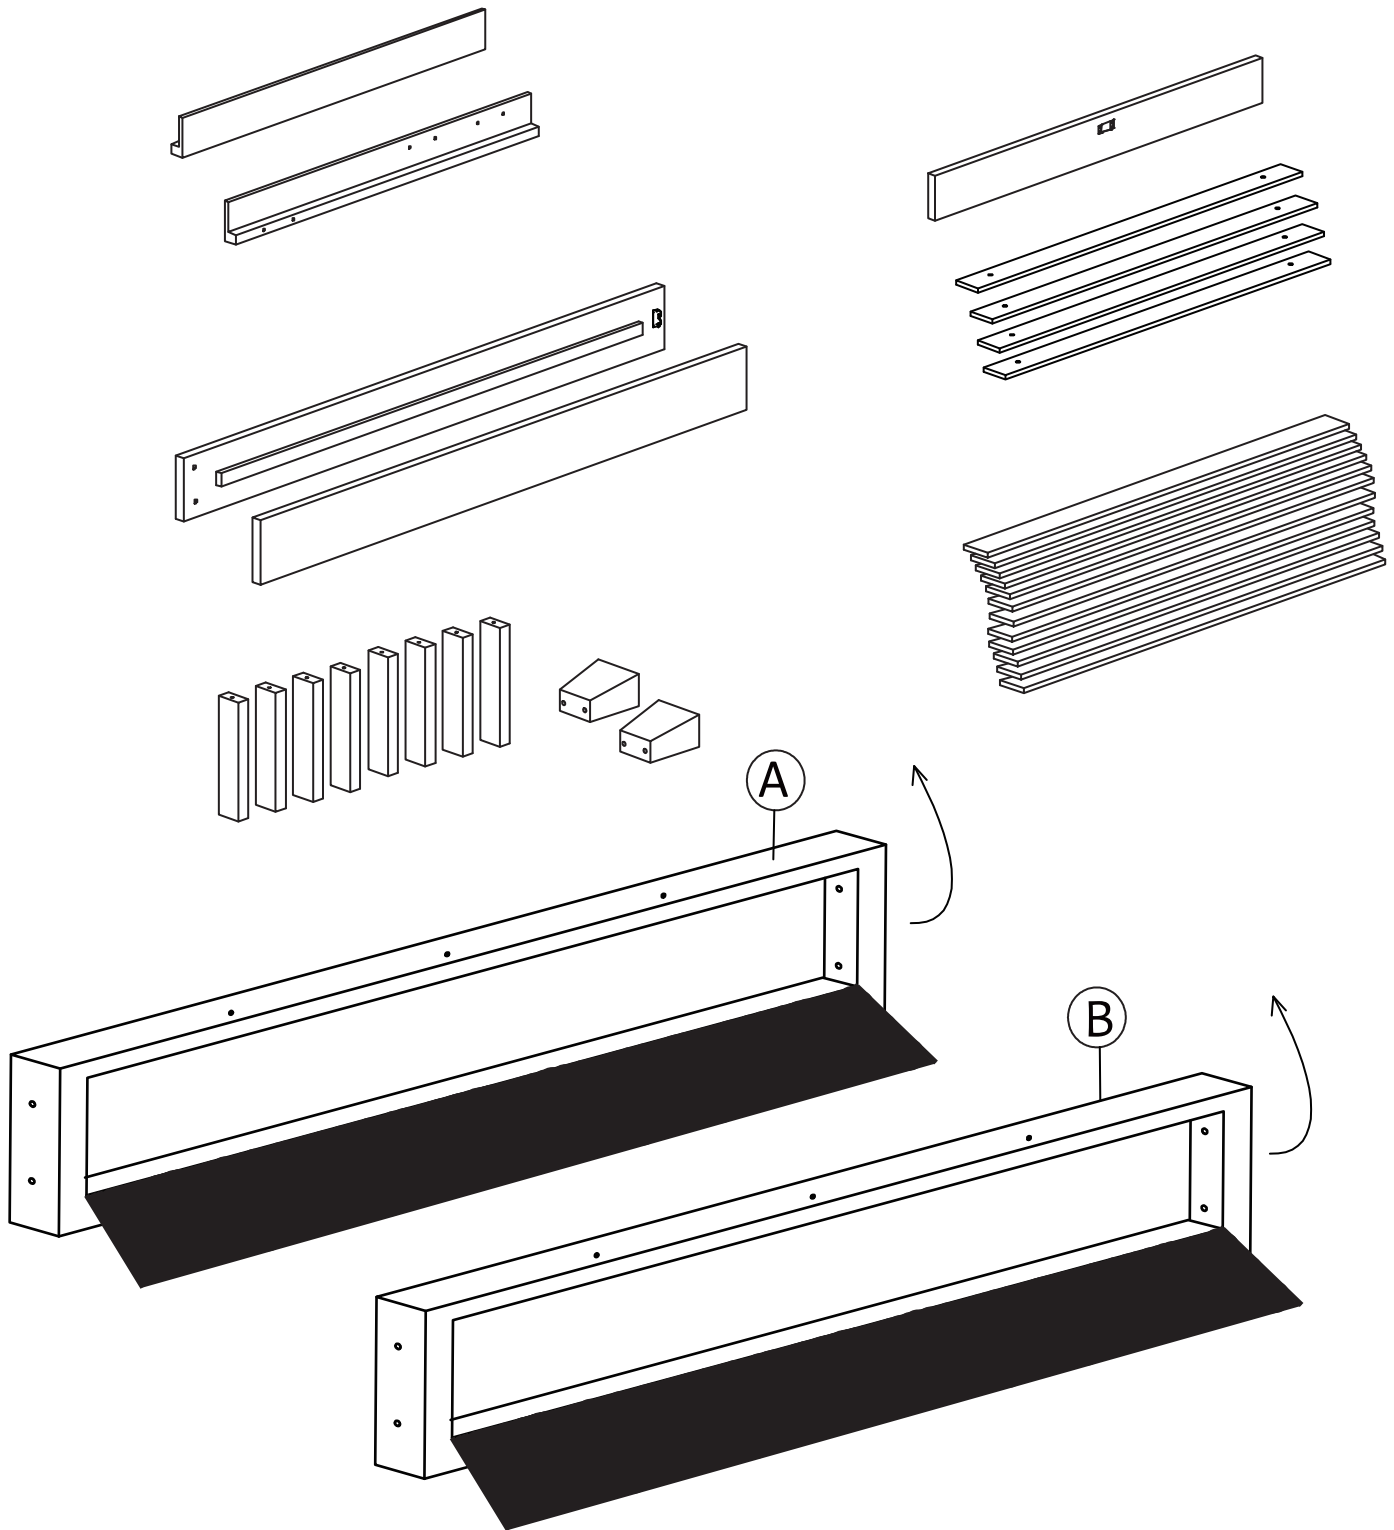


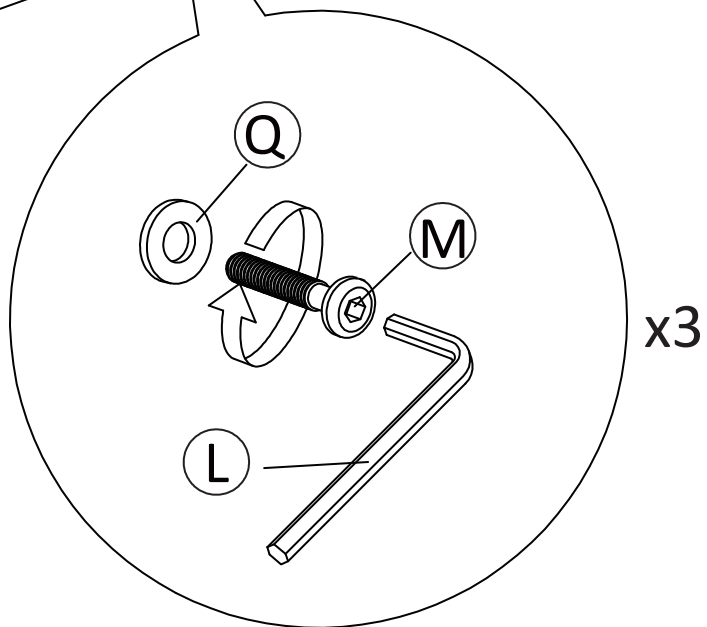
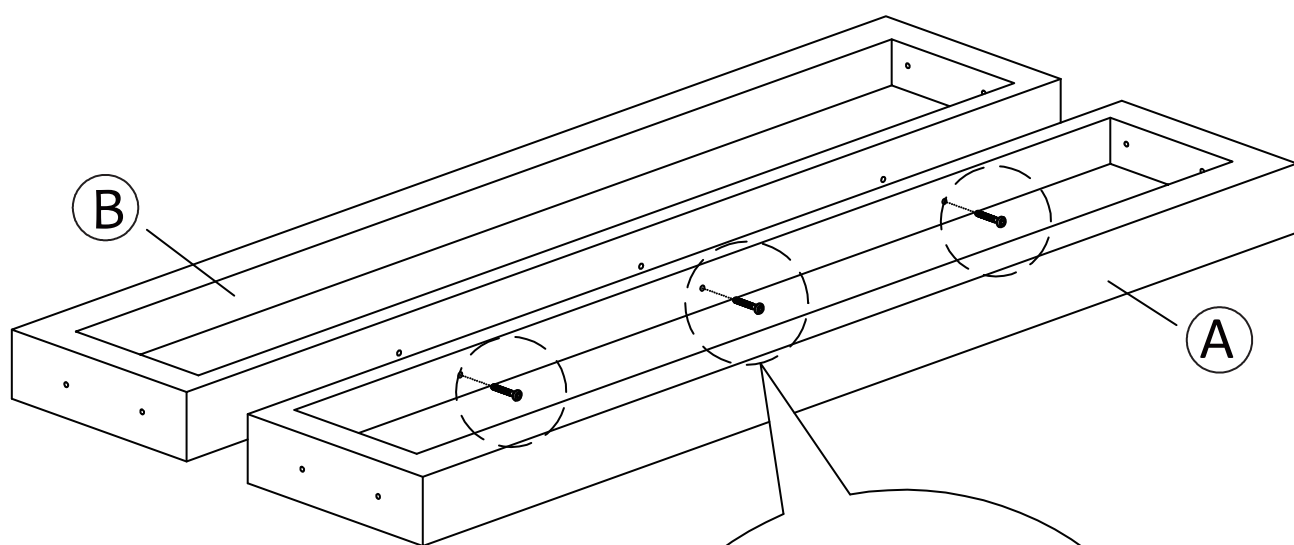


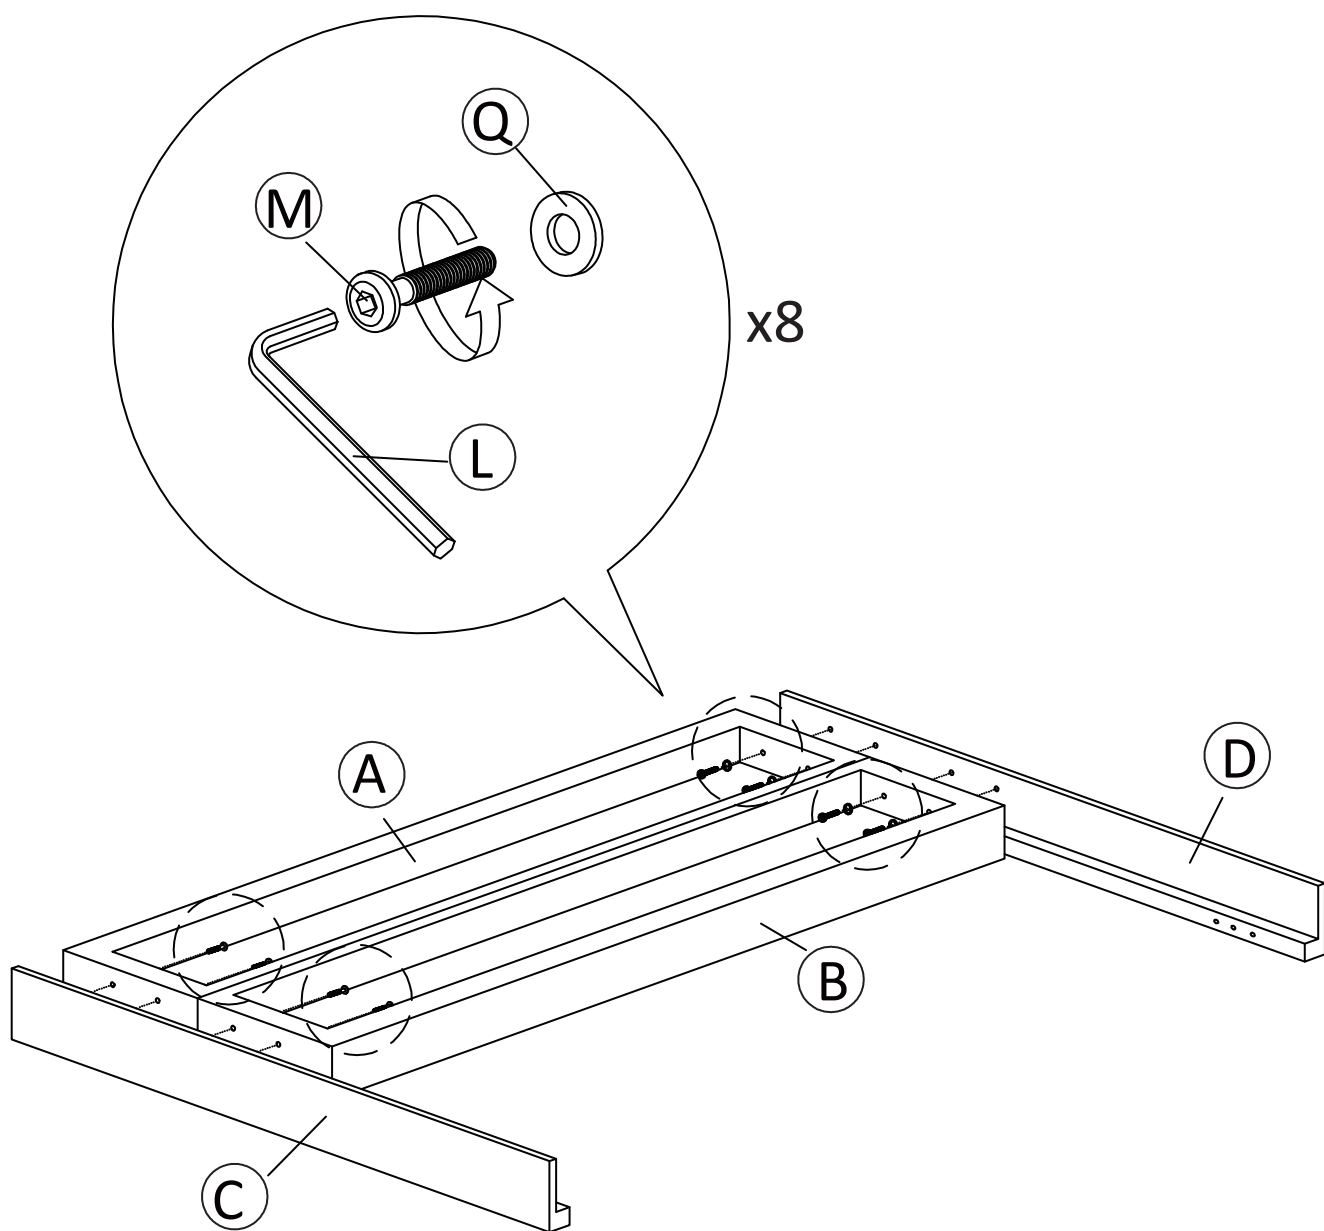


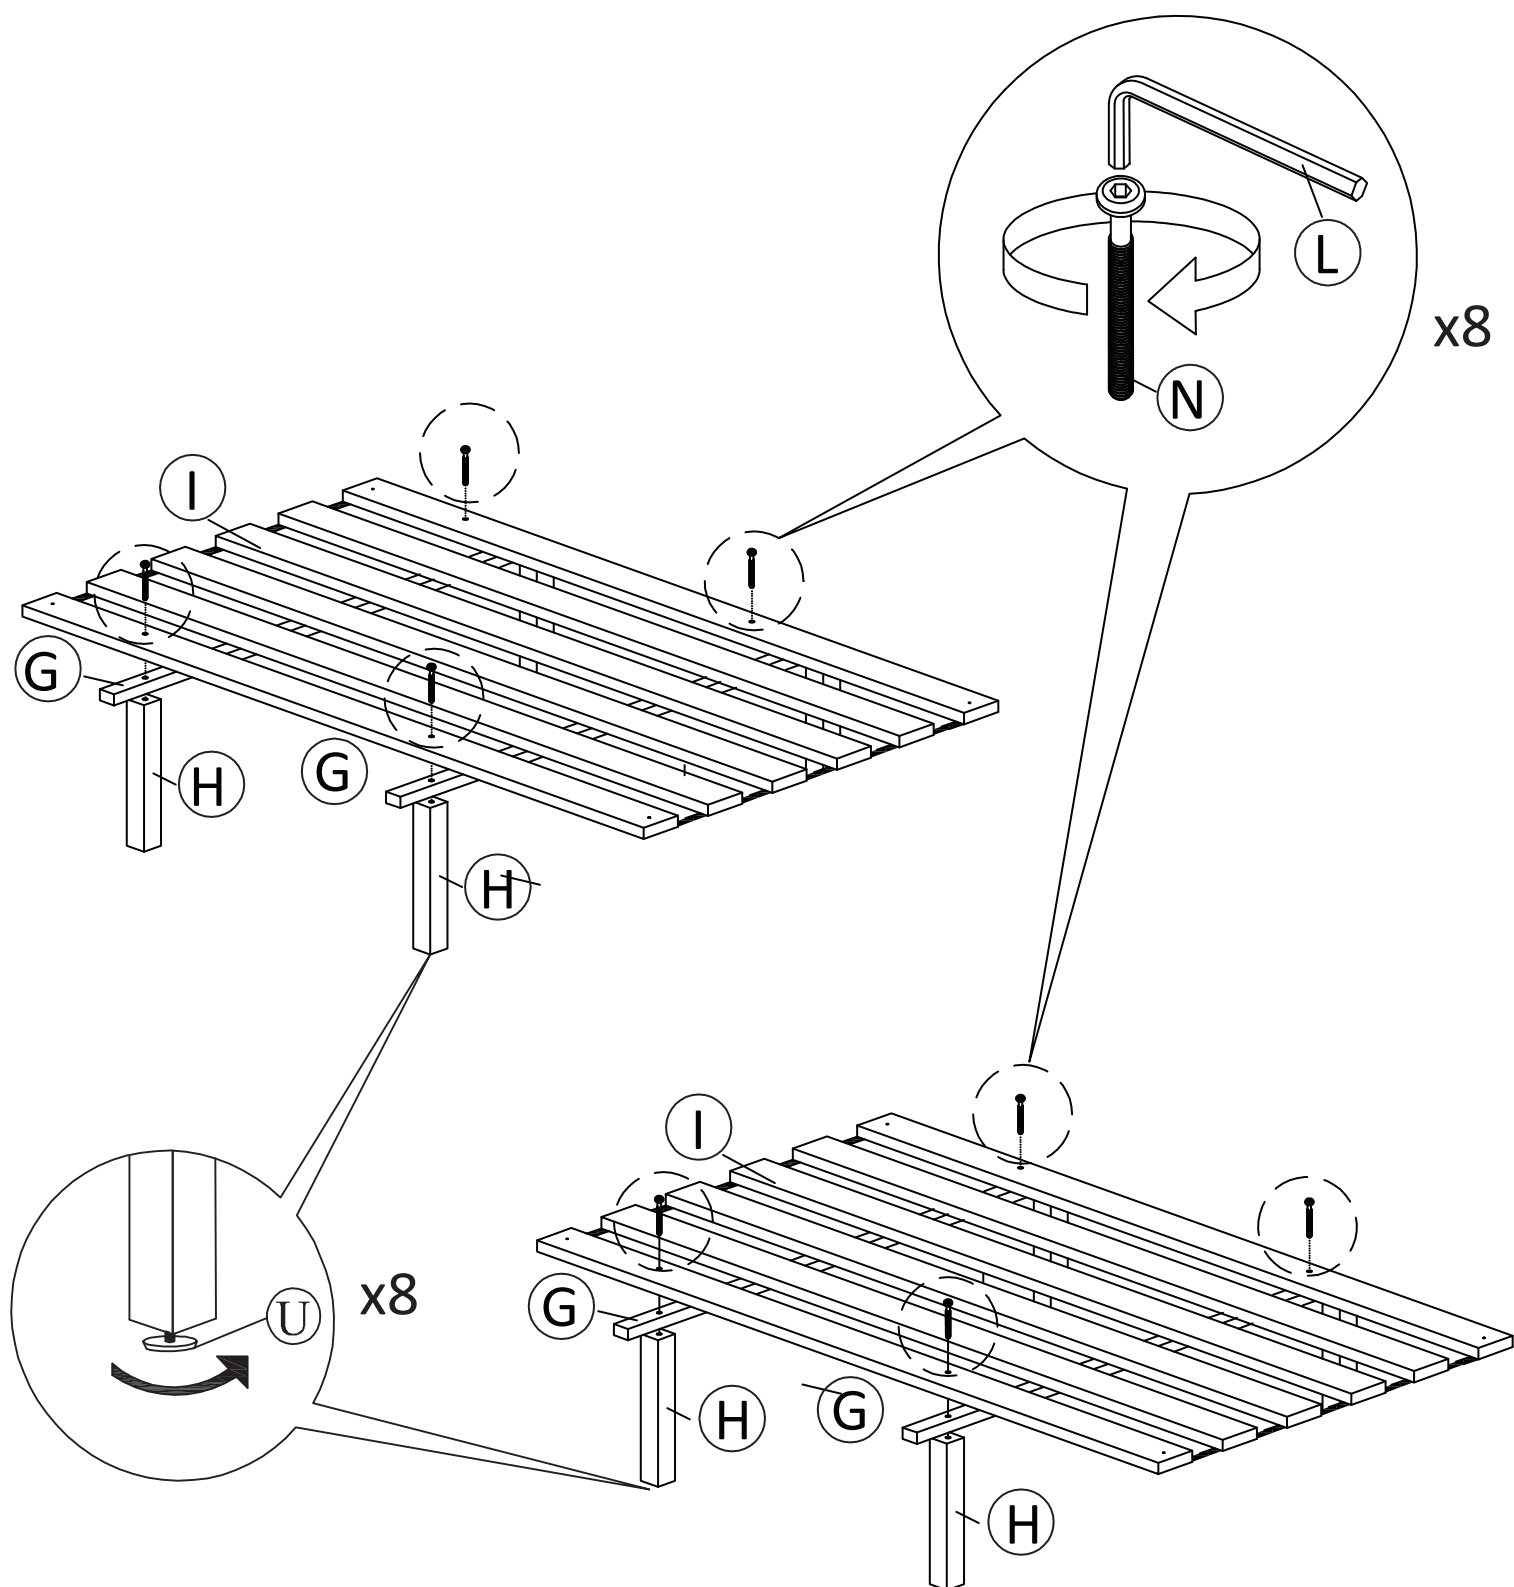

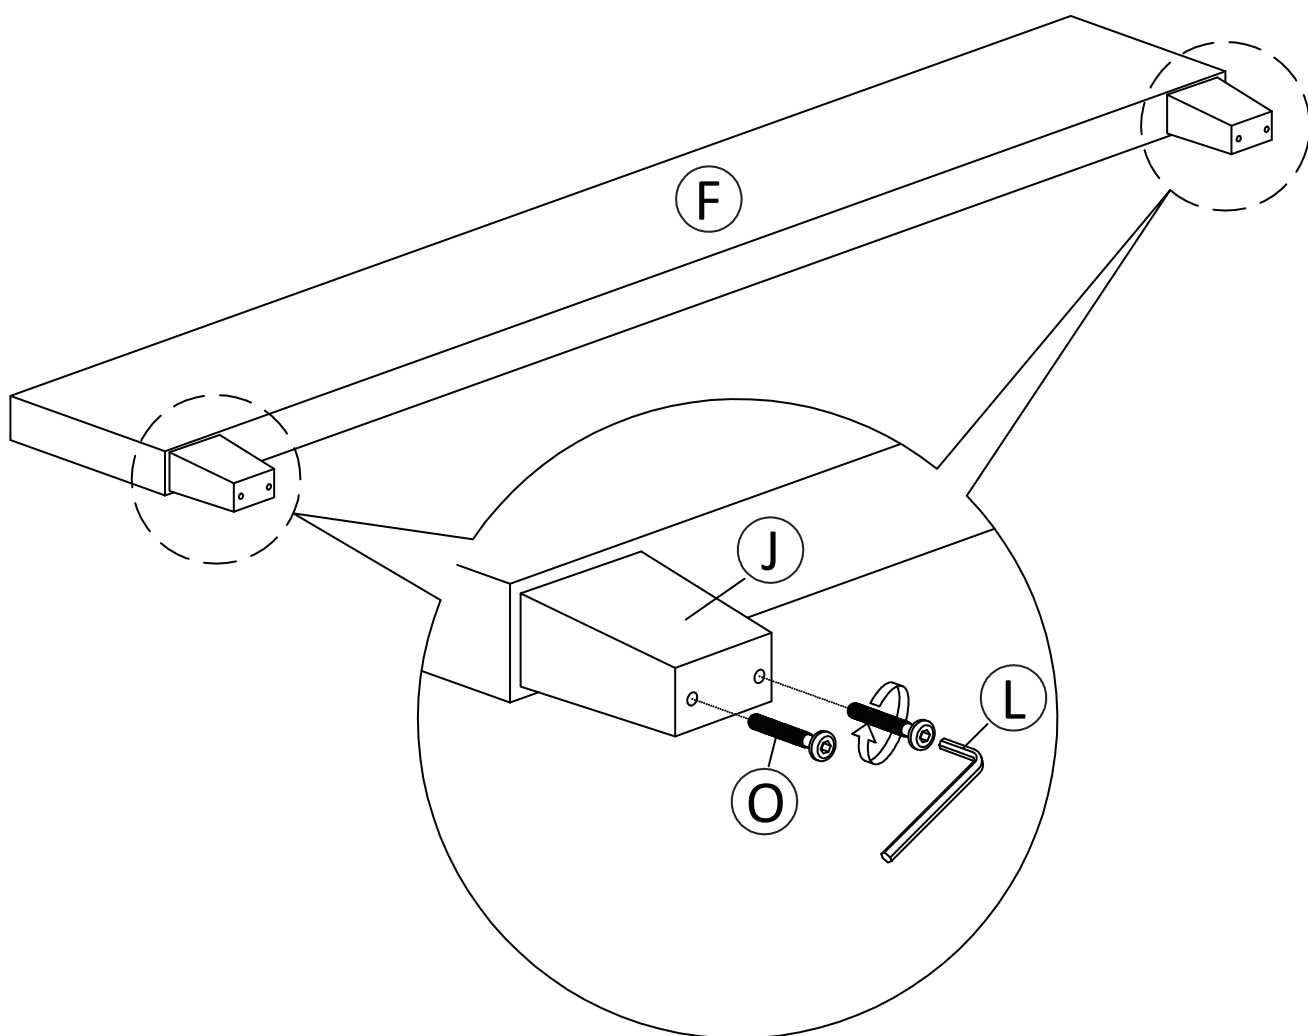

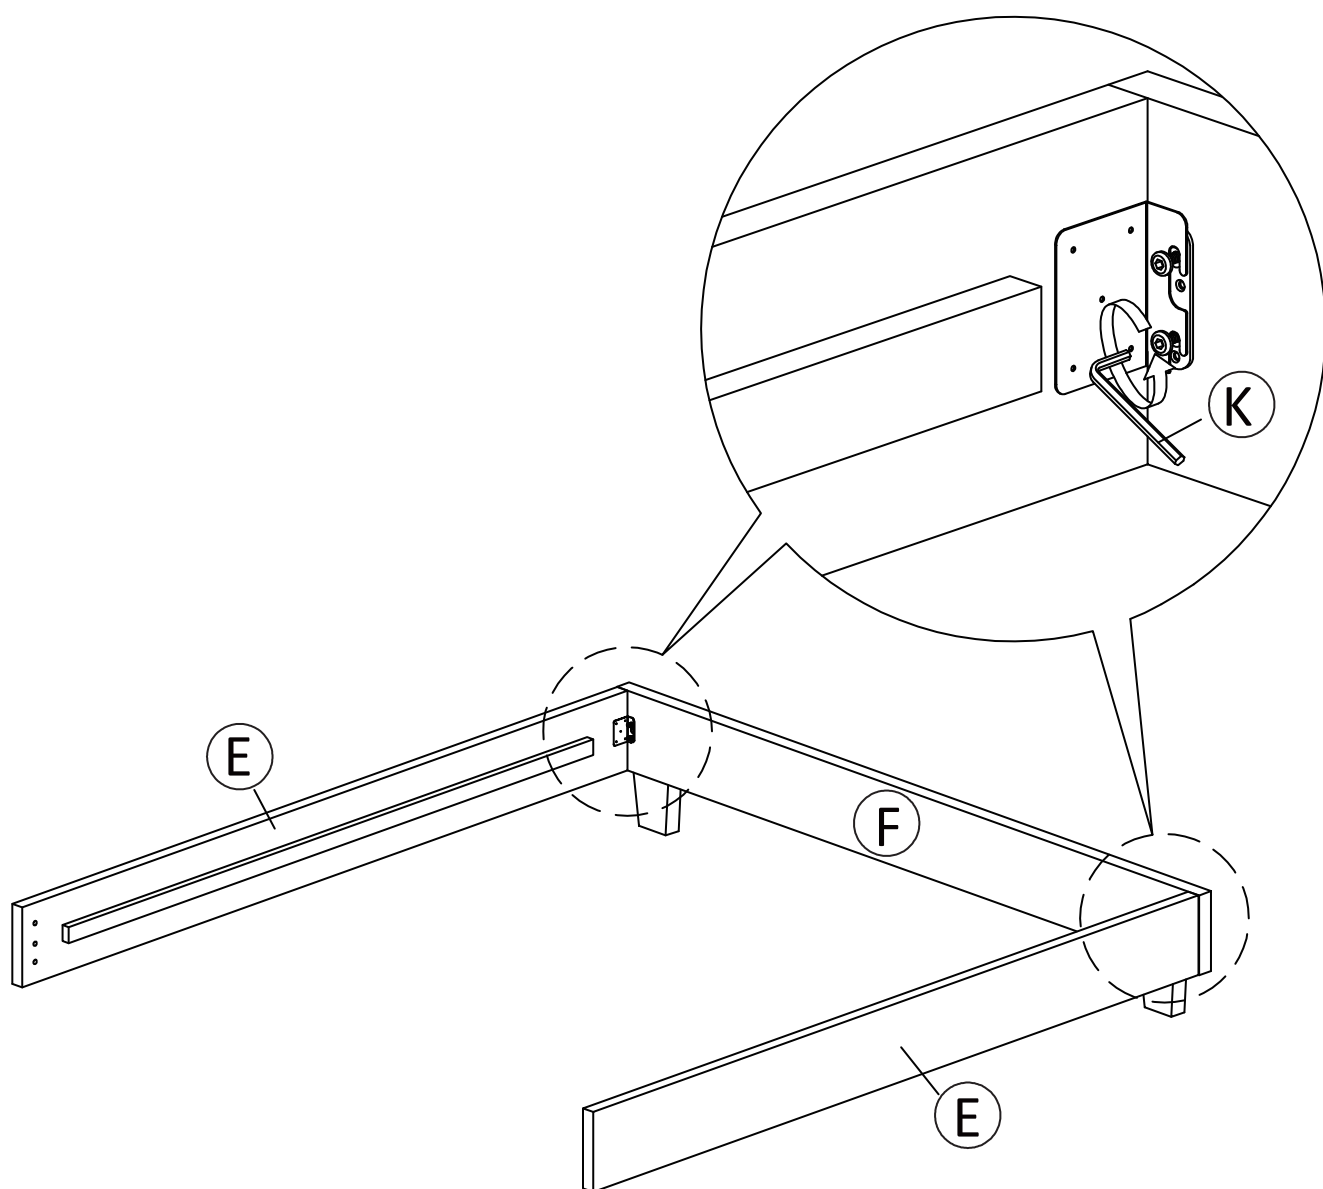


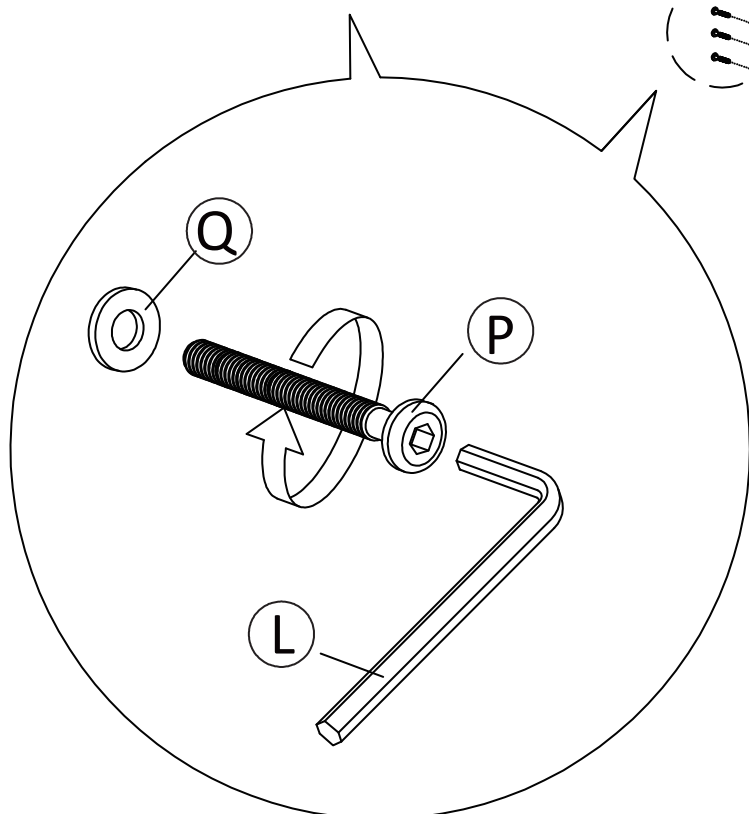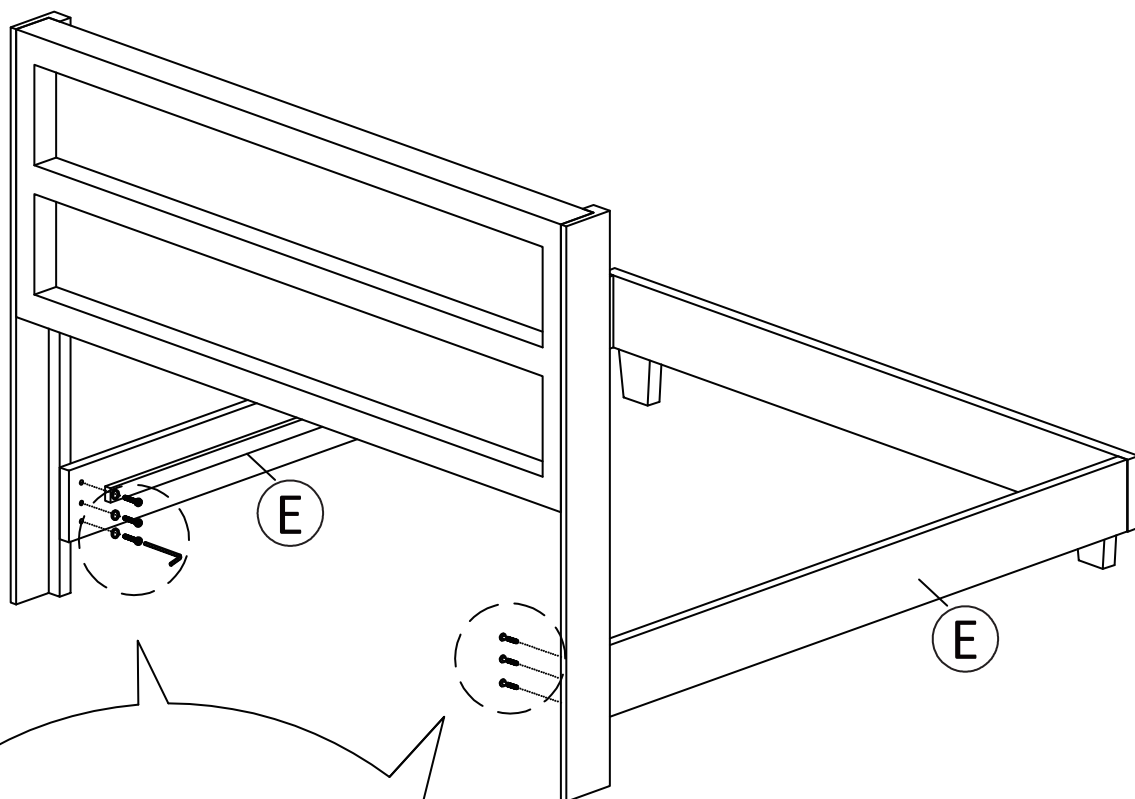

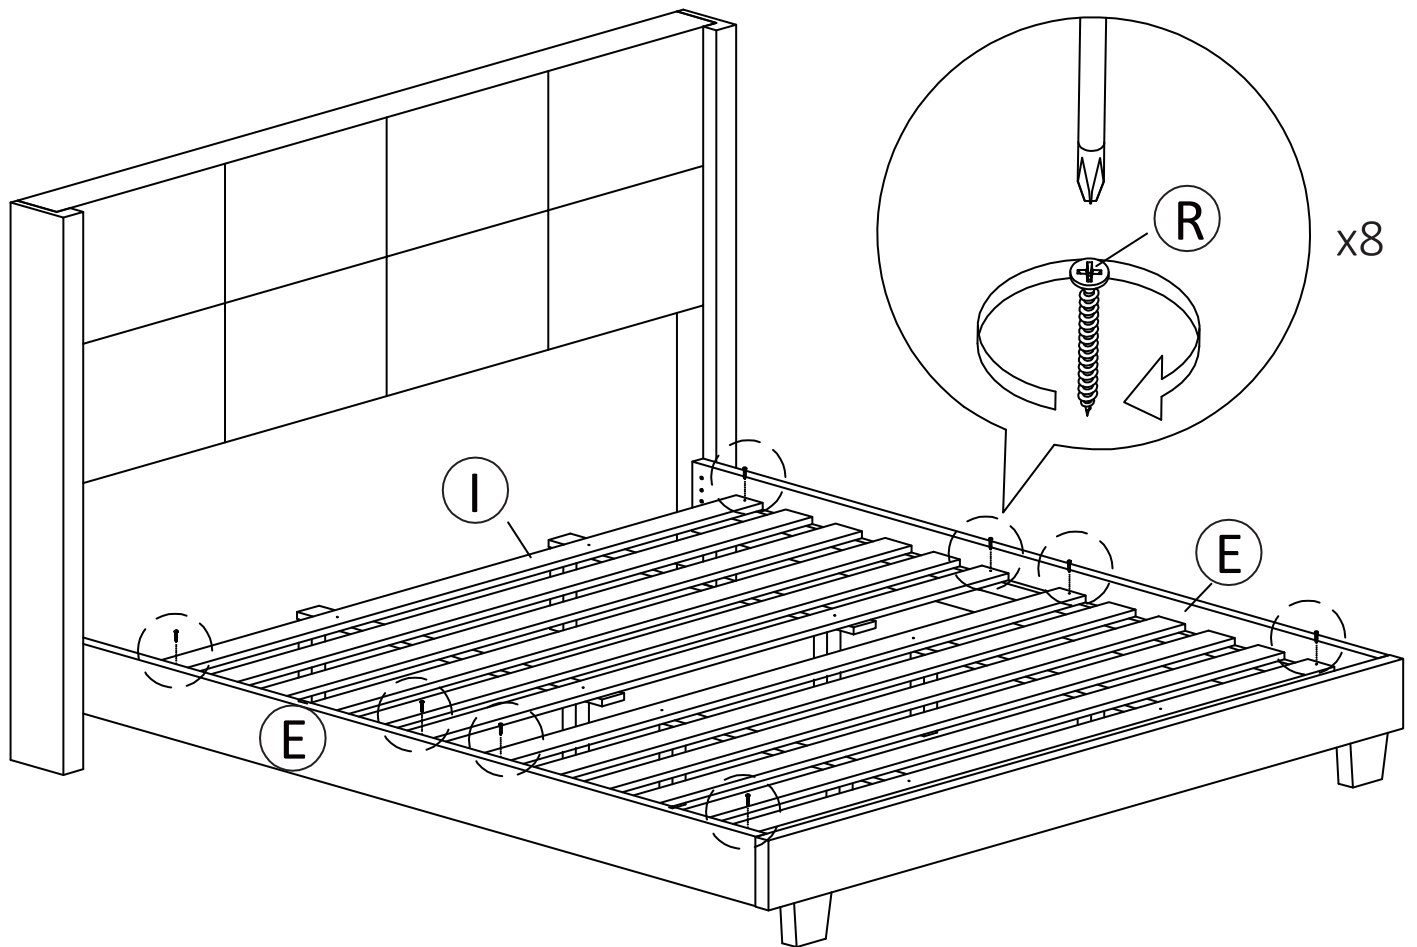

Use Screwdriver to Install
"R" Screws Though Each
Slat into Side Rail Cleat

Adjust Leveling Feet “U” to Touch Floor

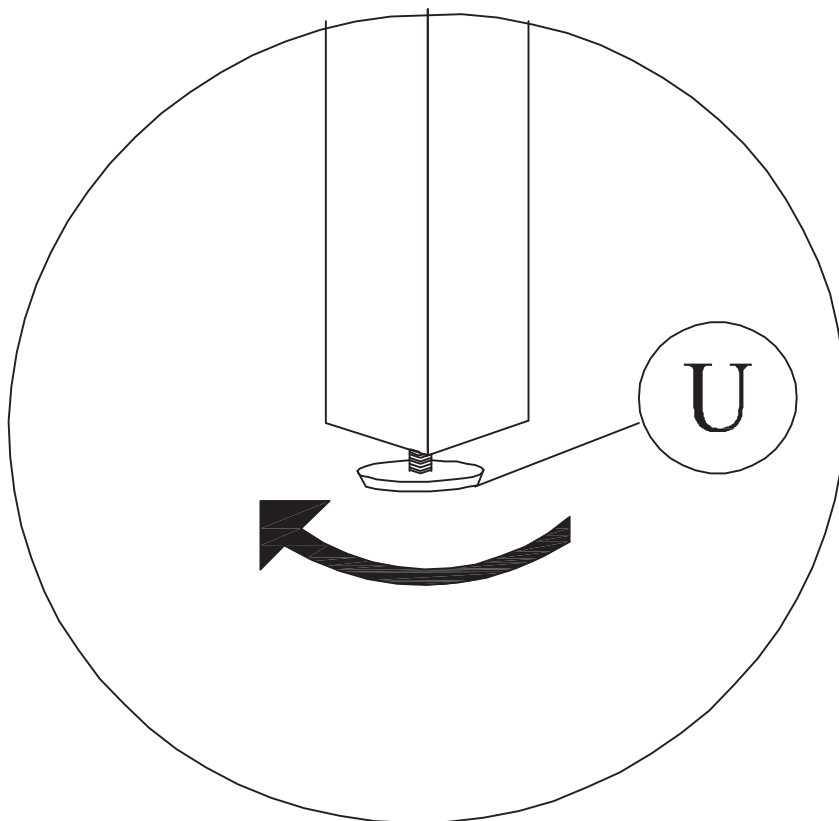

NEED ADDITIONAL HELP?

Email our support team: help@ovis.co

CAUTION:

Do not attempt to move the bed when fully assembled. This could result in damage to the rails, headboard, or footboard.

When placing furniture on non-carpeted flooring, we recommend the use of floor protection such as an area rug or furniture pads. Area rugs and padding not included with purchase.