
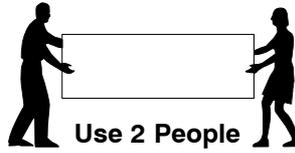


9002 6 Drawer Dresser

Assembly Instructions


WI-1220

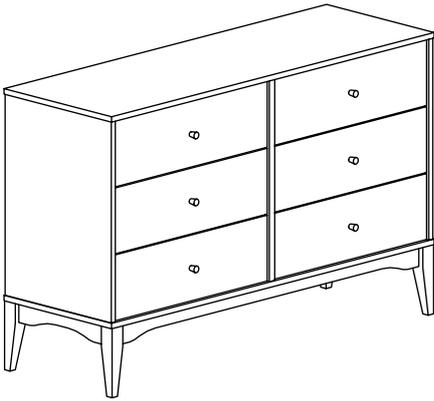

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List

Parts in Box A:




A Top Panel x 1




B Bottom Panel x 1



C Support Bar x 2

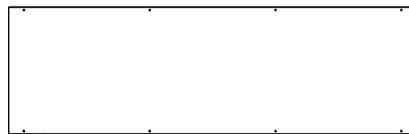


D Back Panel (Wider) x 1




E Back Panel (Narrow) x 1




F Post x 4

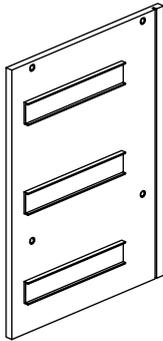

G Side Panel (Left Hand) x 1

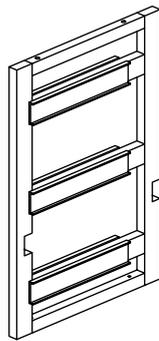

H Center Frame x 1

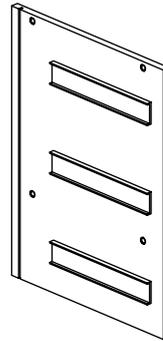

J Side Panel (Right Hand) x 1



K Drawer Bottom x 6


Parts in Box B:




L Drawer Face x 6




N Drawer Rail x 6

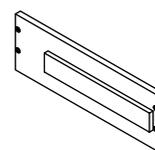

O Drawer Side (Left Hand) x 6

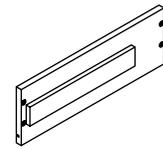

P Drawer Side (Right Hand) x 6




M Drawer Back x 6

9002 6 Drawer Dresser

Assembly Instructions


WI-1220

2 Hardware List

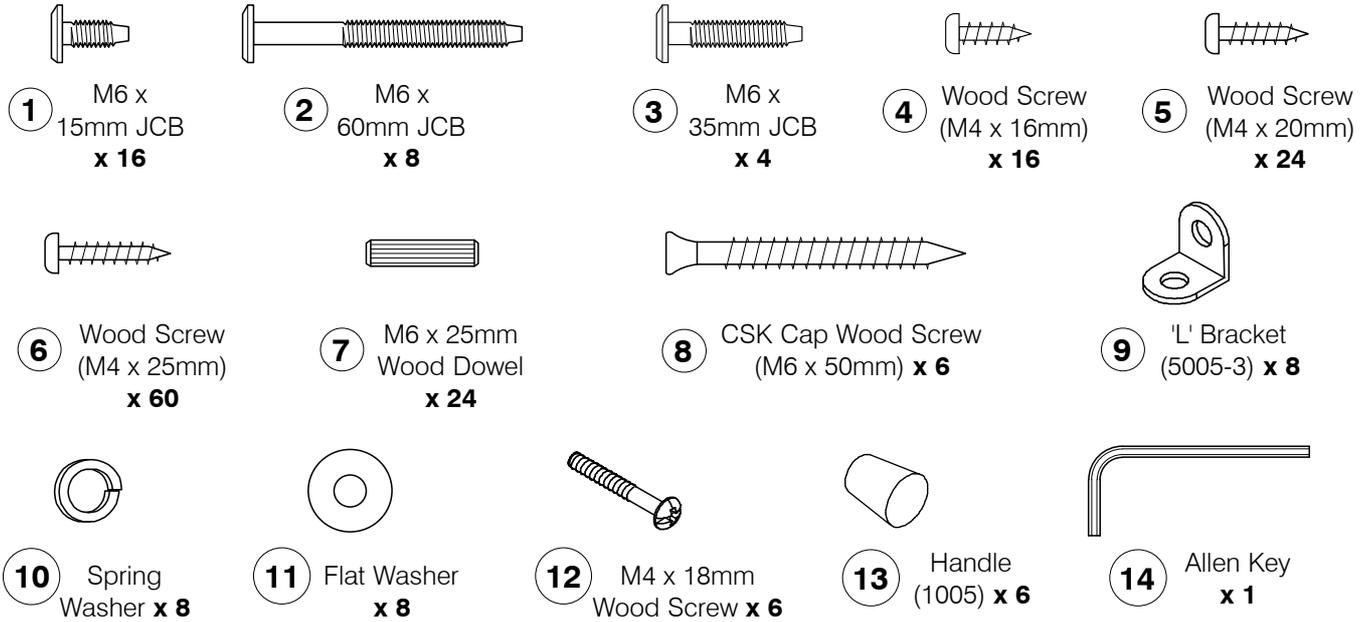


3 Assemble the Drawer Sides (O & P) & Drawer Rail (N) to the Drawer Face (L).

x6

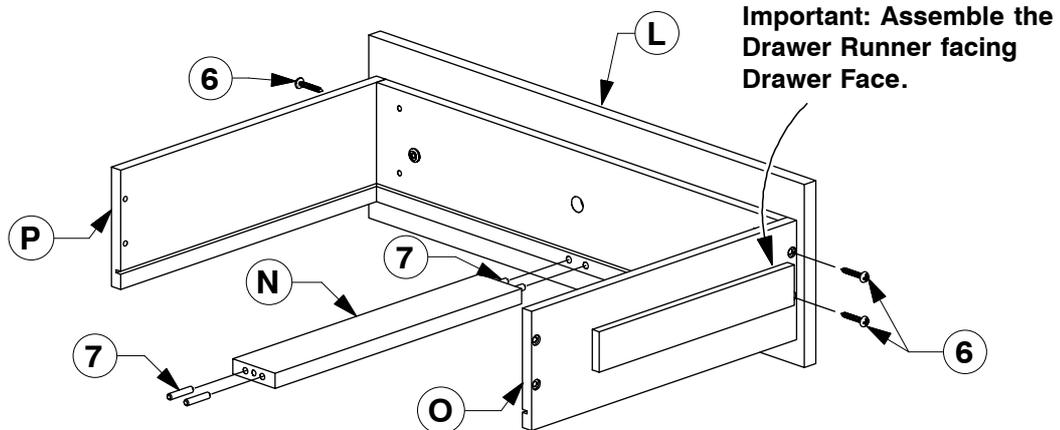

4 Slide the Drawer Bottom (K) into the groove on the Drawer Sides (O & P).

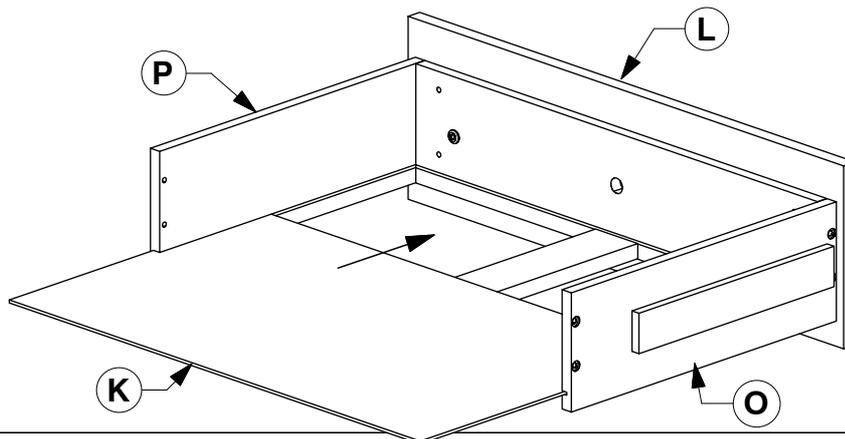


9002 6 Drawer Dresser

Assembly Instructions


WI-1220

- 5** Assemble the Drawer Back (M) to the Drawer Sides (O & P).


x6

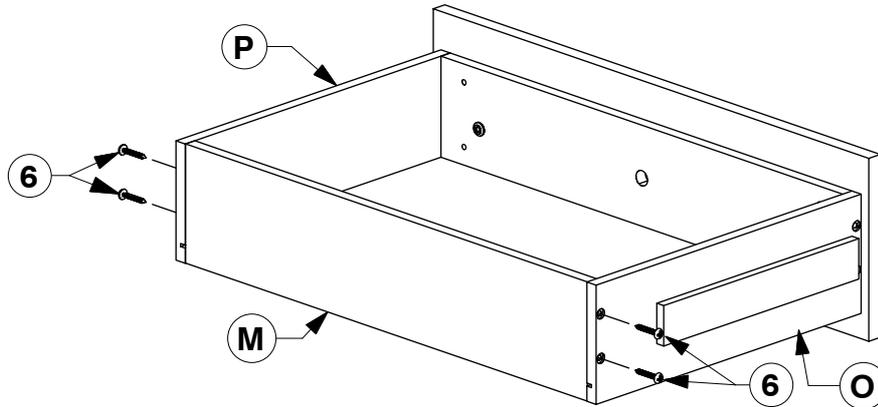

- 6** Turn the Drawer over to fit angled 25mm Wood screws (6) to the Drawer Rail (N).

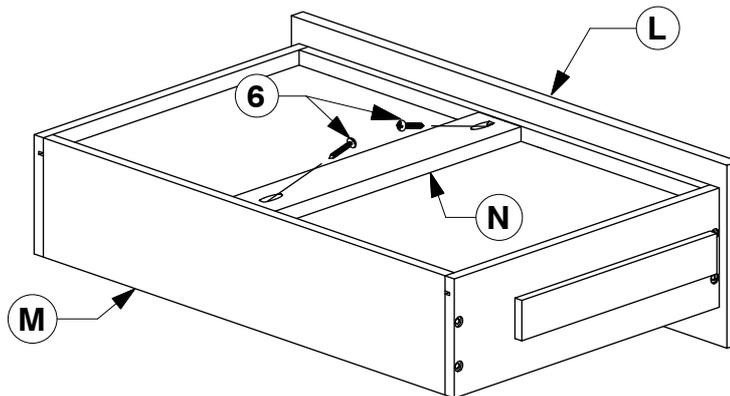

- 7** Fit the 'L' Bracket to the Side Panel (G & J).

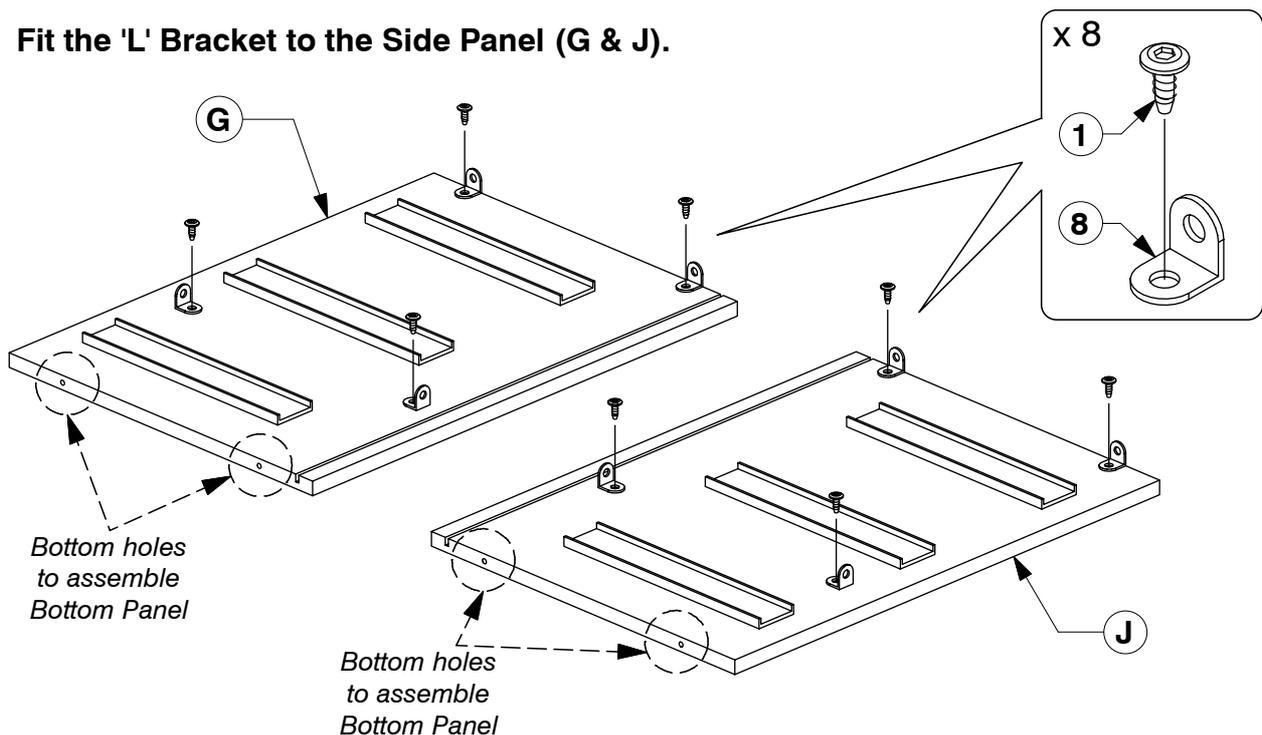


9002 6 Drawer Dresser


Assembly Instructions

WI-1220

- 8** Fit the Side Panel- Right Hand (J) & Center Frame (H) to the Top Panel (A).

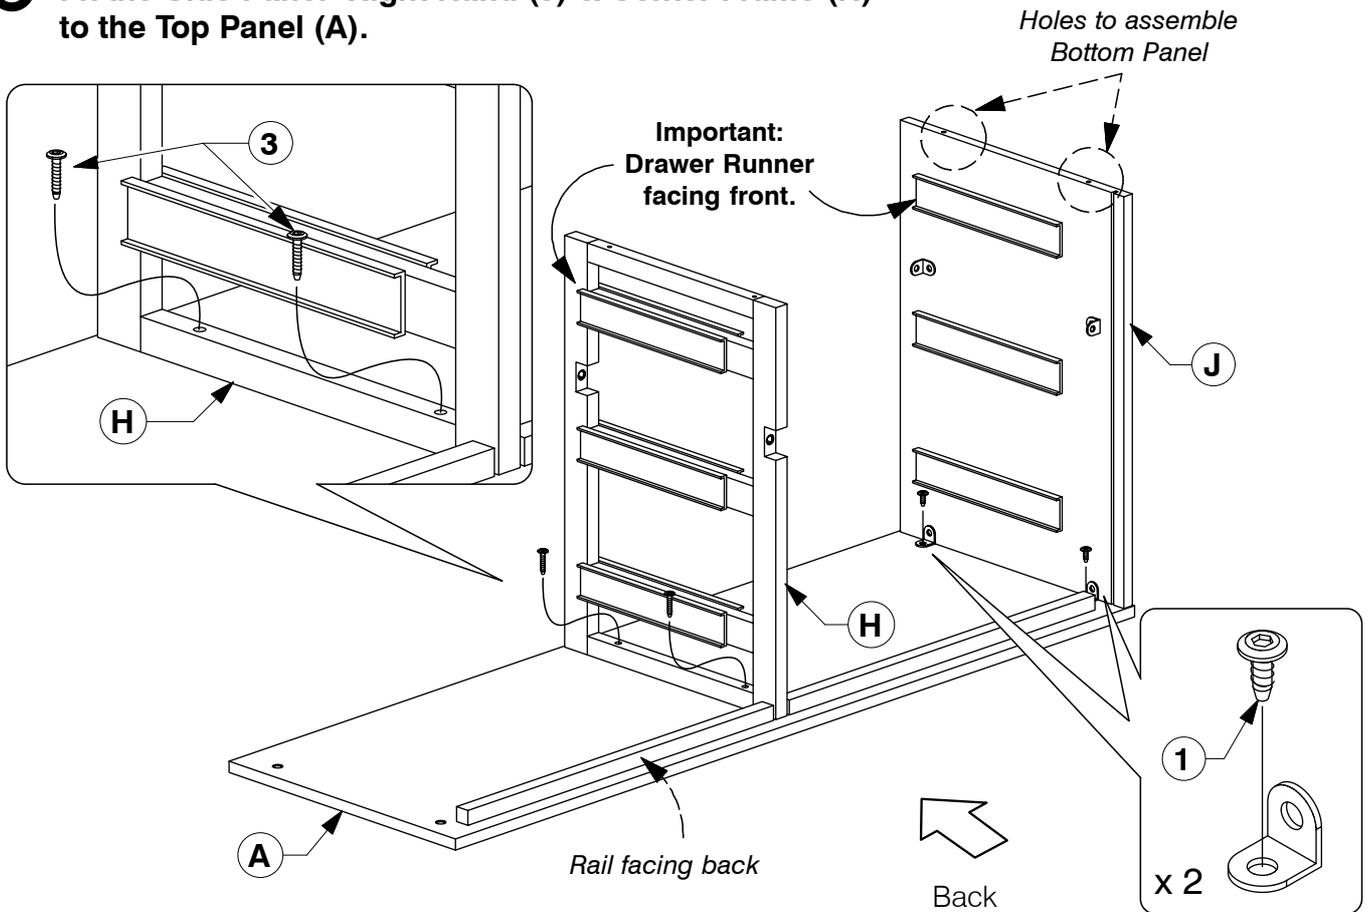

- 9** Fit the Support Bar (C) to the Side Panel- Right Hand (J) & Center Frame (H) as shown.

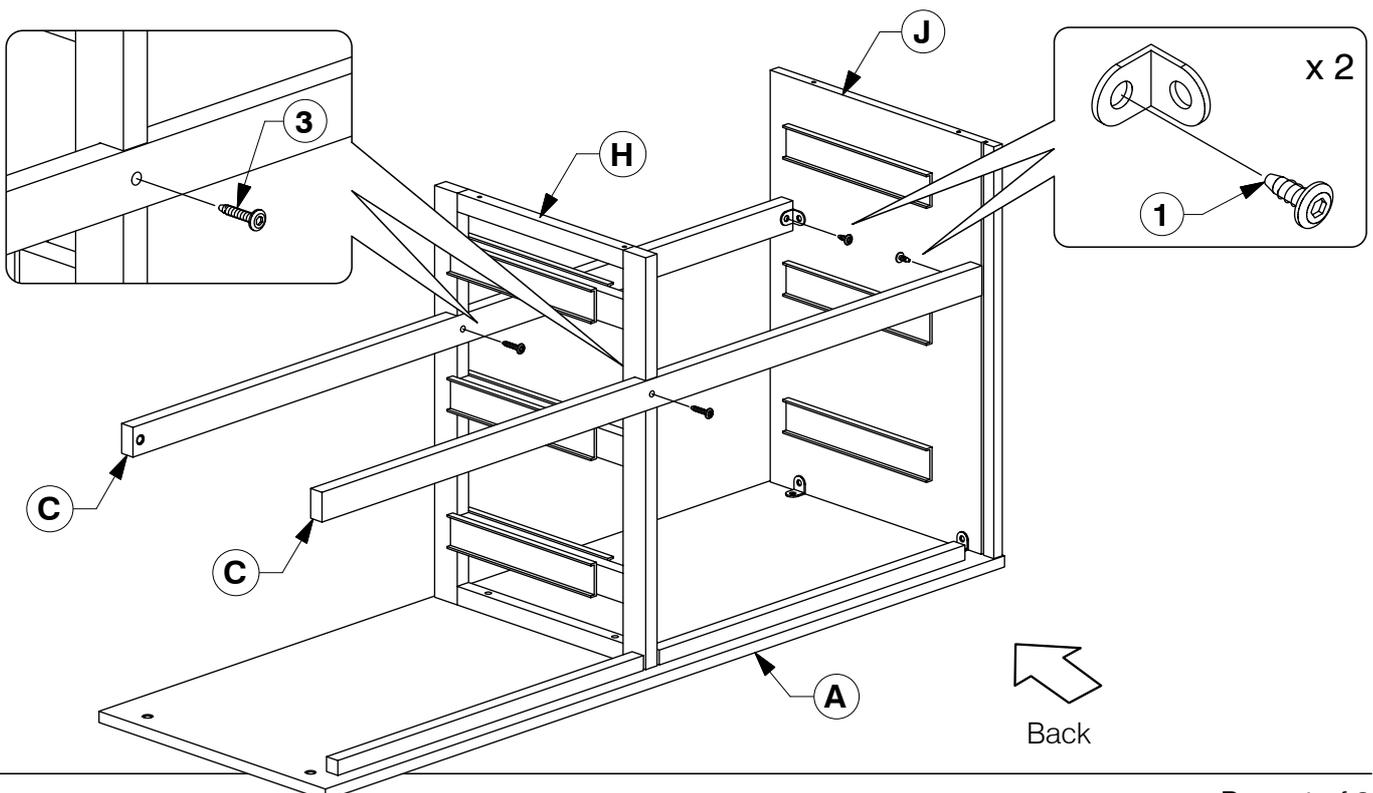


9002 6 Drawer Dresser


Assembly Instructions

WI-1220

- 10** Fit the other side of Side Panel- Left Hand (G) to the Top Panel (A) & Support Bar (C).

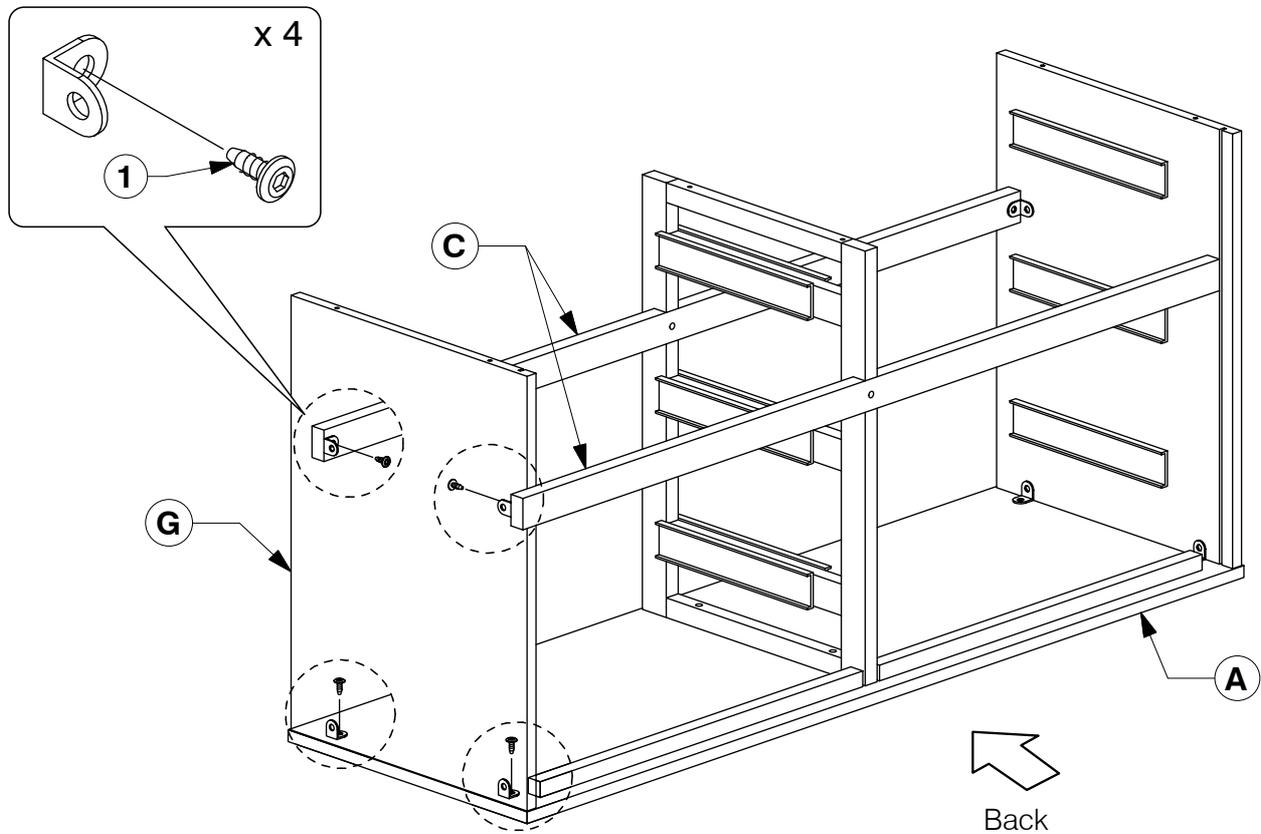

- 11** Slide the Back Panel- Wider (D) into the groove on the back of the Side Panel (G & J).

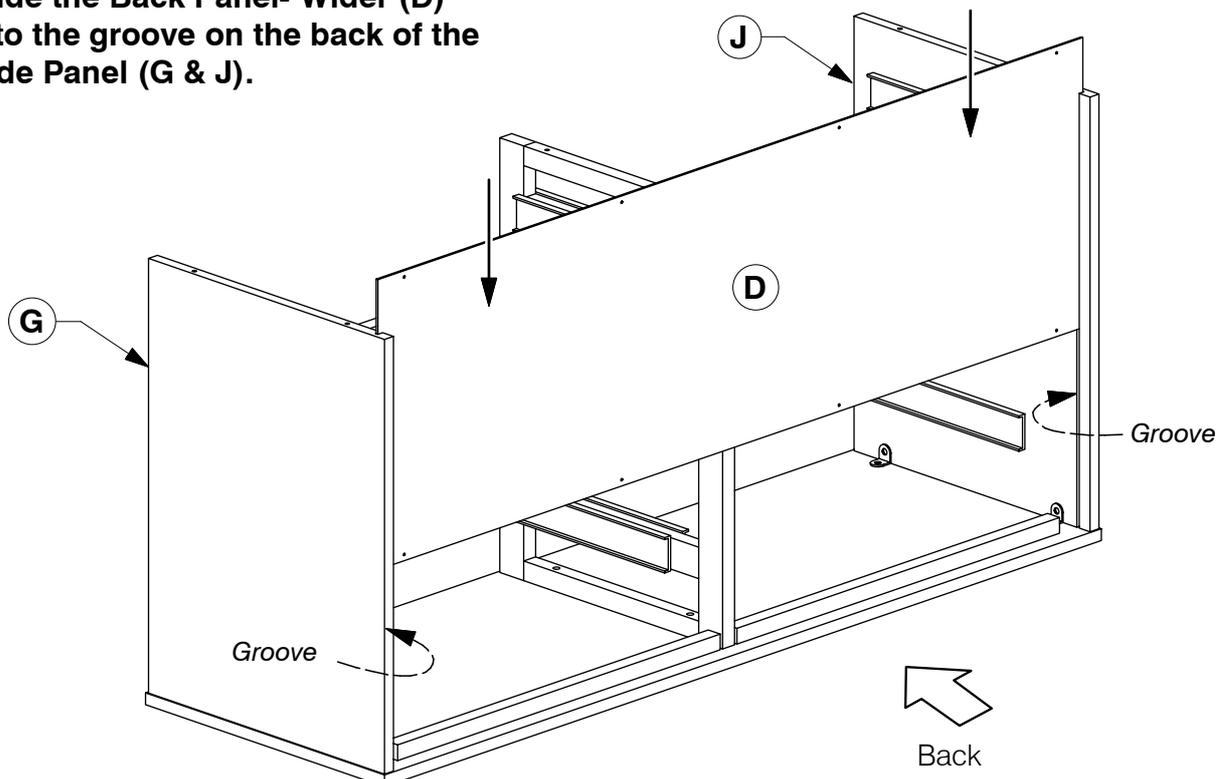


9002 6 Drawer Dresser


Assembly Instructions

WI-1220

- 12** Slide the Back Panel-Narrow (E) into the groove on the back.

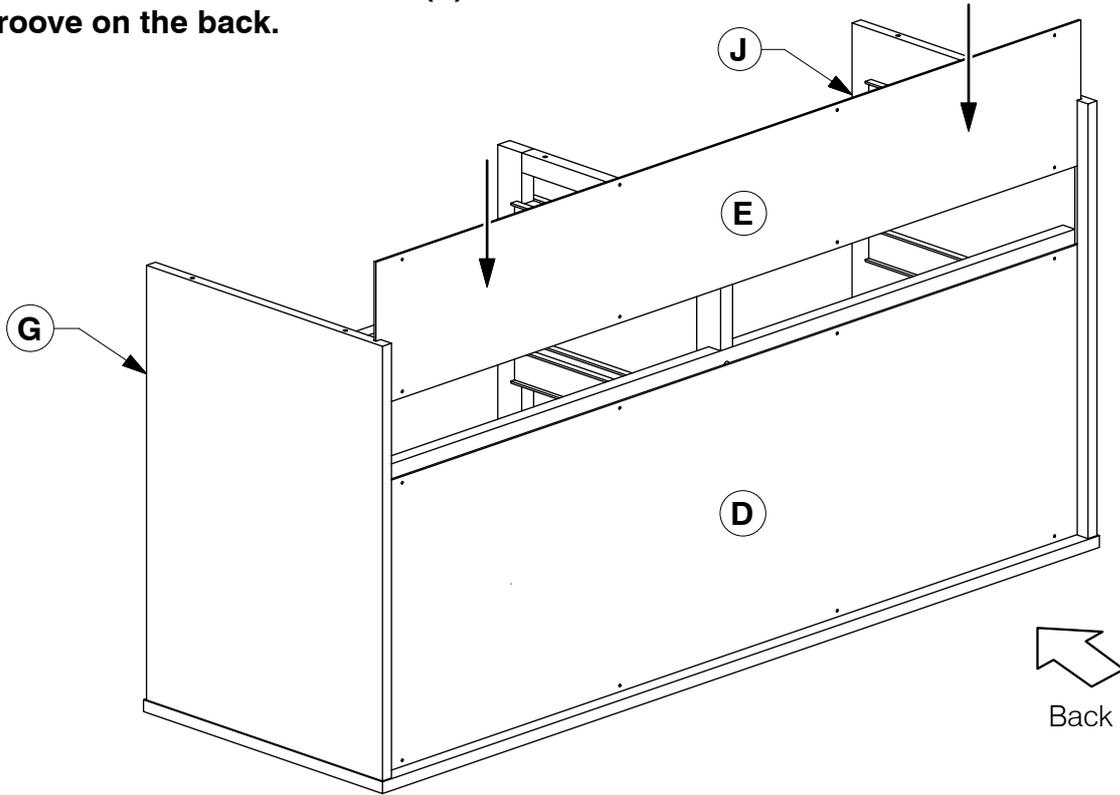

- 13** Use screws to tighten the Back Panel (D & E) to the back of the frame.

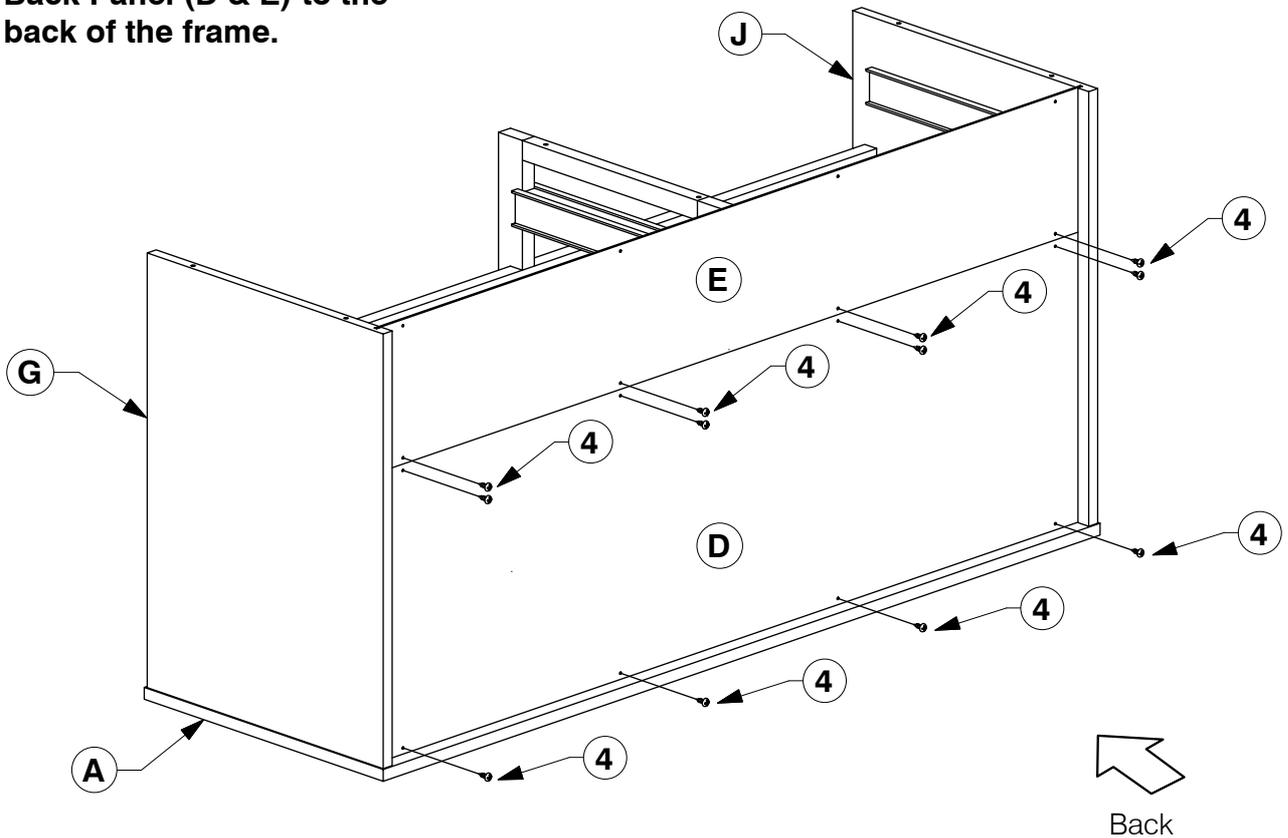


9002 6 Drawer Dresser


Assembly Instructions

WI-1220

- 14** Assembled the Bottom Panel (B) to the frame.

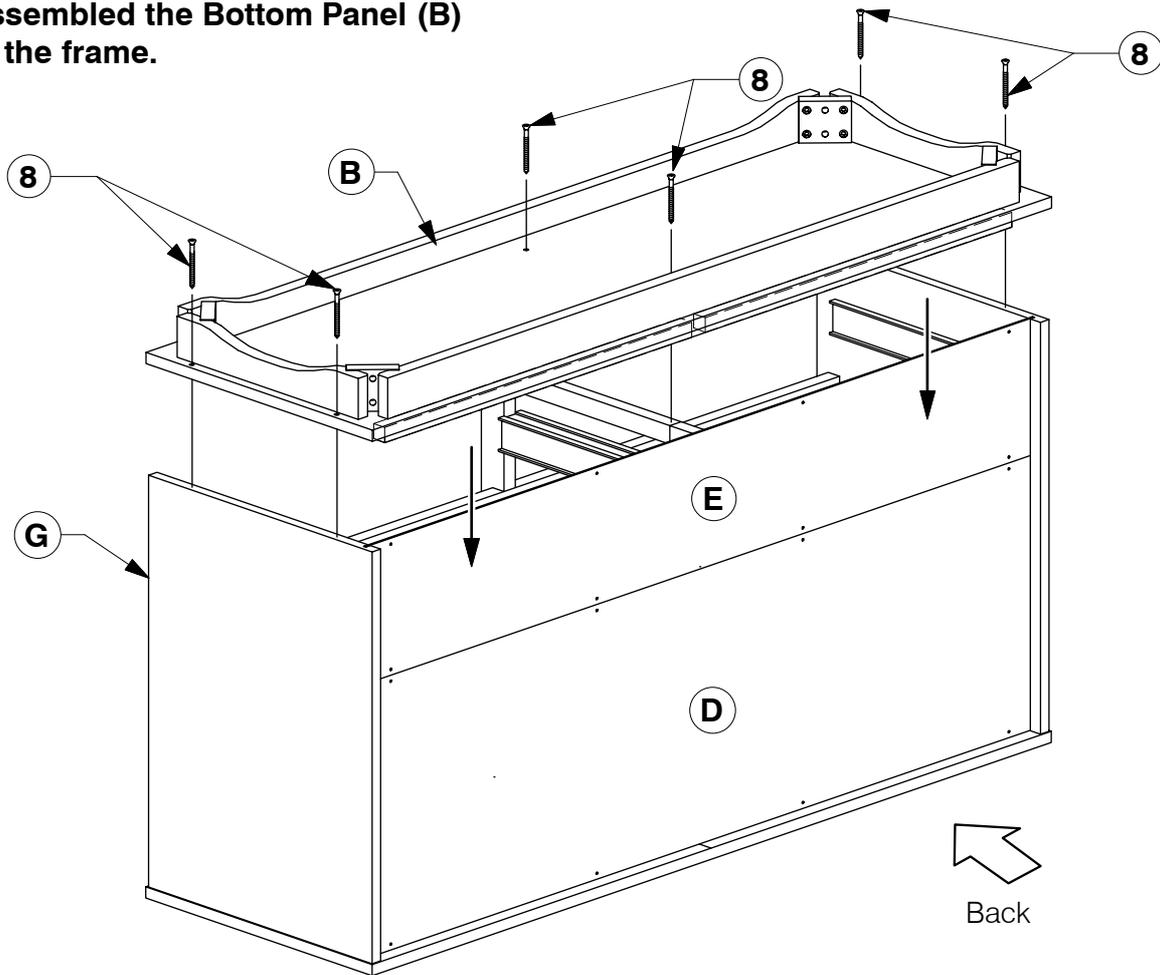

- 15** Tighten the Back Panel- Narrow (E) with screws.

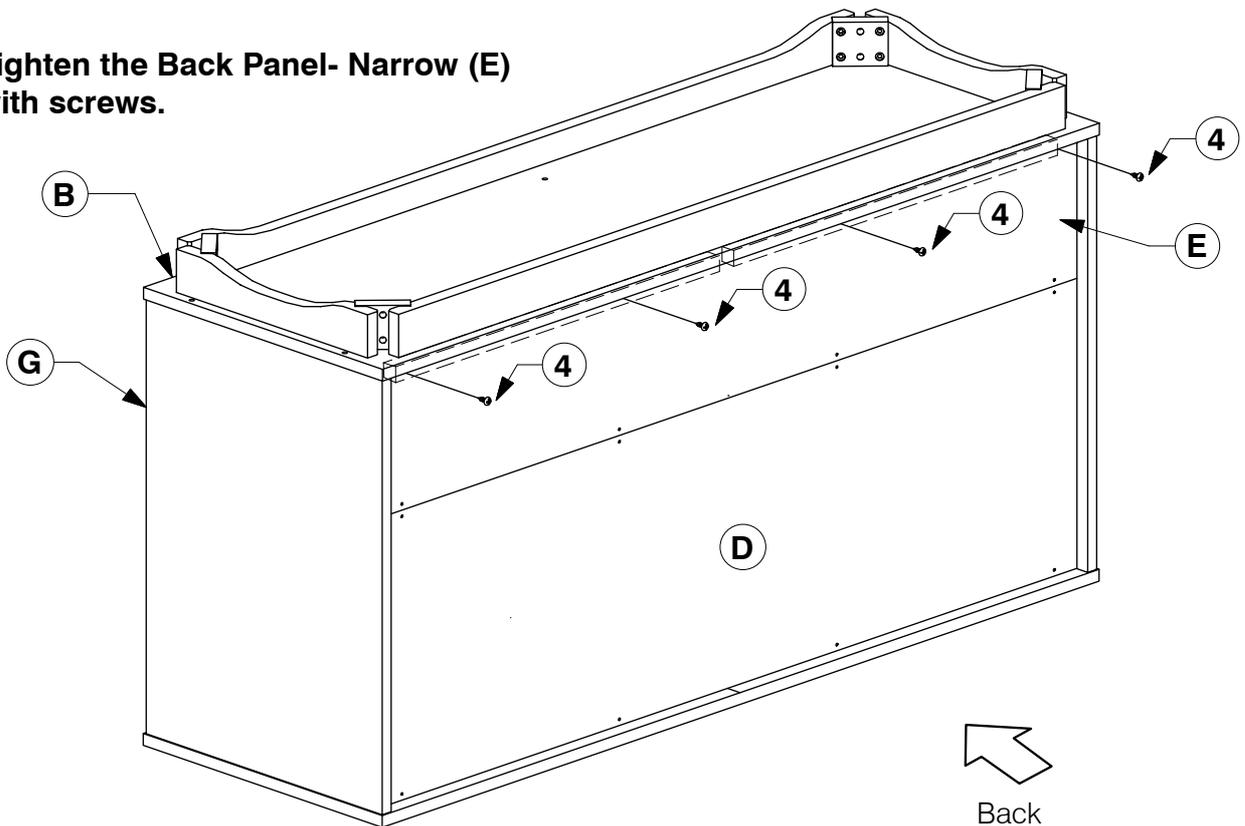


9002 6 Drawer Dresser

Assembly Instructions


WI-1220

- 16** Fit the Post (F) to the Bottom Panel (B) as shown below.

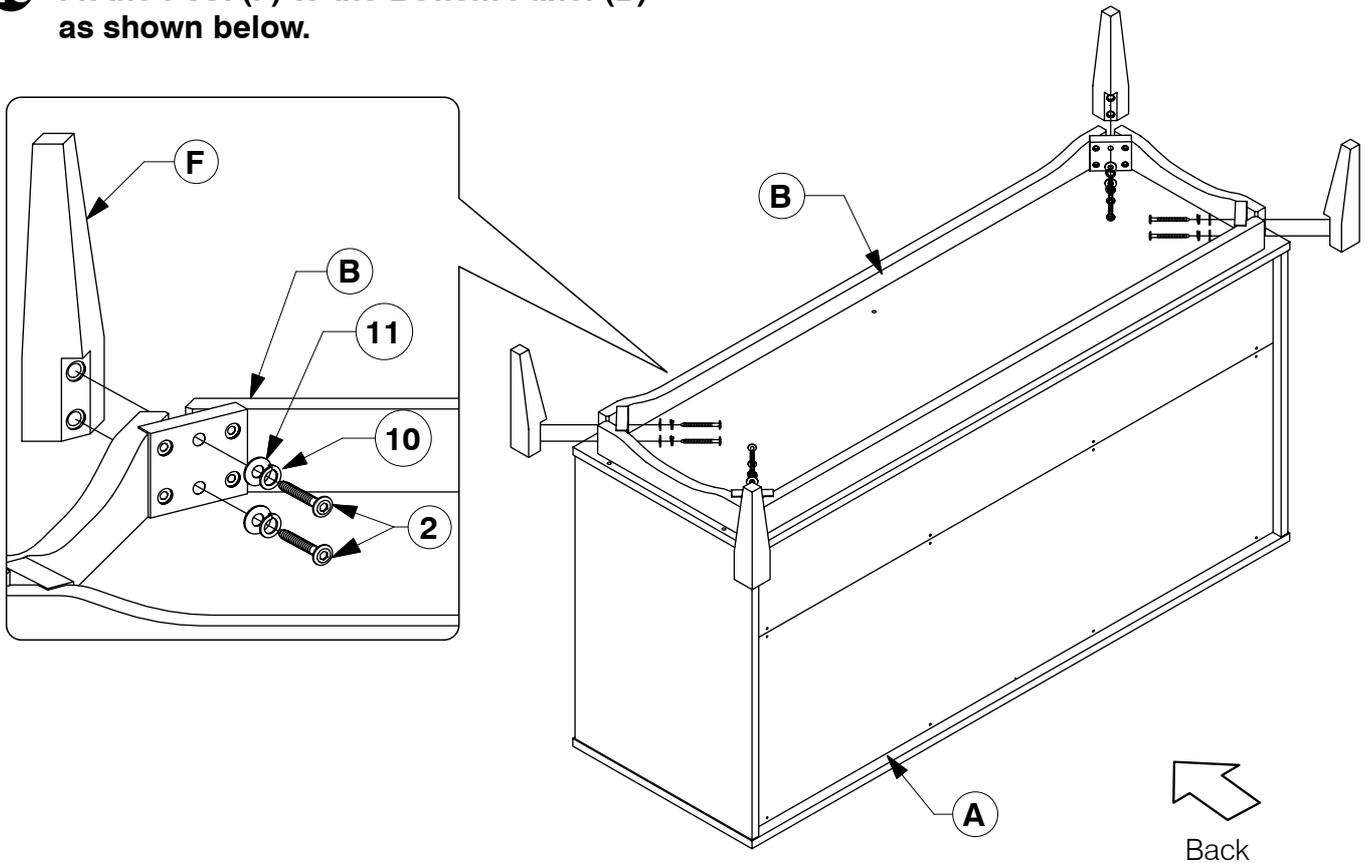

- 17** Fit and adjust the Drawer Face (L).

* NOTE: Before fitting the Wood Screws.
Loosen the JCBs on the Drawer Face if
the face needs alignment.

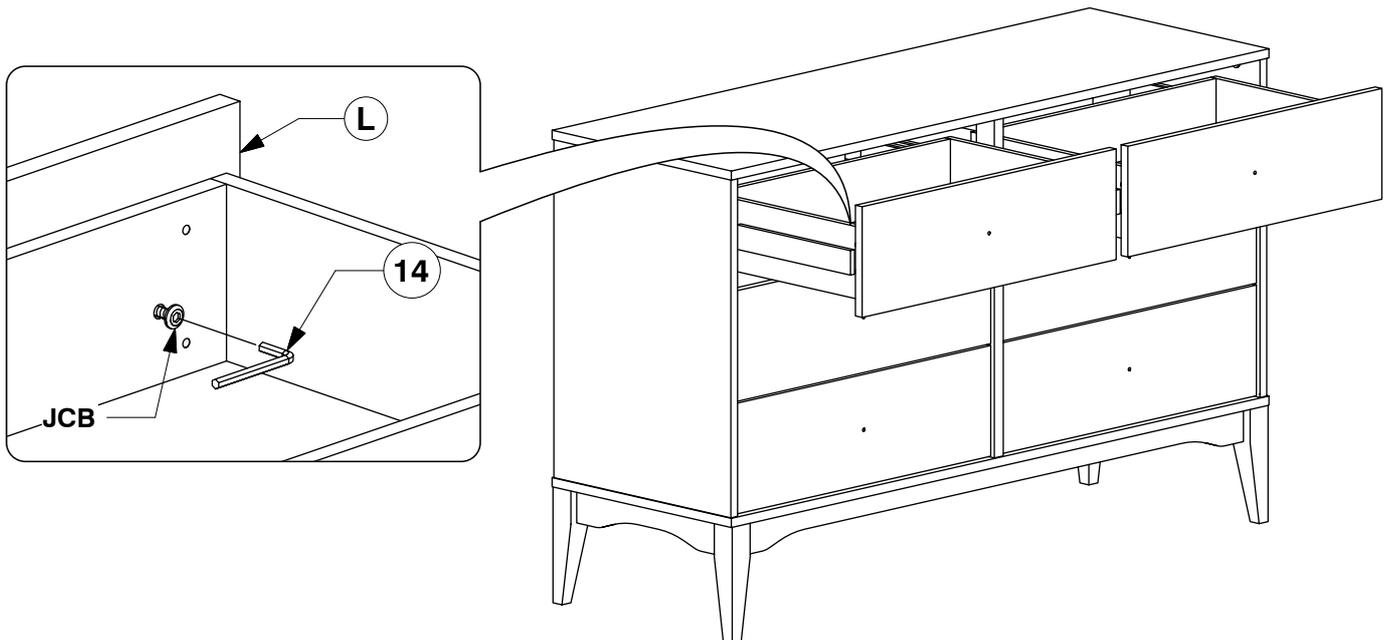


9002 6 Drawer Dresser

Assembly Instructions

WI-1220

- 18** After the Drawer Faces (L) are aligned, secure with wood screws.

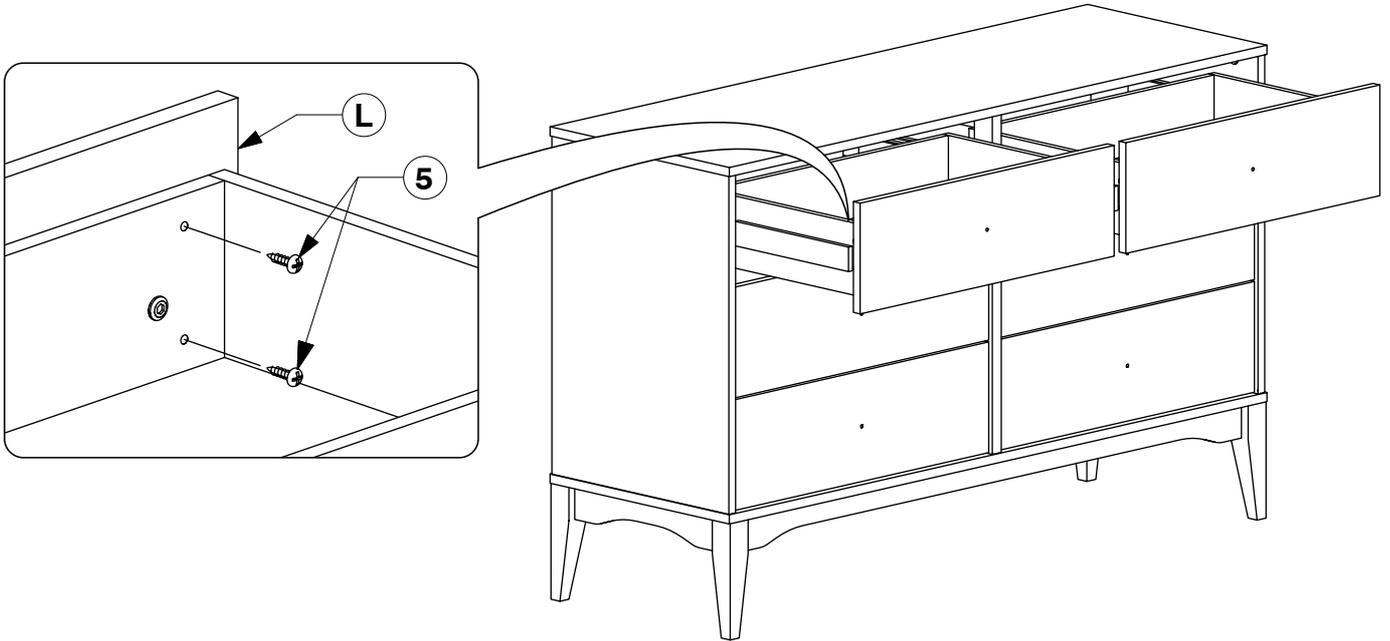

- 19** Finally, fit the Handle to the Drawer Face (L).

