






# Night stand

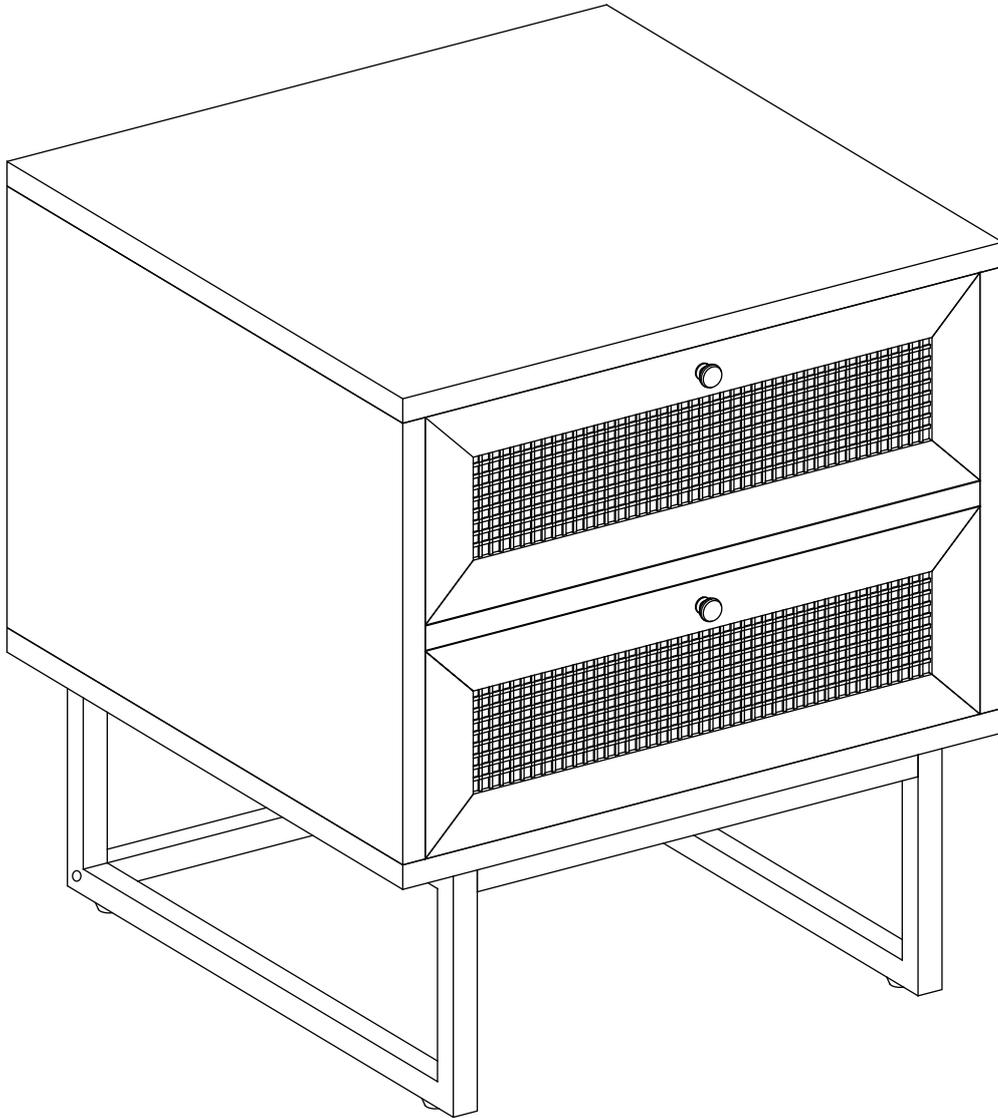


## ASSEMBLY INSTRUCTION

Date last updated:05-07-2022


# HARDWARE LIST

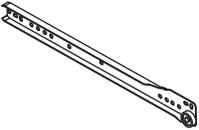A		B		C		D	
14PCS	 Ø6x35mm	14PCS	 Ø15x10mm	10PCS	 Ø6x30mm	2 PCS	
E		F		G		CL	
12PCS	 Ø4x35mm	24PCS	 Ø3x12mm	4 PCS		2 PCS	 L300mm
CR		DR		DL		H	
2PCS	 L300mm	2PCS	 L300mm	2PCS	 L300mm	6 PCS	 Ø6x30mm
I		J		K		L	
1 PC	 M4mm	4 PCS		4 PCS	 Ø3x16mm	4 PCS	 Ø6x25mm


**PARTS LIST**

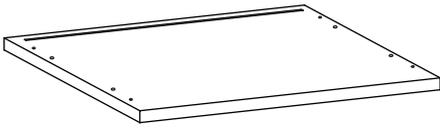


1 - 1 PC

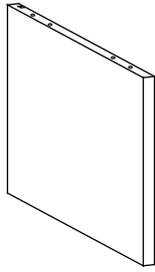


2 - 1 PC

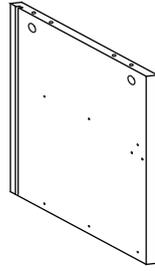

3 - 1 PC

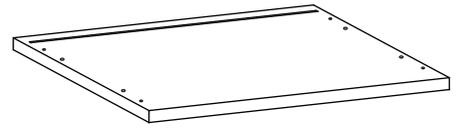


4 - 1 PC

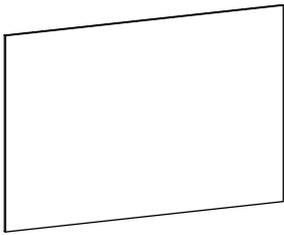


5 - 1 PC




6 - 3 PCS

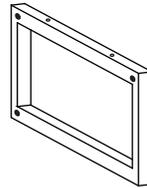


7 - 2 PCS

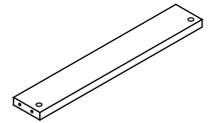


8 - 1 PC

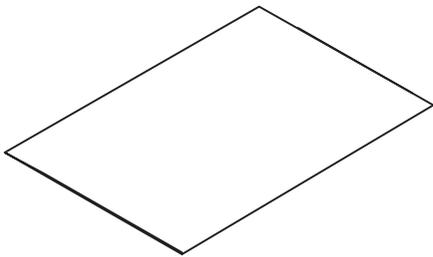


9 - 2 PCS

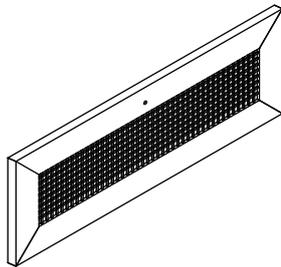


10 - 2 PCS

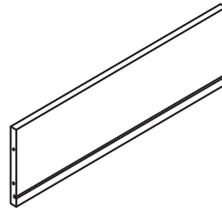

11 - 2 PCS

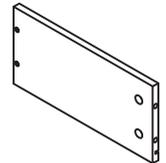

12 - 2 PCS

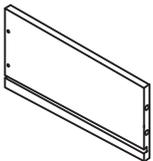


13 - 2 PCS

# ASSEMBLY STEPS

## STEP 1.

Insert quickfit screws (A) into part 1 and parts 10.


Fix handles to parts 10 using screws (D), as shown.

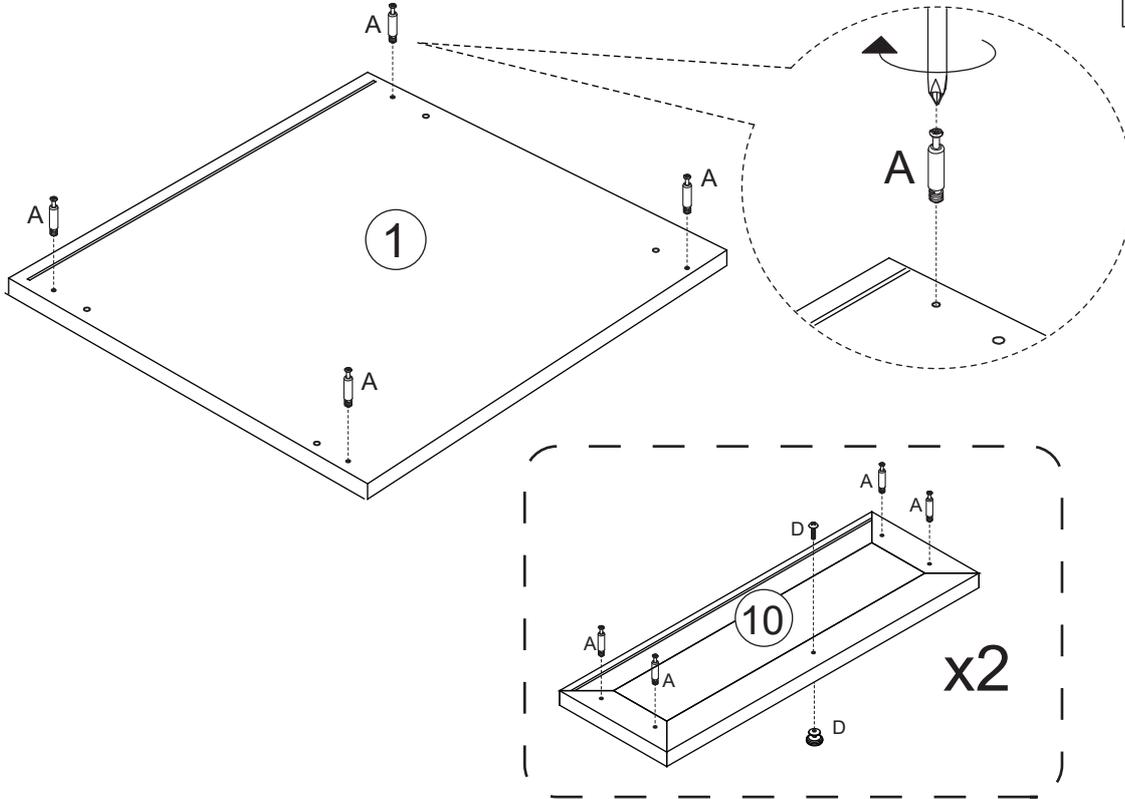

## STEP 2.

Fix parts 12 and 13 to parts 11 using screws (E).


Both drawers are installed in this way.

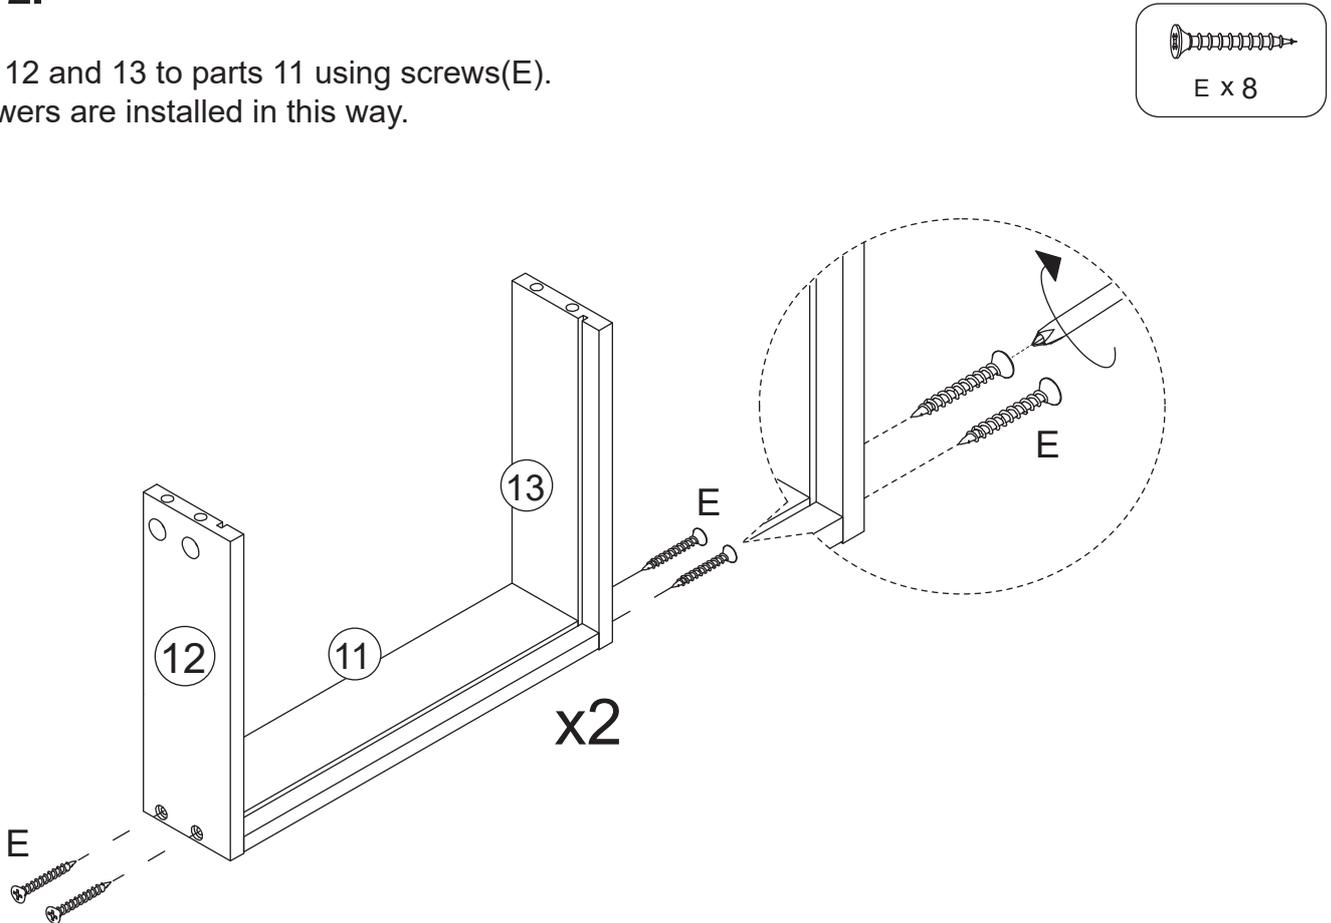

# ASSEMBLY STEPS


## STEP 3.

Slide part 9 into grooves between parts 11, 12 and 13.  
Both drawers are installed in this way.

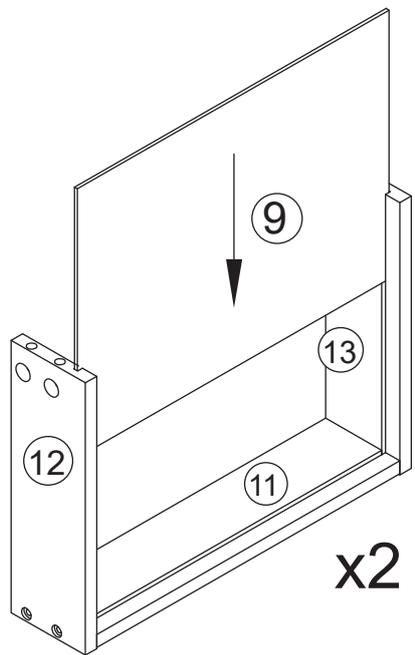

## STEP 4.

Insert cam locks(B) into parts 13 and 12.  
Fit parts 10 to assembled unit, as shown.  
Turn cam locks clockwise to tighten.






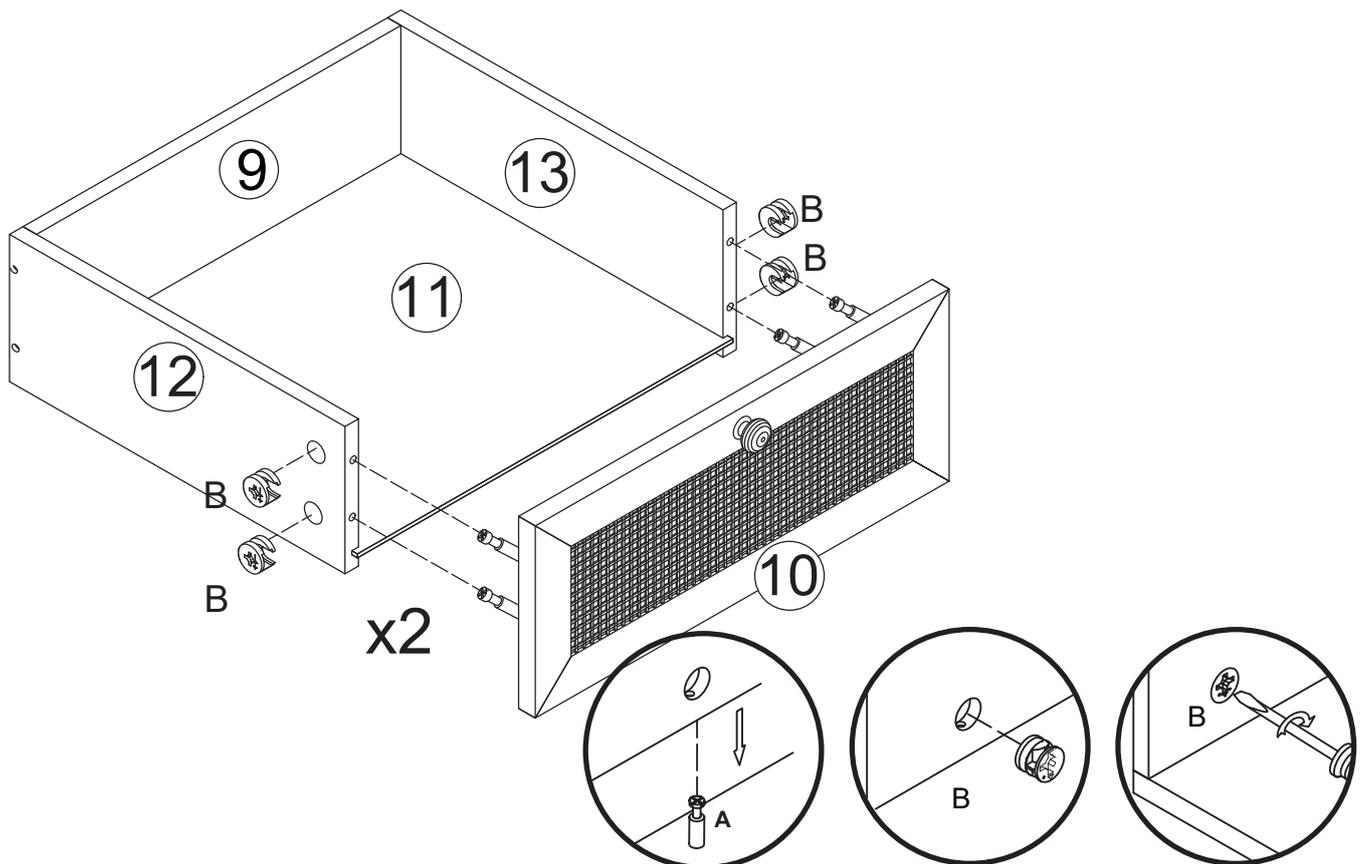




# ASSEMBLY STEPS







## STEP 7.

Insert cam lock (B) and wooden dowel (C) into part 8.  
Fit part 8 to part 3, as shown.  
Turn cam lock clockwise to tighten.

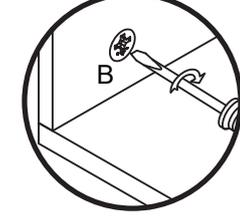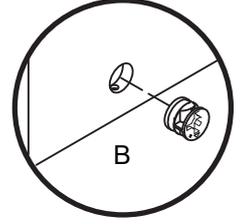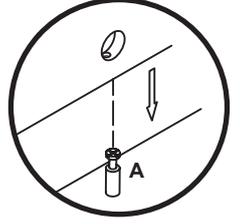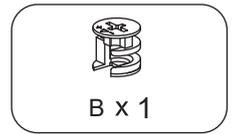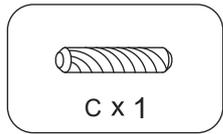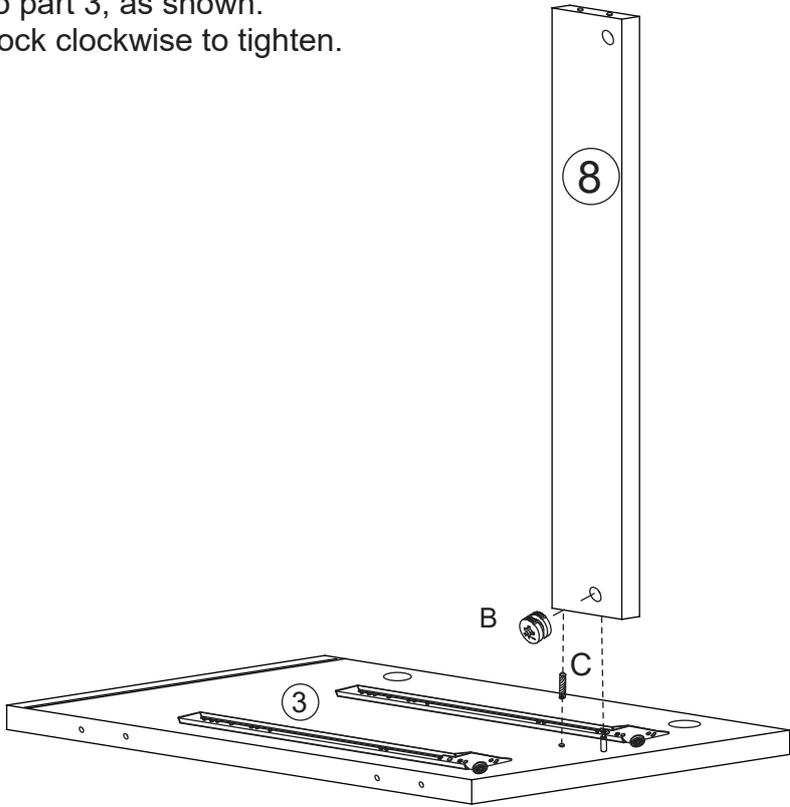

## STEP 8.

Insert cam lock (B) and wooden dowel (C) into part 8.  
Fit part 2 to part 8, as shown.  
Turn cam lock clockwise to tighten.

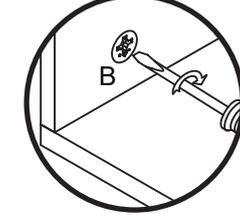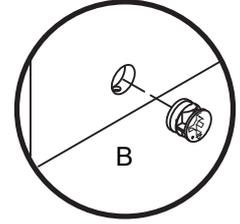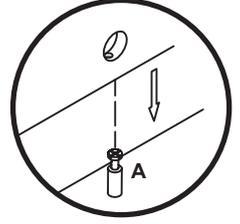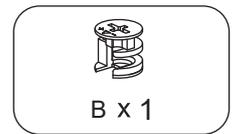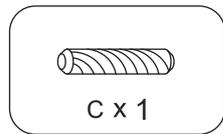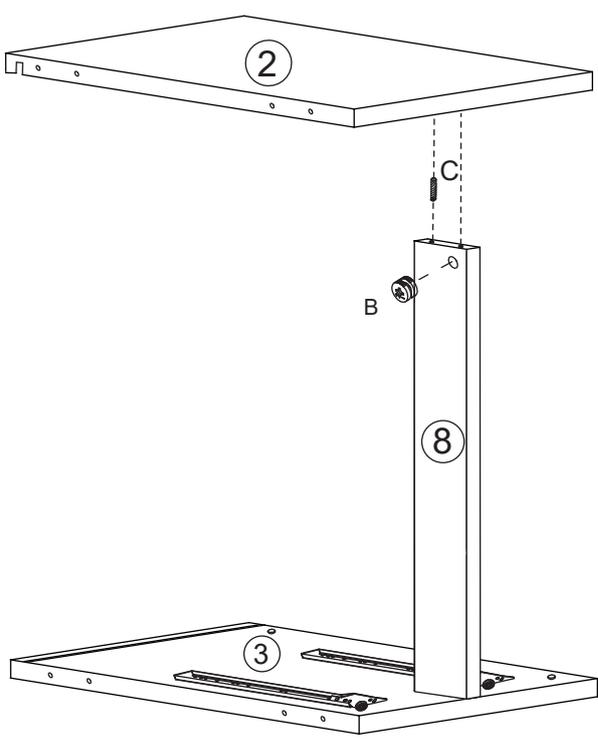

## ASSEMBLY STEPS






### STEP 9.

Insert wooden dowels (C) to part 1.

Insert cam locks (B) into part 2 and part 3.


Fit parts 2 and 3 to part 1.

Turn cam locks clockwise to tighten, as shown.

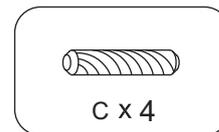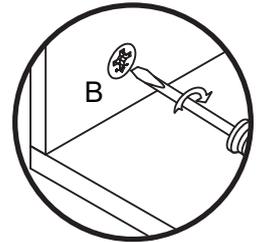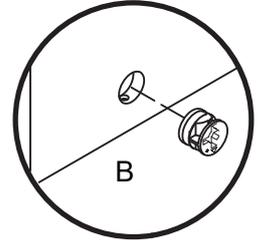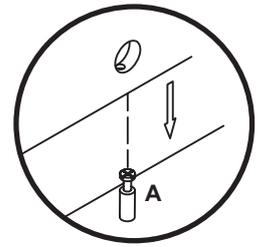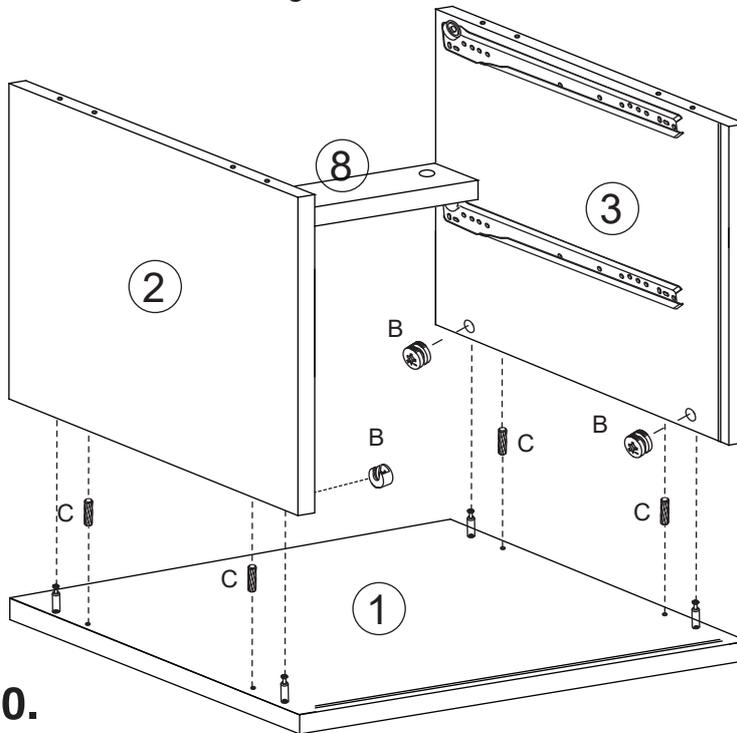

### STEP 10.

Slide part 5 into grooves between parts 1, 2 and 3, as shown.


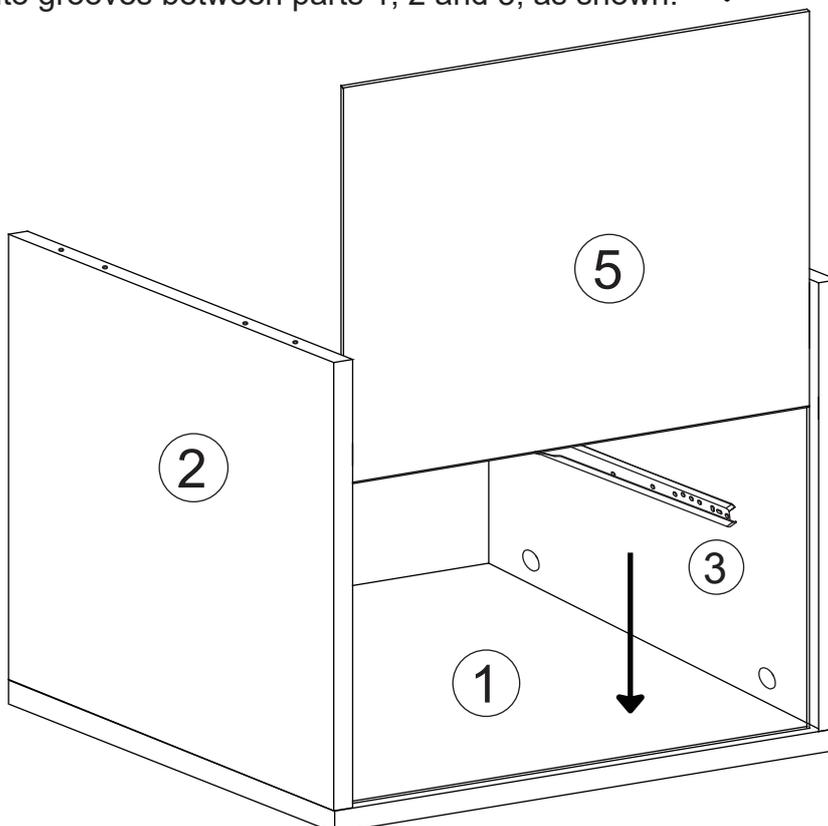


# ASSEMBLY STEPS

## STEP 11.

Insert wooden dowels (C) to part 2 and 3.



Fix part 4 to parts 2 and 3 using screws (E), as shown.

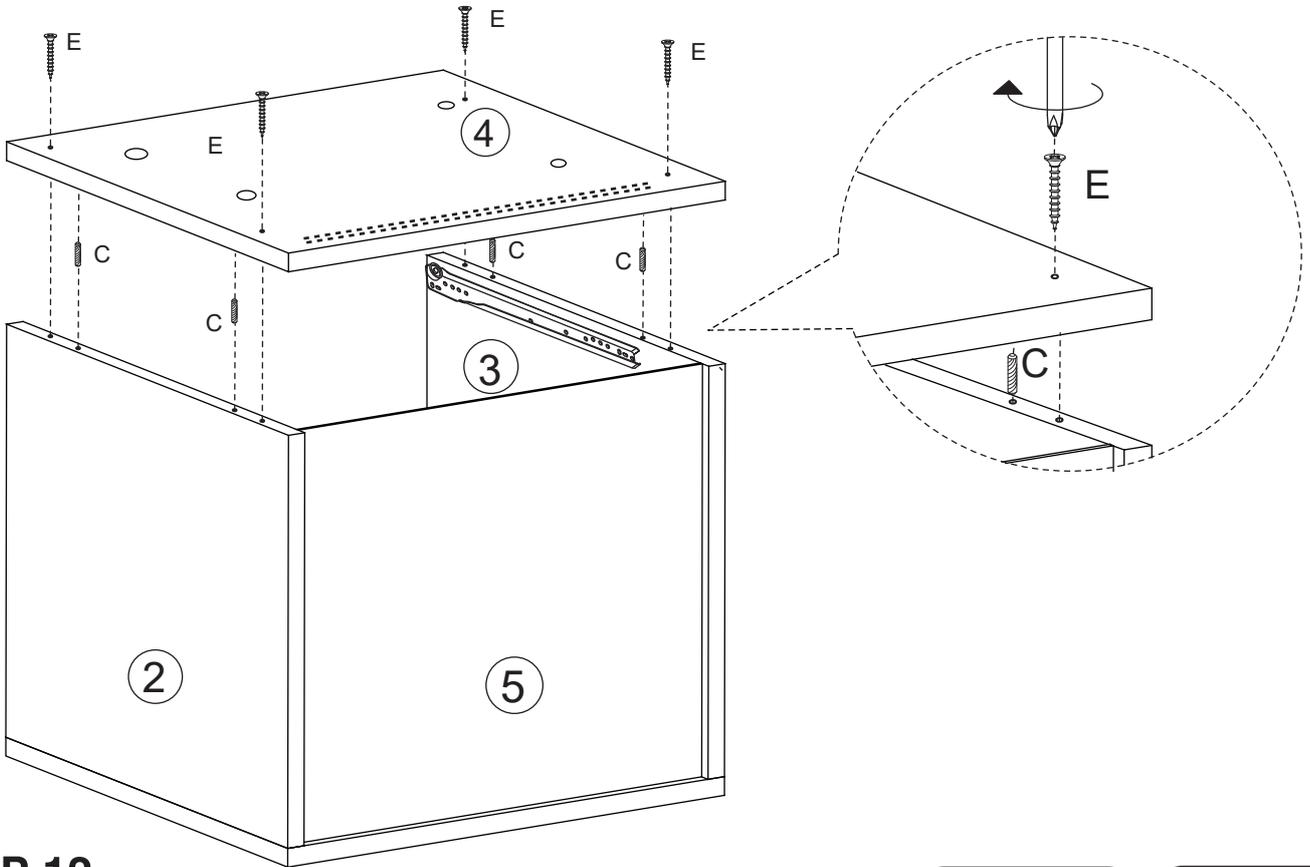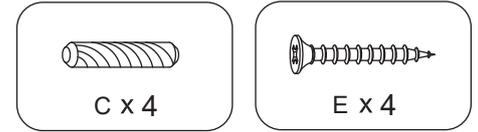

## STEP 12.

Fix part 7 to parts 6 using screws (H).



Turn Allen key (I) clockwise to tighten, as shown.

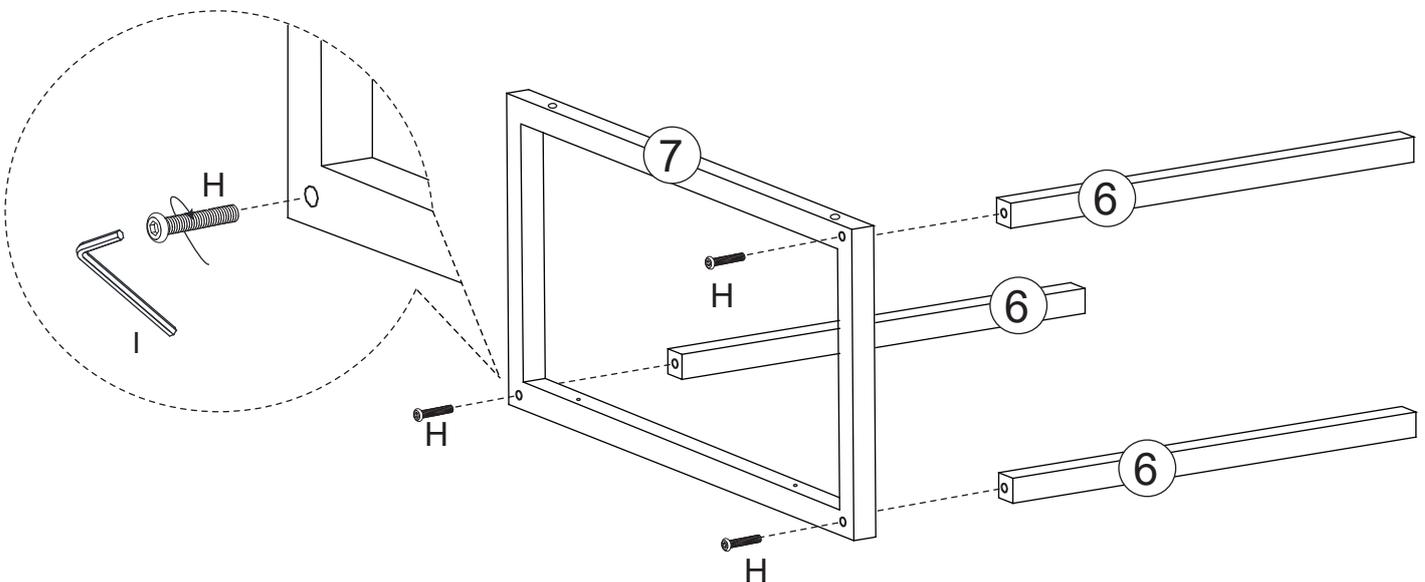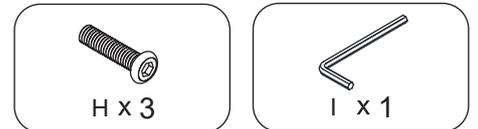

## ASSEMBLY STEPS


### STEP 13.

Fix part 7 to parts 6 using screws (H).  
Turn (I) clockwise to tighten, as shown.

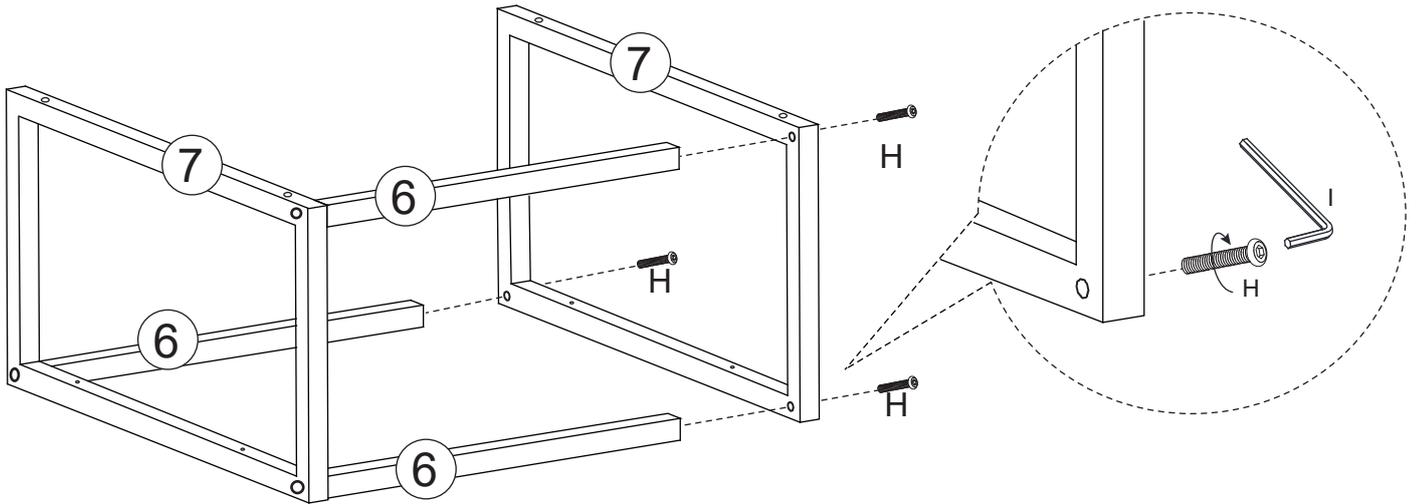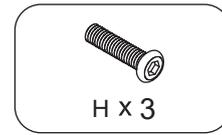

### STEP 14.


Insert Foot nails (G) to parts 7, as shown.

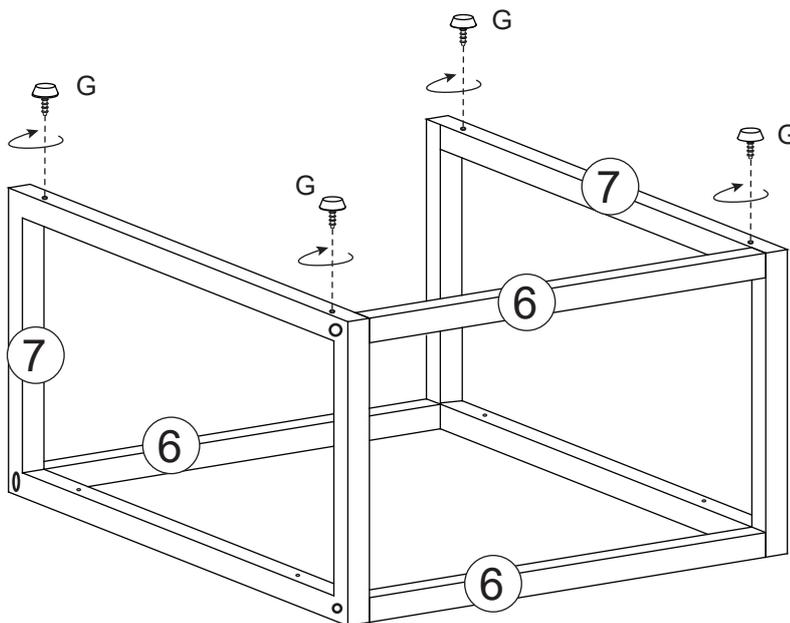

# ASSEMBLY STEPS




## STEP 15.

Fix Iron frame to assembled unit using screws (L).  
Turn Allen key (I) clockwise to tighten, as shown.

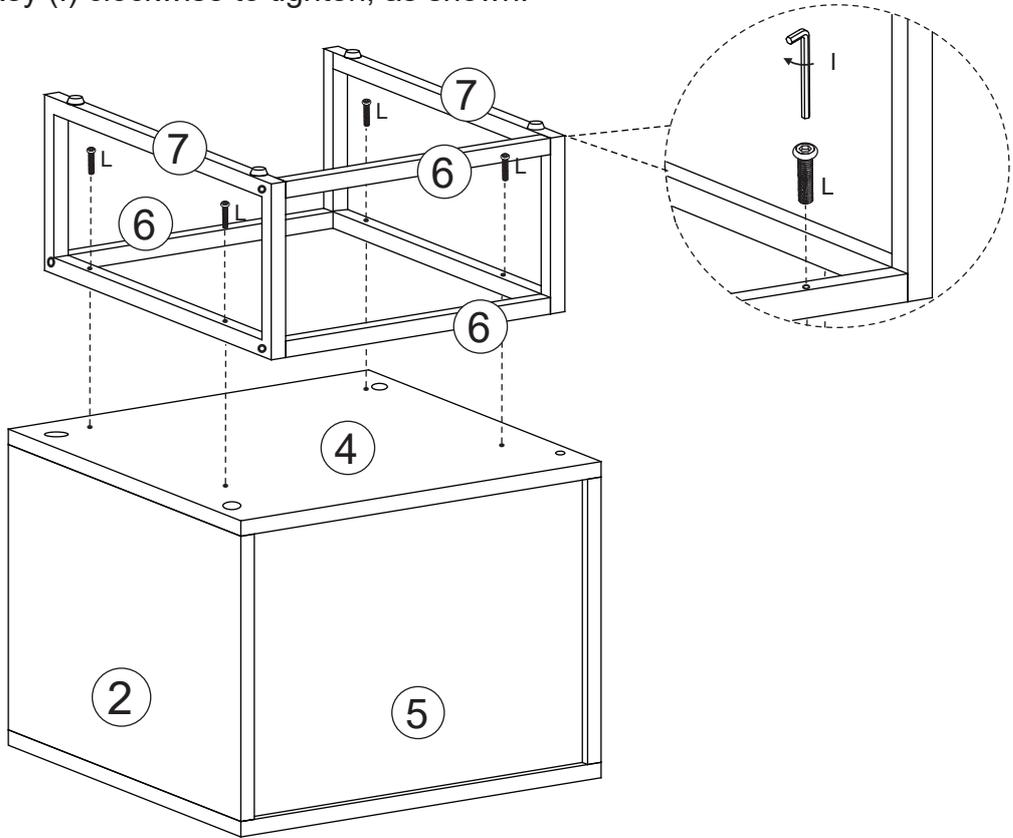

## STEP 16.



Fix corner brackets (J) to part 5 using screws (K), as shown.

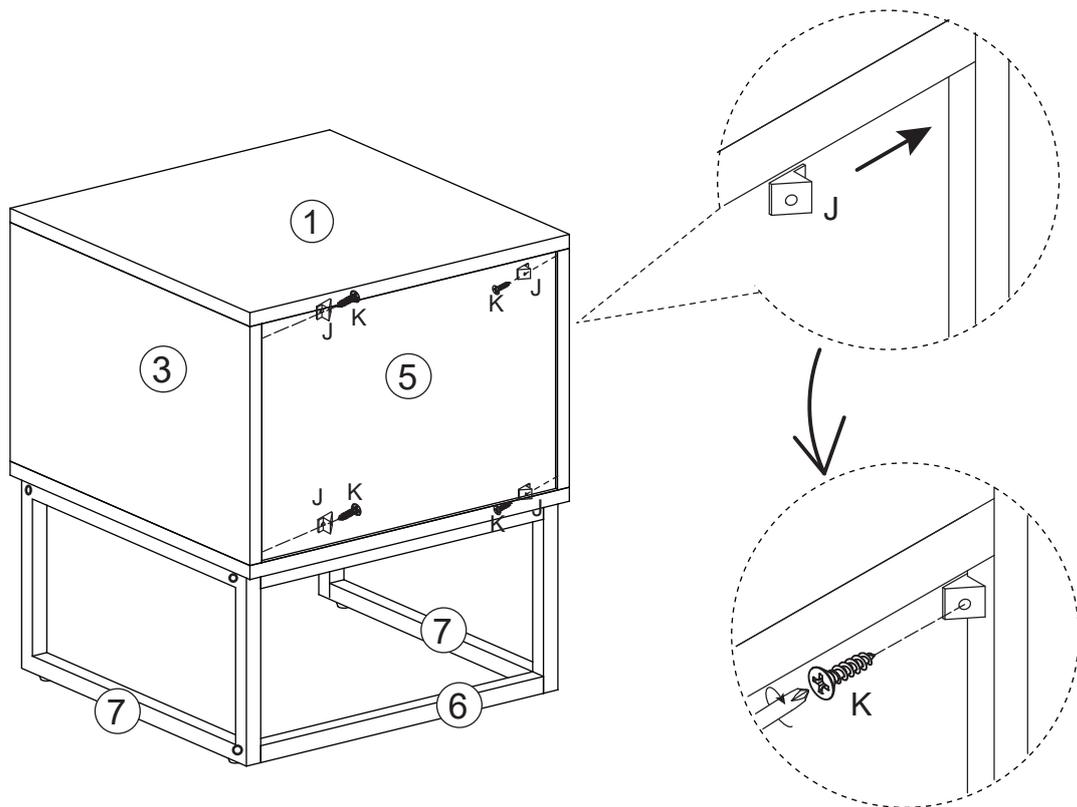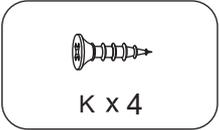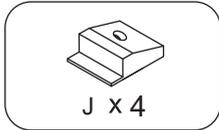

# ASSEMBLY STEPS

## STEP 17.

Fit drawers into the assembled unit, as shown.

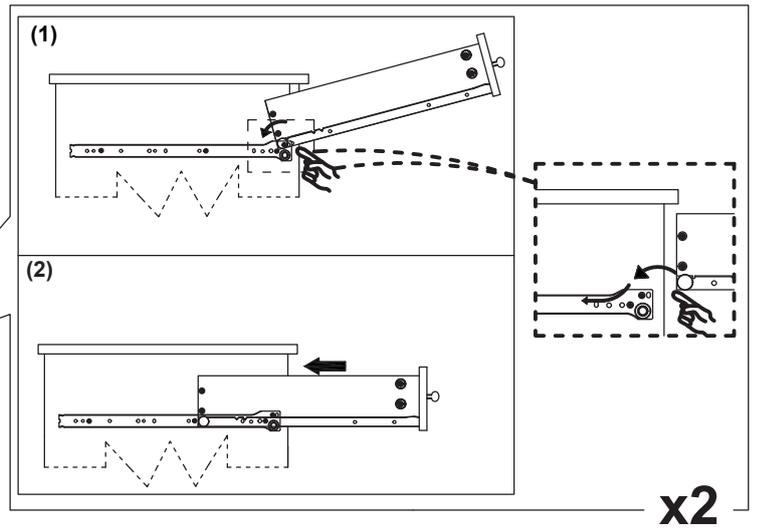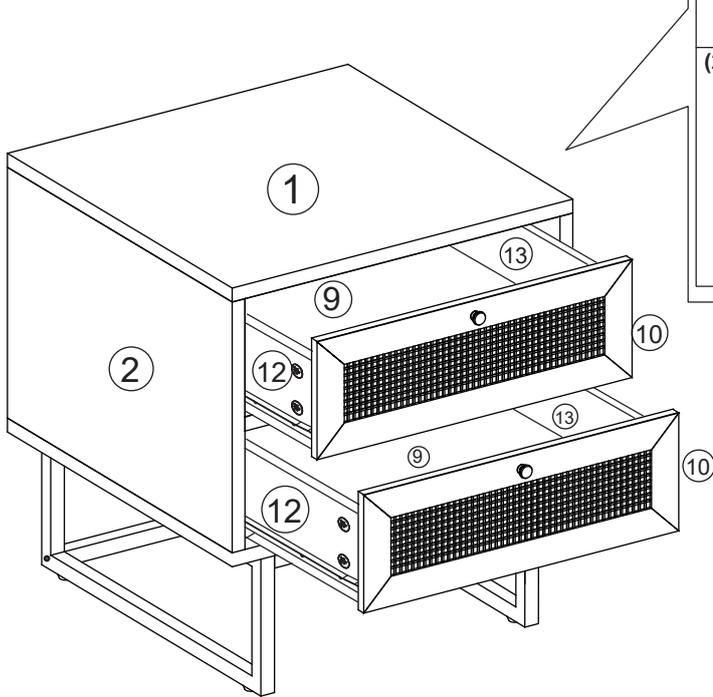

## STEP 18.

Your night stand is ready for use.

