



ASSEMBLY INSTRUCTION

SLAW 1414-010 DRESSER - SKU# 32114148






SLAW 1414-030 MIRROR - SKU# 32214140

Manufactured by SLAW for Rooms To Go



Version#1 - 04/15/2025

*** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly



PARTS LIST OF 1414-010

No.	Description	Sketch	Q'ty
1	Dresser		1Pc
2	Front Legs		2Pcs
3	Back Left Leg		1Pc
4	Back Right Leg		1Pc
5	Center Leg		1Pc


PARTS LIST OF 1414-030

No.	Description	Sketch	Q'ty
6	Mirror		1Pc
7	Mirror Brackets		2Pcs


HARDWARE LIST OF 1414-010

No.	Description	Size	Sketch	Q'ty
A	Allen Key	4mm		1Pc
B	Furniture Tipping Restraint			1 Set

HARDWARE LIST OF 1414-030

No.	Description	Size	Sketch	Q'ty
A	Allen Key	4mm		1Pc


TOOL REQUIRED (NOT PROVIDED)

Description	Sketch
Phillip Screwdriver	

STEP 1: Take the feet box out of the bottom drawer. Use allen key (A) to assemble 4 Legs (Front & Back) in the correct position under dresser. Attach center leg to bottom (see illustration below). Do not tighten all bolts until the dresser is fully assembled.

STEP 2: Use allen key (A) to screw in pre-installed bolts on Mirror Brackets to attach Mirror to Dresser. Do not tighten all bolts until the mirror is fully assembled.

STEP 3: Position the dresser in its desired location. Refer to the assembly instructions of anti-tipping kit to secure the dresser to the wall. If any feet are not firmly touching the ground, unscrew adjustable levelers on 2 front legs and center leg until the dresser is stable.

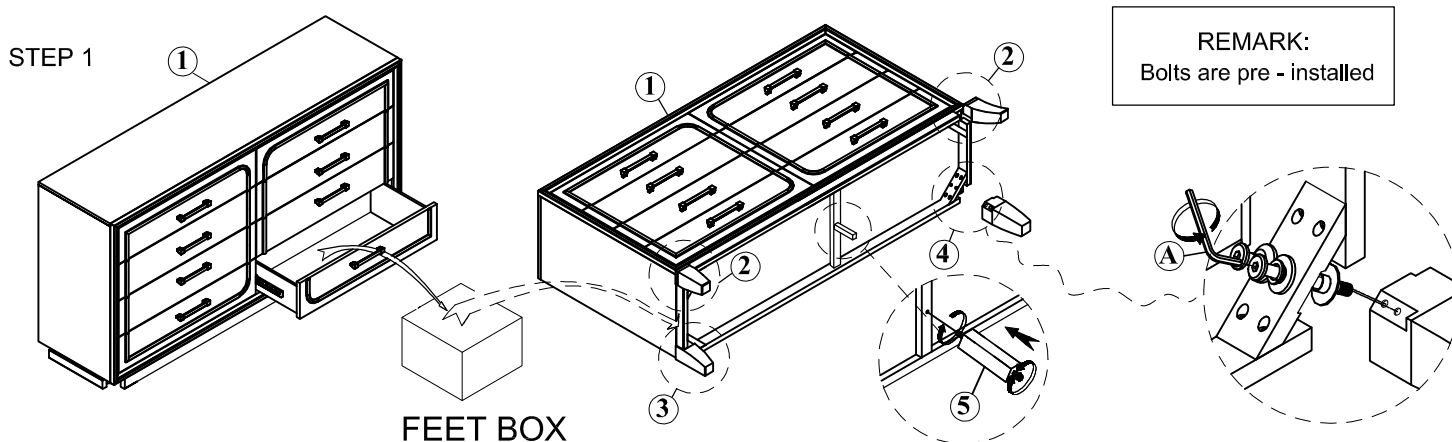

Hardware Pack Location (S): 1414-010 DRESSER - SKU# 32114148
1414-030 MIRROR - SKU# 32214140



ASSEMBLY INSTRUCTION

SLAW 1414-010 DRESSER - SKU# 32114148


SLAW 1414-030 MIRROR - SKU# 32214140

Manufactured by SLAW for Rooms To Go


Version#1 - 04/15/2025

*** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly

STEP 2

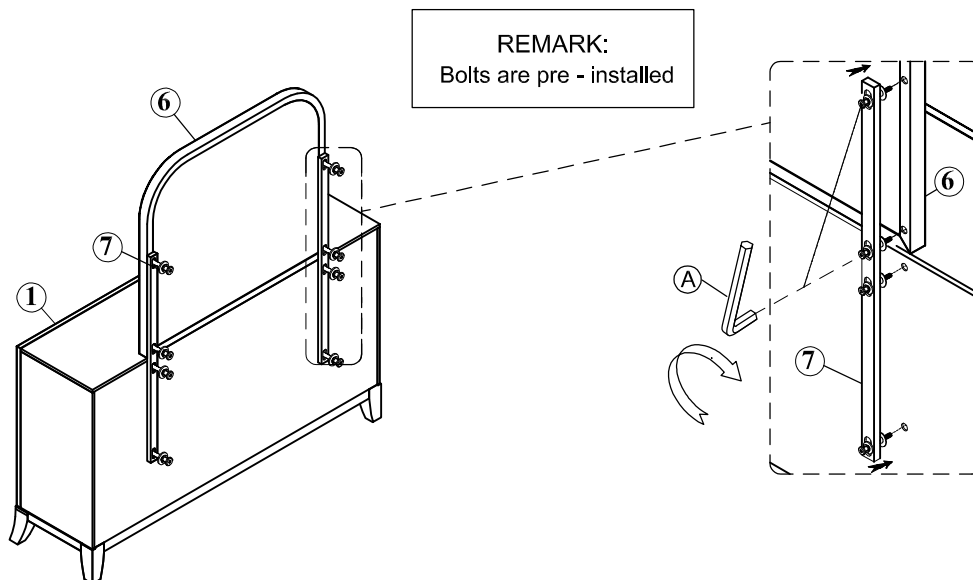

STEP 3

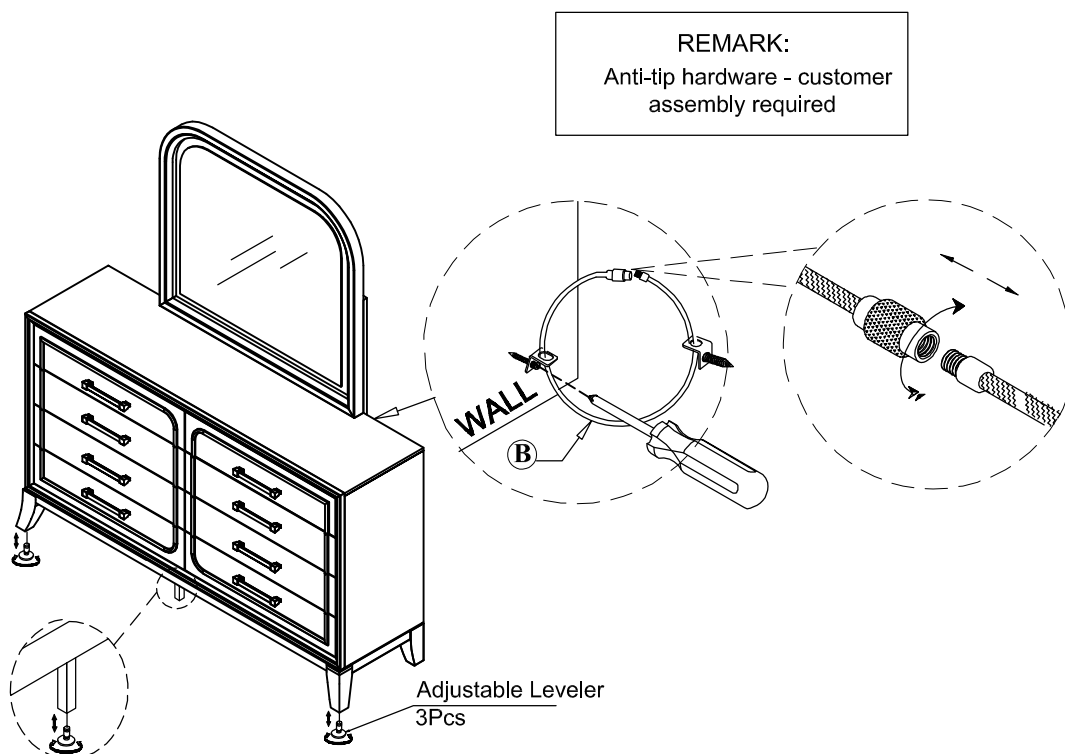

Hardware Pack Location (S): 1414-010 DRESSER - SKU# 32114148
1414-030 MIRROR - SKU# 32214140