



PNWD

# Assembly Instructions

Manufactured for  
Rooms To Go


B1533-M  
B1533-D

MIRROR  
DRESSER


SKU# 32215332  
SKU# 32115330

Step	Code	Hardware	Q'TY
	A	Allen Key	1 Pc
1	B	Bolt 1/4" x 25 x 1 1/2"	8 Pcs
		Spring Washer 1/4" dia.	
		Flat Washer 1/4" dia.	


## PARTS LIST

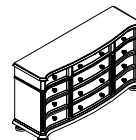


1. Dresser - 1 Pc



2. Mirror - 1 Pc






3. Mirror Support - 2 Pcs

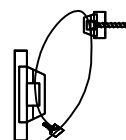

4. Anti-tip Restraint - 1 Set

Tool Required: Philip screwdriver  
(not provided)

STEP1:

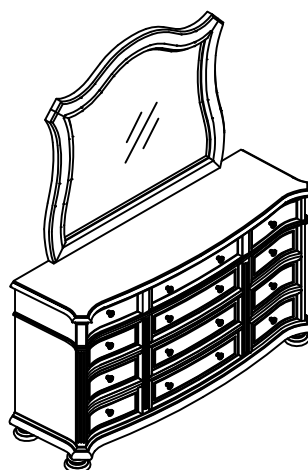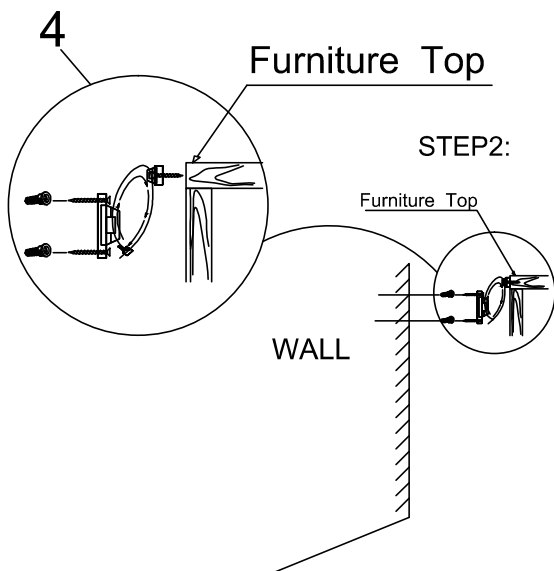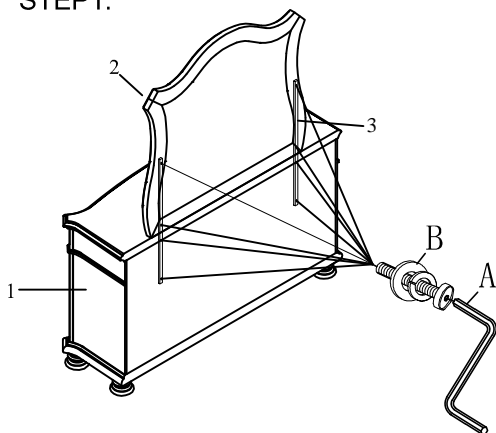

HARDWARE PACK LOCATION(S):

PNWD

B1533-M

MIRROR

SKU# 32215332