

Assembly Instructions

NAJA

1976-1
1976-2

DRESSER
MIRROR





#SKU 32119768
#SKU32219760




Version#1-2025/10/28

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the **HARDWARE LIST** below.

Caution : Please read instructions thoroughly before unpacking assembly parts.


1. We recommend that you should assemble this product with the assistance of another person ; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Please put all parts on a non - abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.
3. Do not tighten all bolts until the assembly is completed.

HARDWARE LIST			
1		ALLEN KEY (L57 * 4MM)	1
2		Ø1/4"-12*35mm(L) Allen Bolt (Pre - attached)	8
		Ø1/4"-13mm Spring washer (Pre - attached)	8
		Ø1/4"-19mm Flat washer (Pre - attached)	8
3		Anti tipping kits	1
TOOLS REQUIRED (NOT PROVIDED)			
Description		Sketch	
Phillips screwdriver			


NO.	PARTS LIST		Q' ty
A		Dresser (SOLD SEPARATELY)	1
B		Mirror	1
C		Mirror Support	2

STEP: 1

Assembly mirror (B) and mirror back support (C) to the dresser (A) using JCBC Screw with captured.

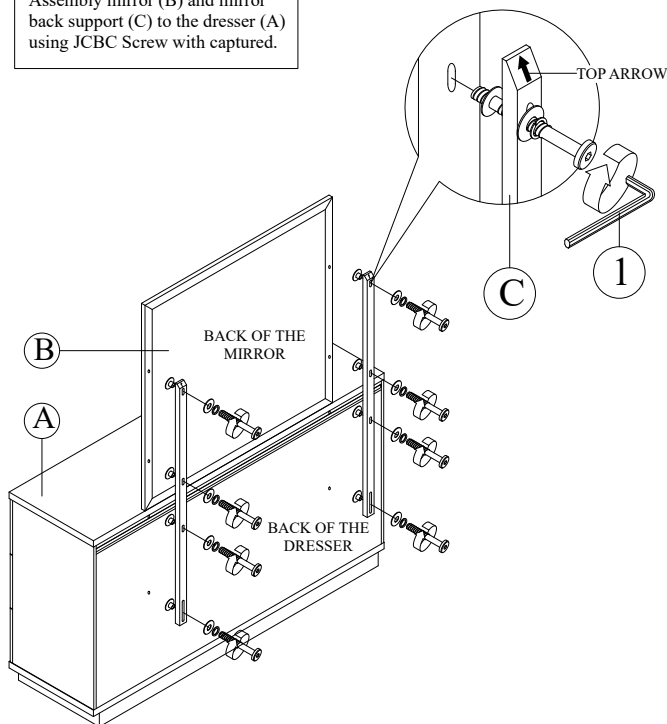

★Remark:
Anti-tip hardware must be installed by customer
Anti-tipping hardware attached to the back panel

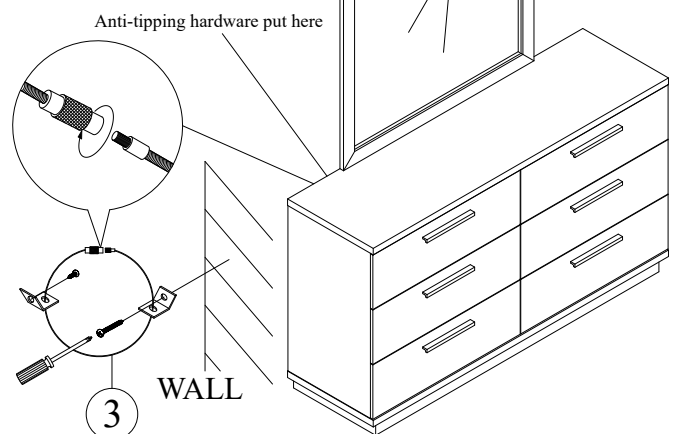

Notes: All JCBC Screw (M6 x 35mm) with Capture are pre-install onto the mirror support

COMPLETED

Hardwre pack Location(s):

NAJA

1976-1
1976-2

DRESSER
MIRROR

#SKU 32119768
#SKU32219760

MADE IN MALAYSIA