





Assembly Instructions

BFGP 3199-131 9 DRAWER DRESSER - SKU# 32131992

Manufactured by BFGP for Rooms To Go

VERSIONS# 1 - 07/06/2024


STEP	CODE	HARDWARE		Q'TY
3	1		Furniture Tipping Restraint (Not Included screwdriver)	1SET
	2		Allen Key 4mm	1PC

PLEASE NOTE:


To avoid the possibility of the furniture tipping and injury, the Anti-tip hardware must be installed.




PART LISTS

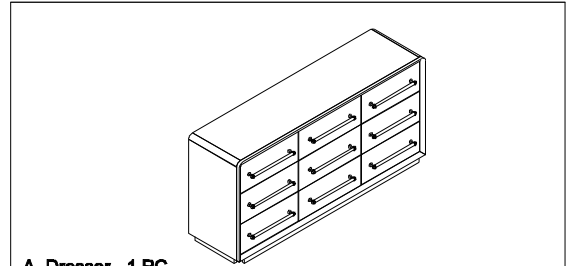

A. Dresser - 1 PC

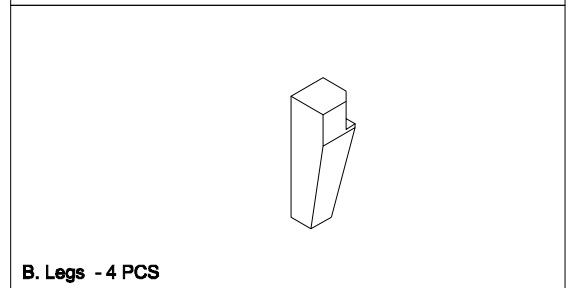

B. Legs - 4 PCS

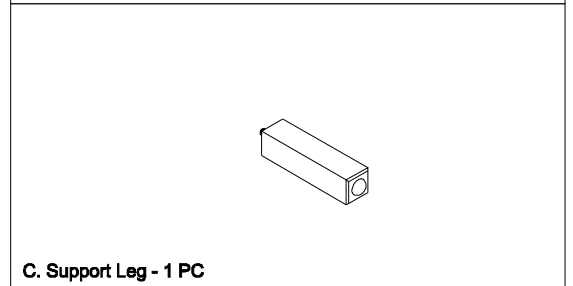

C. Support Leg - 1 PC

Hardware Pack Location (s):BFGP 3199-131 9 DRAWER DRESSER - SKU# 32131992

MADE IN VIETNAM

1 OF 2



Assembly Instructions


BFGP 3199-131 9 DRAWER DRESSER - SKU# 32131992

Manufactured by BFGP for Rooms To Go


VERSIONS# 1 - 07/06/2024

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

STEP 1: Legs are in the bottom. Remove Legs (B) from inner box.

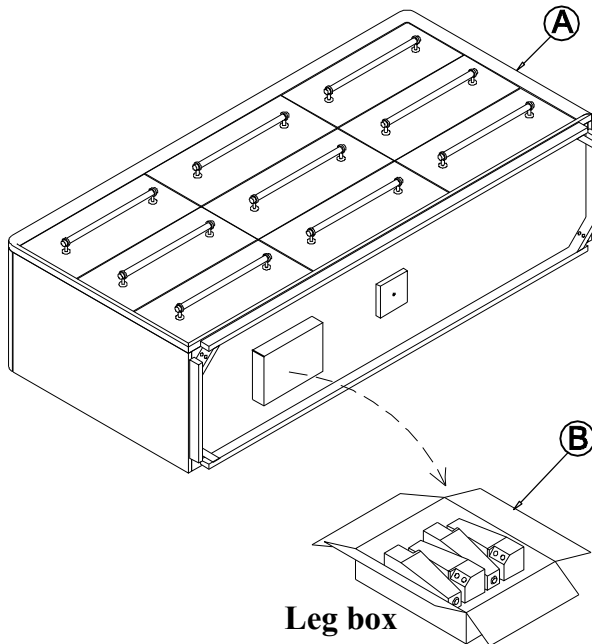

STEP 2: Assemble the Legs (B) (C) to the Dresser (A) as shown.

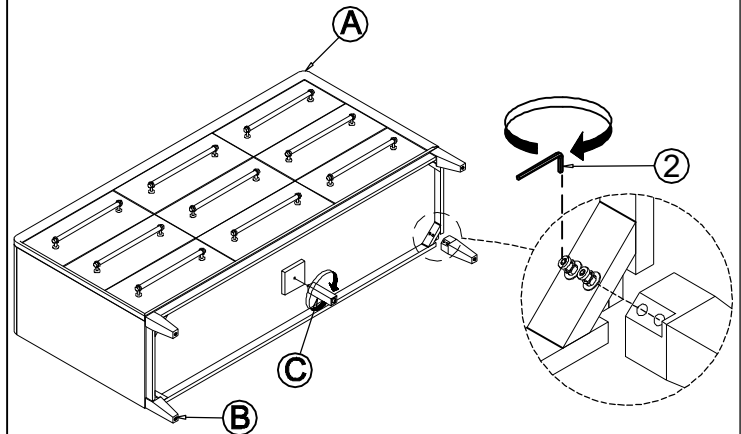


NOTE:
The bolts were
pre-installed on Dresser (A)

STEP 3: Move the Dresser into final position and use tipping restraint attach to wall. Insert the screw (1) by using the screwdriver.

***Not included**

REMARK:
Anti-tip hardware -customer
assembly required

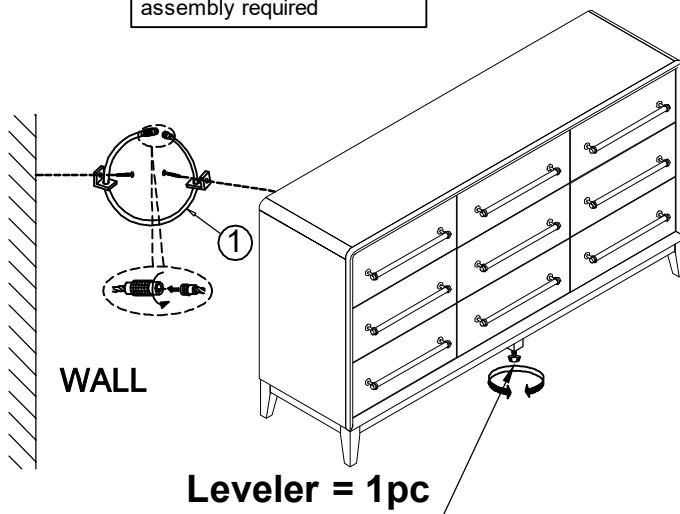

COMPLETED

WALL

Hardware Pack Location (s): BFGP 3199-131 9 DRAWER DRESSER - SKU# 32131992

MADE IN VIETNAM

2 OF 2