

Assembly Instructions


BFGP 3399-140 RECTANGLE WOOD MIRROR SKU# 32233998
BFGP 3399-132 BREAKFRONT DRESSER SKU# 32133996

PART LISTS


STEP		HARDWARE		Q'TY
2	A		Furniture Tipping Restraint (Not included screwdriver)	1 SET
	B		Allen key 4mm	1PC




1. Breakfront dresser - 1 PC
(Sold separately)

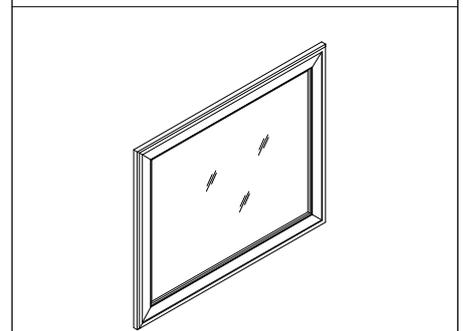

2. Rectangle wood mirror - 1 PC

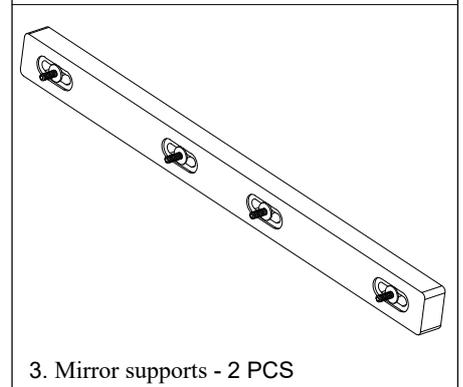

3. Mirror supports - 2 PCS

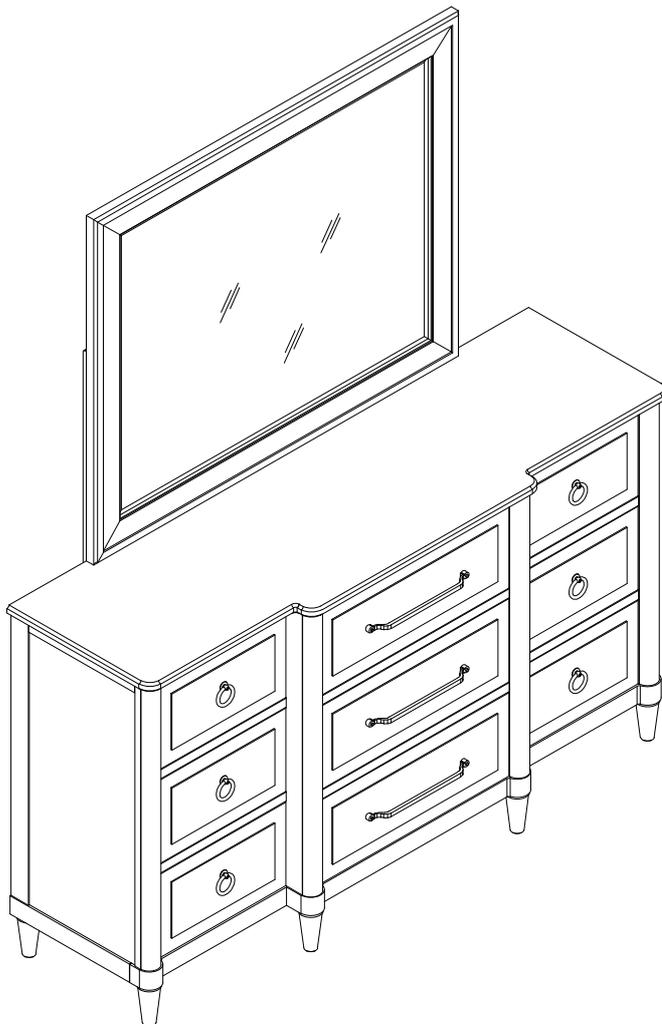

Hardware Pack Location (s):
BFGP 3399-140 RECTANGLE WOOD MIRROR
SKU# 32233998

Assembly Instructions

BFGP 3399-140

RECTANGLE WOOD MIRROR

SKU# 32233998


BFGP 3399-132

BREAKFRONT DRESSER

SKU# 32133996


***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damage during the assembly.

STEP 1: Place the Rectangle Wood Mirror (2) on the top of Breakfront Dresser (1) and align the center line of mirror and dresser as shown. Assemble the wooden Mirror Supports (3) to the dresser with 4 pcs bolt, 4 pcs flat washer and 4 pcs spring washer tighten using Allen key (B).

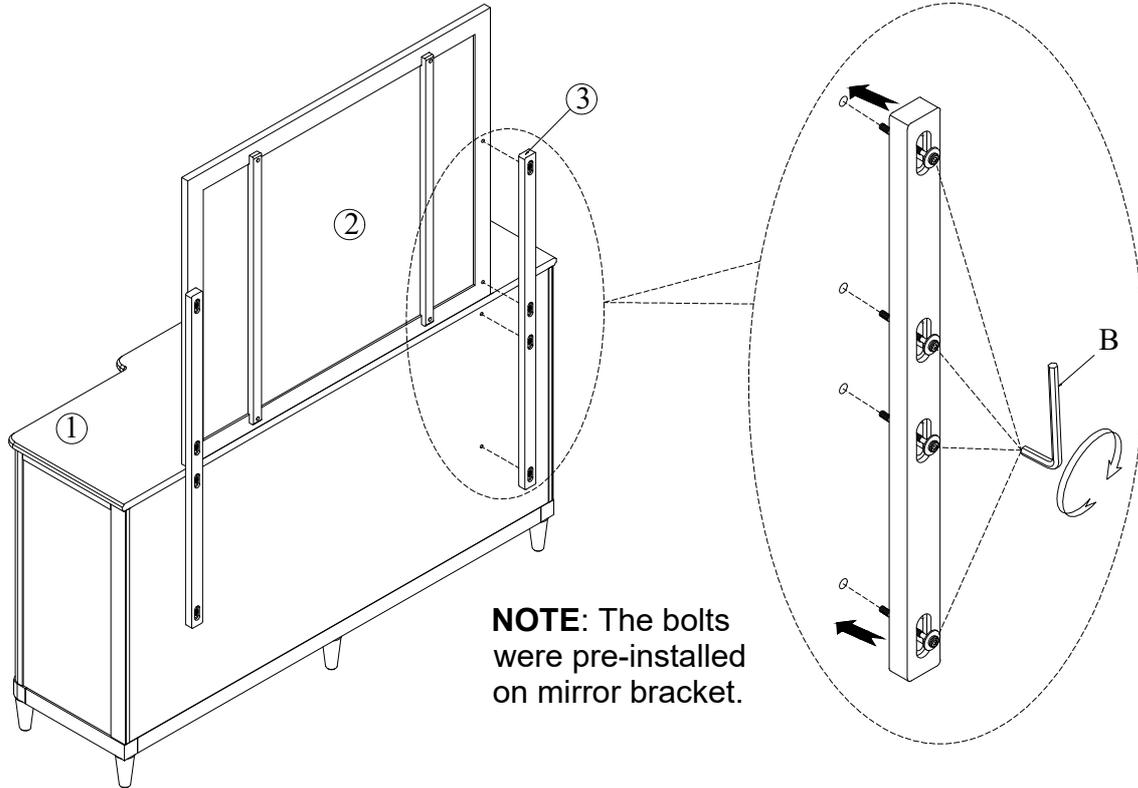


STEP 2: Move the Breakfront Dresser into final position and use tipping restraint attach to wall. Insert the screw (A) by using the screwdriver.

***Not included**

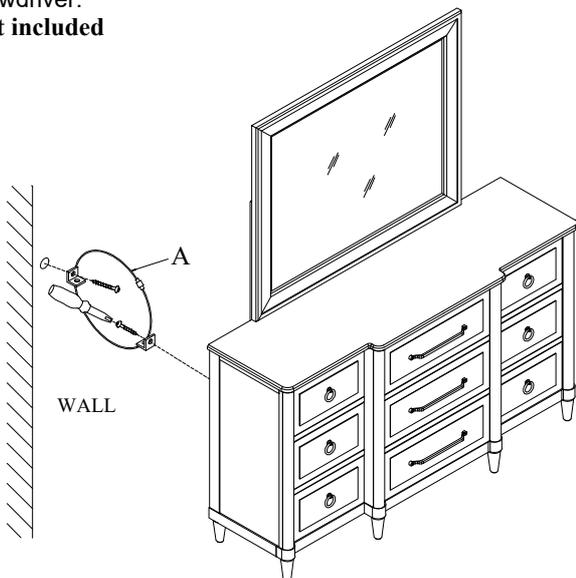

COMPLETED

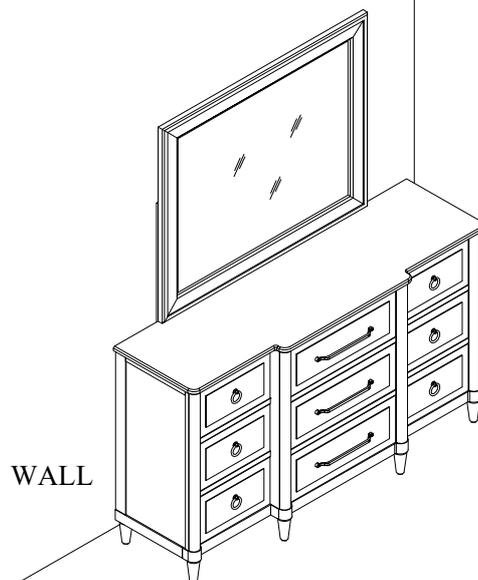

This product is manufactured by BFGP for

ROOMS TO GO

MADE IN VIETNAM

VERSIONS# 1 - 10/21/2023

2 OF 2