




Manufactured for Rooms To Go.

Assembly Instructions for

BFGP 3920-130N	9 DRAWER DRESSER	SKU# 33139204
BFGP 3920-140	MIRROR WITH HARDWARE TO ATTACH TO DRESSER	SKU# 32239205
BFGP 3921-130	9 DRAWER DRESSER-WHT	SKU# 32139215
BFGP 3921-140	MIRROR 47 3/4 X3 X39 W HDWE TO ATTACH	SKU# 32239217

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the **HARDWARE LIST** below.


1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Please do not over tighten screws or bolts until the assembly is completed.
3. Please put all parts on a non - abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

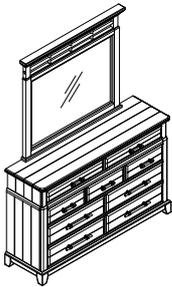

HARDWARE LISTS			
NO.	OUTLOOK	SIZE	Q'TY
A		JCBC Bolt 1/4"*30*1-1/2"	8PCS
		Lock washer 1/4"	8PCS
		Flat washer 1/4"x19mm*1mm	8PCS
B		Allen key 4mm	1PC
C		Tipping restraint (not included screwdriver)	1SET


PART LISTS			
NO.	Sketch	Description	Q'TY
1		DRESSER	1PC
2		MIRROR	1PC
3		MIRROR SUPPORTS	2PCS

STEP 1

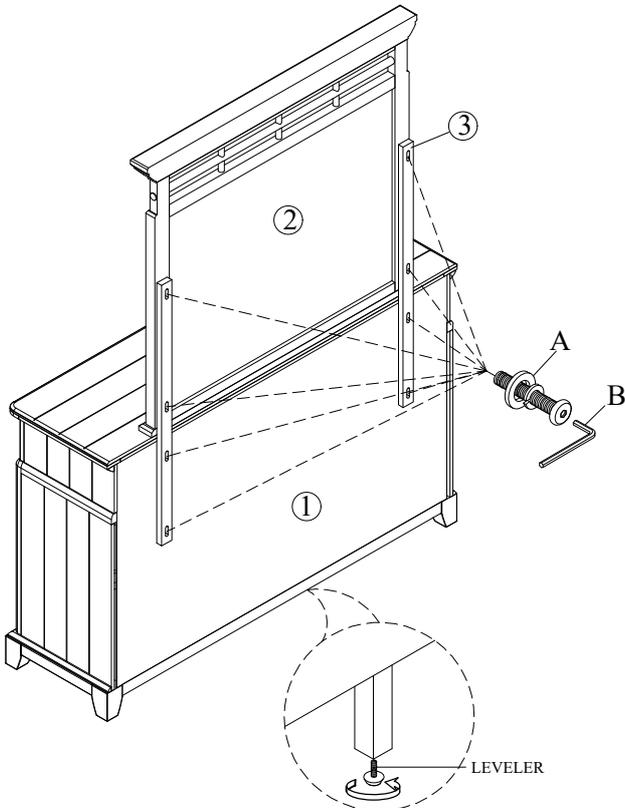


STEP 2

insert the screw (C) by using the screwdriver *Not included
Move the Dresser into final position and use tipping restraint attach to wall

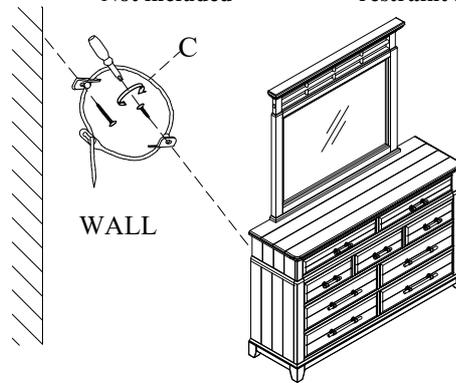

Completed

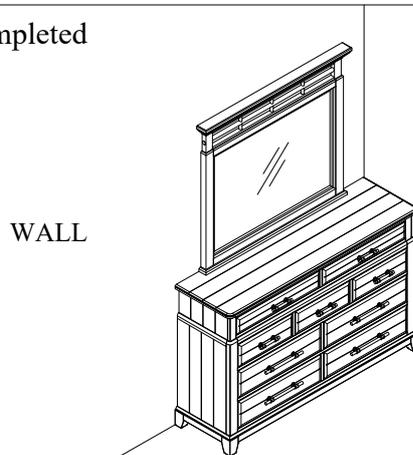

Hardware Pack Location(s):

3920-140	MIRROR WITH HARDWARE TO ATTACH TO DRESSER	SKU# 32239205
3921-140	MIRROR 47 3/4 X3 X39 W HDWE TO ATTACH	SKU# 32239217