

Assembly Instructions


NAJA	4046-1DR	DRESSER	#SKU 32140460
	4045-1DR	DRESSER	#SKU 32140458
	4046-2MR	MIRROR	#SKU 32240462
	4045-2MR	MIRROR	#SKU 32240450

Version#1-2025/09/15

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the **HARDWARE LIST** below.

Caution:Please read instructions thoroughly before unpacking assembly parts.


1. We recommend that you assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.
3. Do not tighten all bolts until the assembly is completed.

HARDWARE LIST			
1		ALLEN KEY (L57 * 4MM)	1
2		BOLT Ø1/4" 20*38 (PRE-ASSEMBLED)	8
		SPRING WASHER Ø1/4" * 13mm (PRE-ASSEMBLED)	8
		FLAT WASHER Ø1/4" * 19mm * 2mm (PRE-ASSEMBLED)	8
		MONEY SNAIL 1/4"* L10*Ø17 (PRE-ASSEMBLED)	8
3		Anti tipping kits	1
TOOLS REQUIRED (NOT PROVIDED)			
Description	Sketch		
Phillips screwdriver			

NO.	PARTS LIST		Q' ty
A		Dresser (SOLD SEPARATELY)	1
B		Mirror	1
C		Mirror Support	2

STEP/PASO: 1


Assemble the mirror into the dresser using bolts to screw into the glass support bar from the back of the dresser

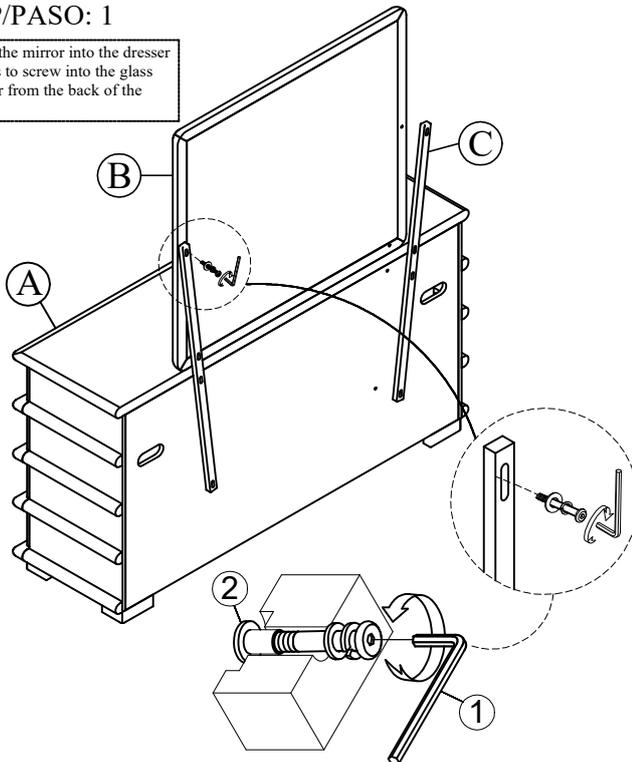

Notes: The bolts were pre-assembled on Mirror Support

★ Remark:

Anti-tip hardware must be installed by customer.
Anti-tipping hardware attached to the back panel.

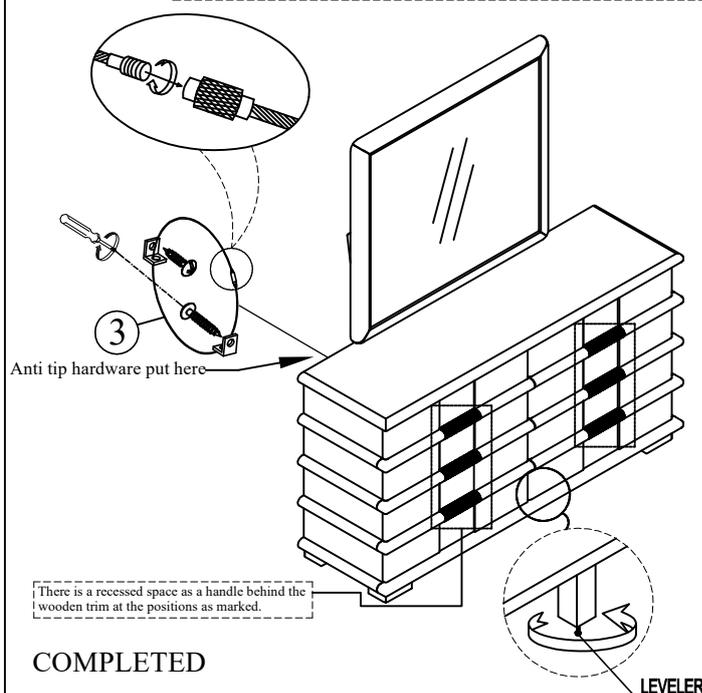

COMPLETED

Hardware pack Location(s):	NAJA	4046-1DR	DRESSER	#SKU 32140460
		4045-1DR	DRESSER	#SKU 32140458
		4046-2MR	MIRROR	#SKU 32240462
		4045-2MR	MIRROR	#SKU 32240450

MADE IN VIETNAM