
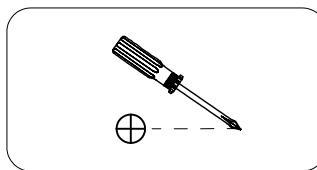
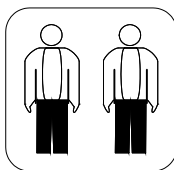


FIBI

Model	4255			
Item	DRESSER - 3 DRAWERS ASSEMBLING			
Code	32142553			
Date	16/01/2023	Rev.	2	

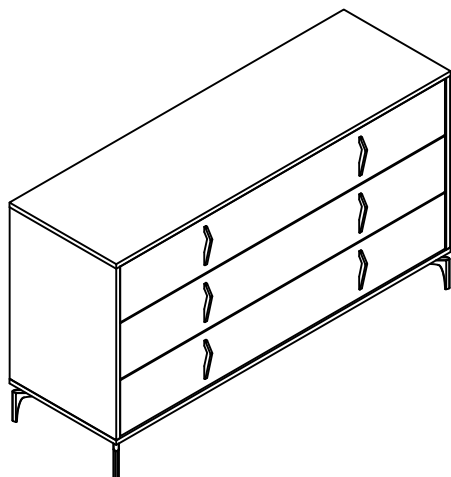


Hardware :

POS.	A	14	NR	POS.	B	4	NR	POS.	C	1	NR
M6 X 25											


1

Open dresser box from the bottom side

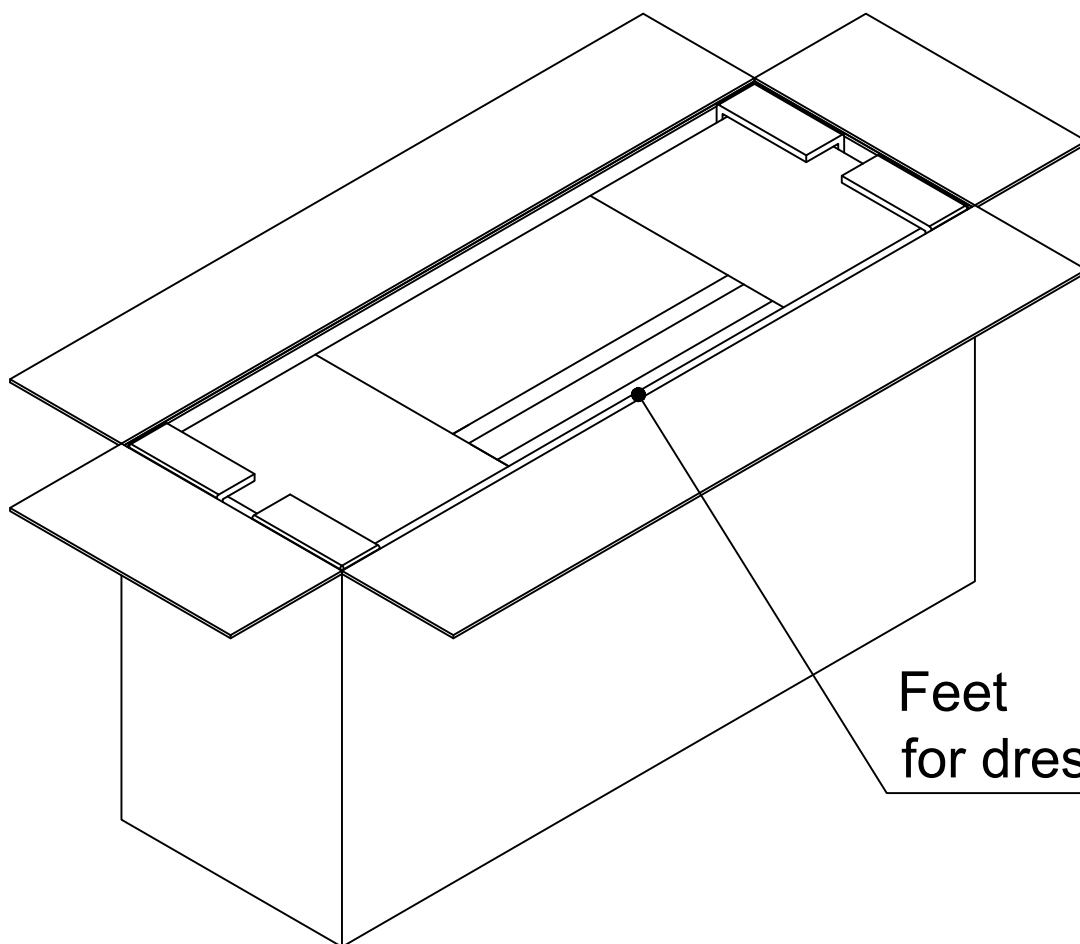

**Feet
for dresser**




**Do not remove carton
during the assembly
process.**





2 Mount the feet on the bottom of the dresser

FRONTSIDE

BACKSIDE

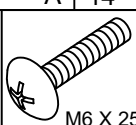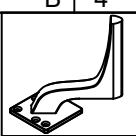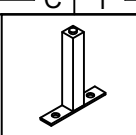
POS.	A	14	INR
 M6 X 25			
POS.	B	4	INR
			
POS.	C	1	INR
			

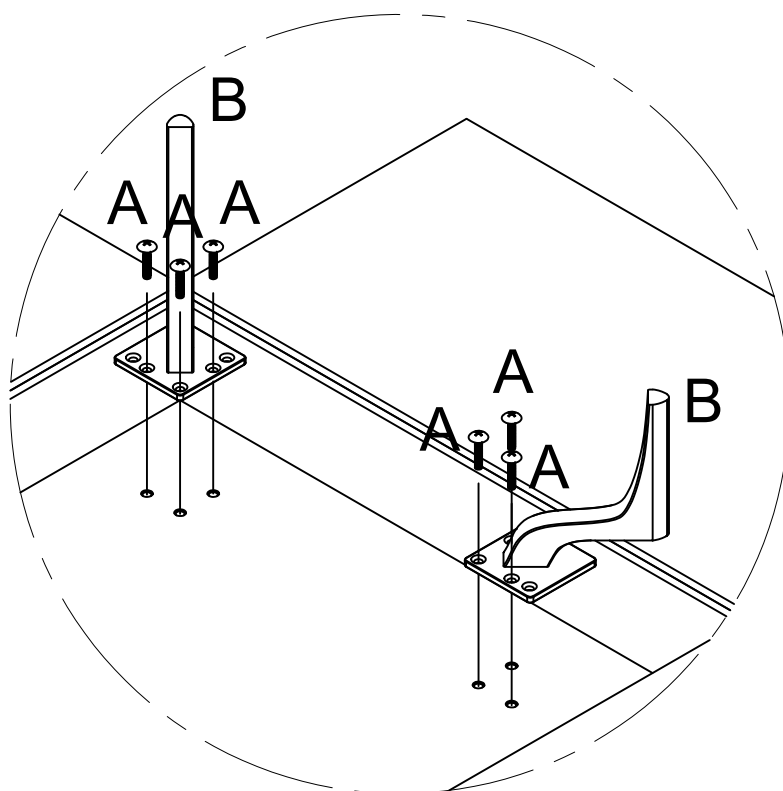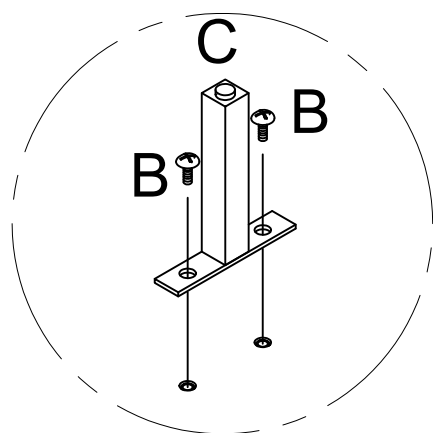


3 Flip over the dresser on its feet

WARNING



2 people
required

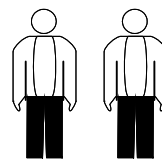


FRONTSIDE

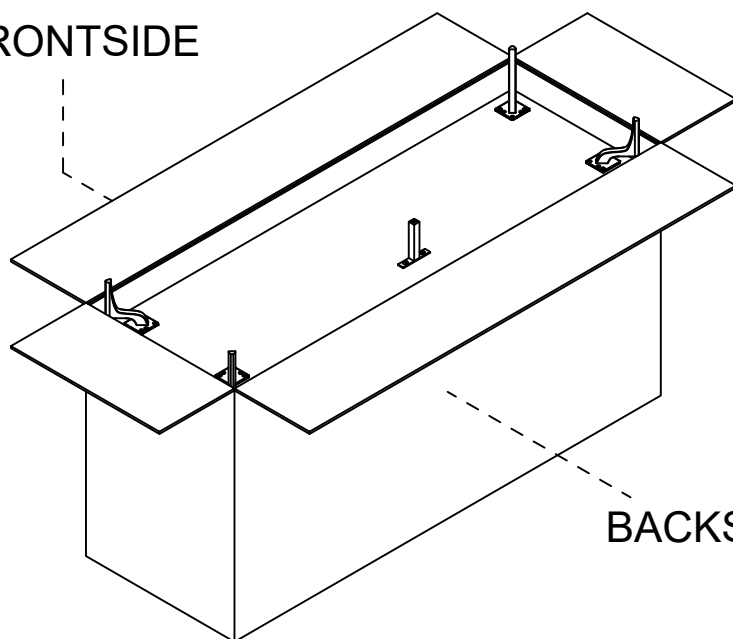


BACKSIDE

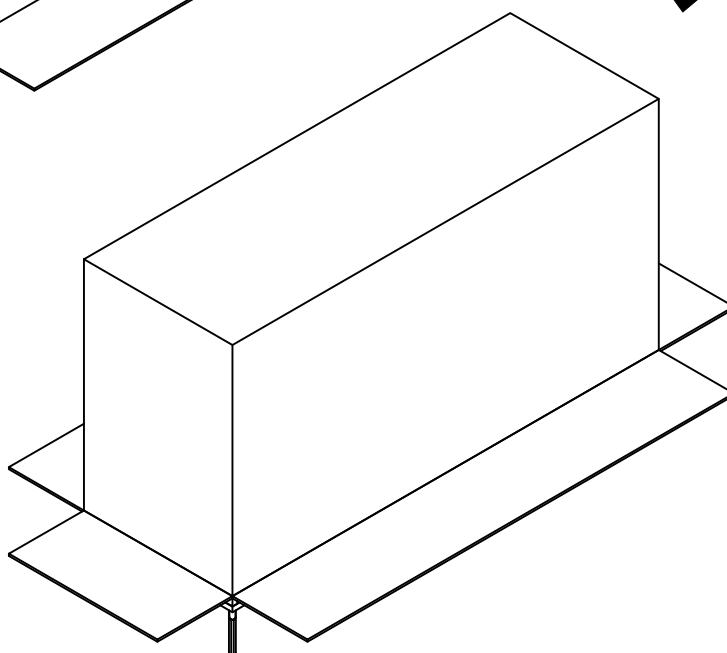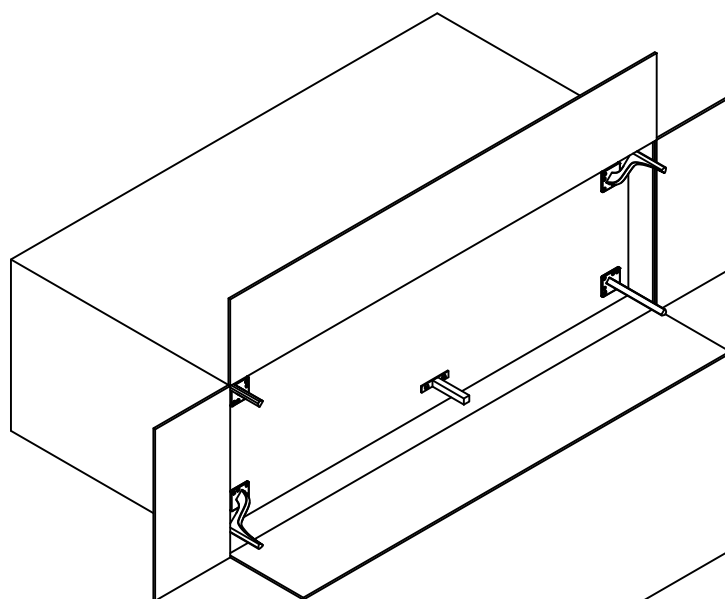

4 Lift the carton

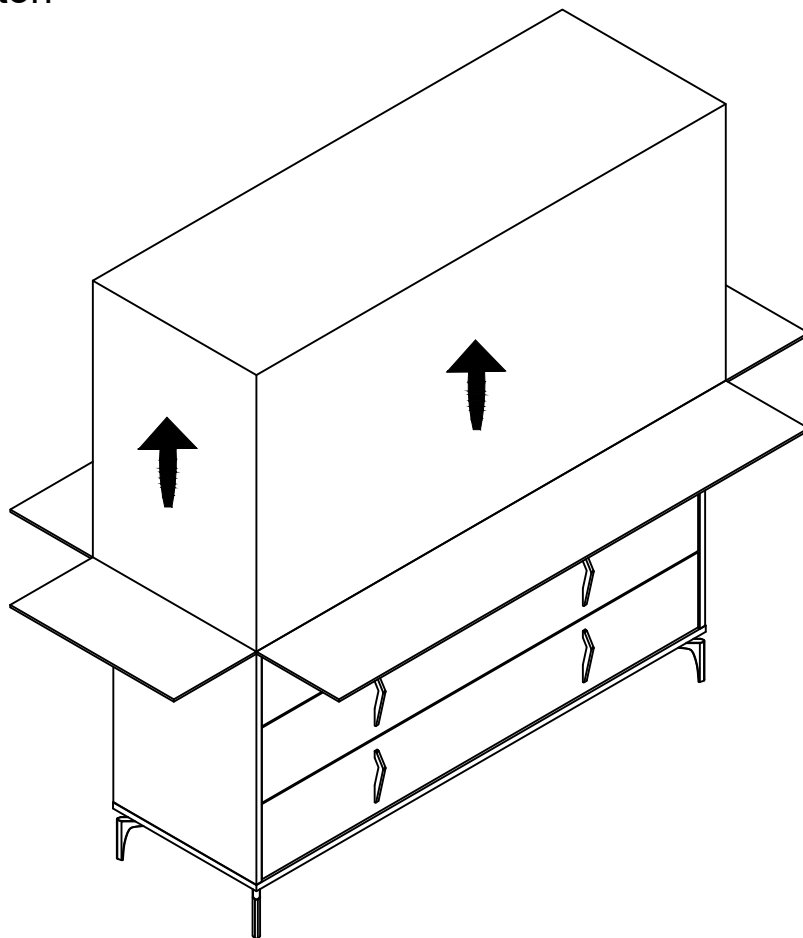




5 Open the first drawer and follow the instruction to fix the dresser by the wall

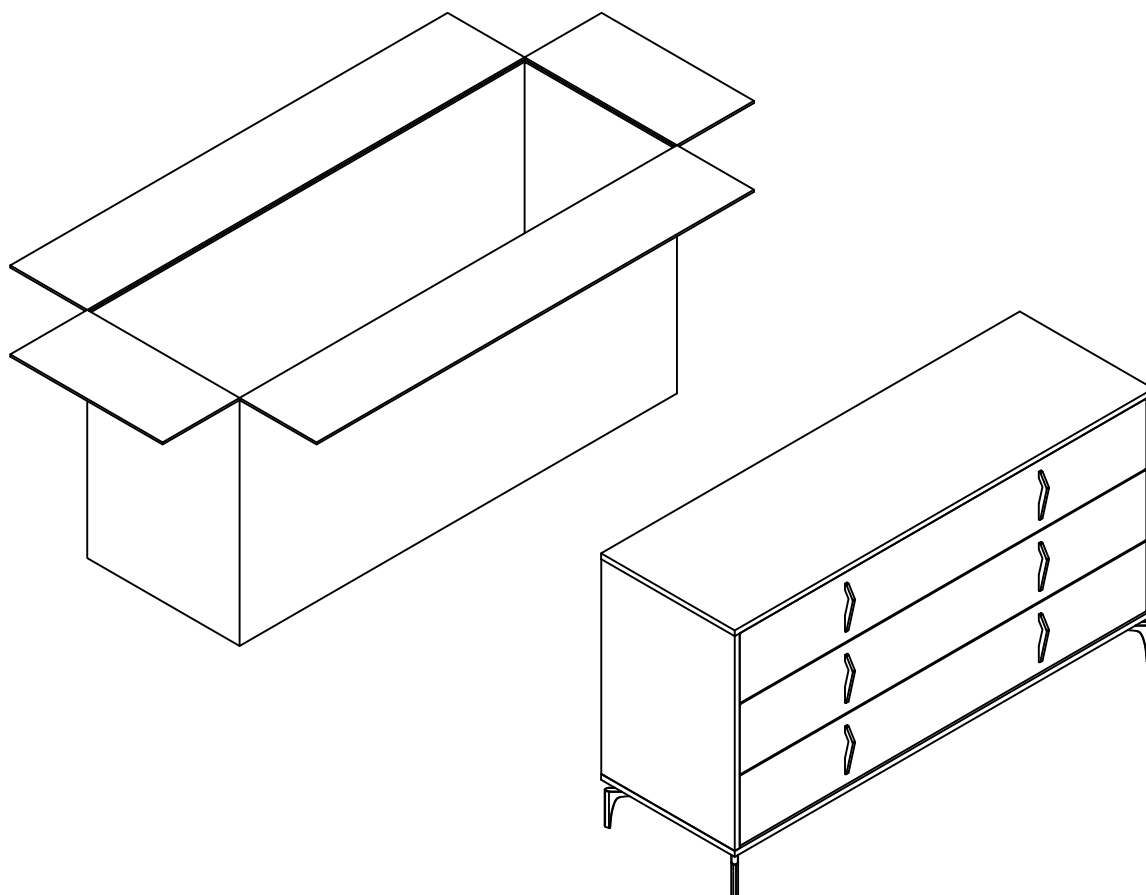

Model	4255			
Item	ANTI-TIP SAFETY HARDWARE INSTALLATION INSTRUCTIONS			
Code	32142541-32642541			
Date	03/01/2023	Rev.	1	

Hardware : 4 brackets
4 1 1/2" screws
4 3/4" screws
2 brackets strap


Screwdriver
Not
Included

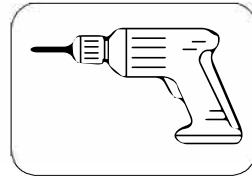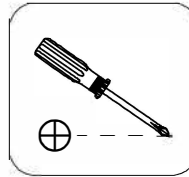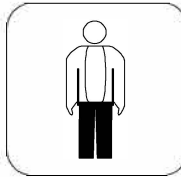


1

Determine desired location of furniture piece. Find wall stud behind furniture piece and position one bracket vertically on the stud approximately 1" below the top of furniture piece. Mark and drill pilot hole in the center of the stud with a 3/32" drill bit. Attach bracket to stud with the two 1 1/4" screws. (Figure 1)

Figure 1

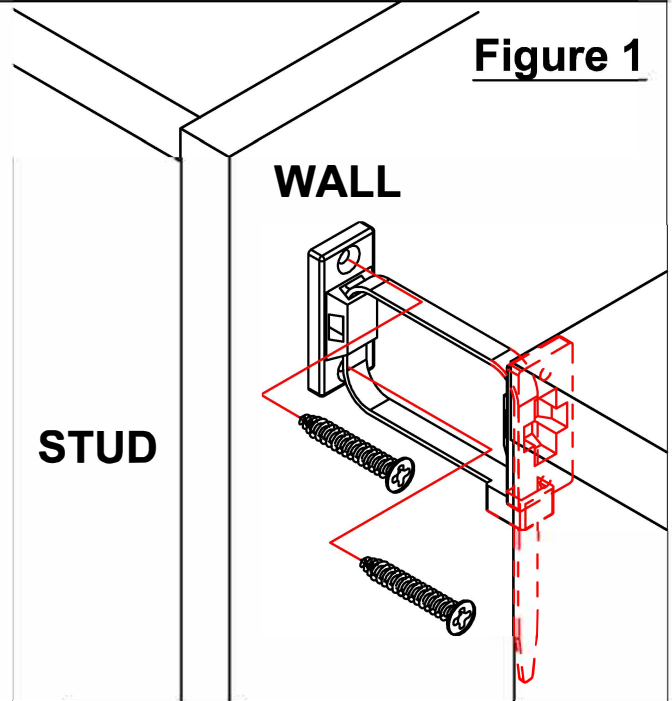

2

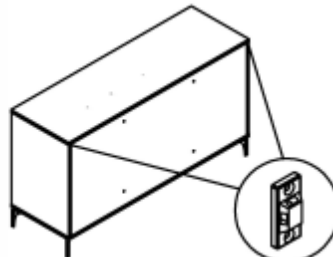

The second bracket will need to be attached horizontally to the top of furniture frame. Temporarily move furniture away from wall and place a bracket near top of frame. Mark and drill holes for screws with a 3/32" drill bit. Attach bracket to furniture piece with the two 3/4" screws. (Figure 2)
Move furniture piece into its final position, taking care to line up the wall bracket with furniture bracket. Thread the strap through the brackets as shown in the illustrations. Tighten strap until snug. Note: Do not overtighten.

FURNITURE

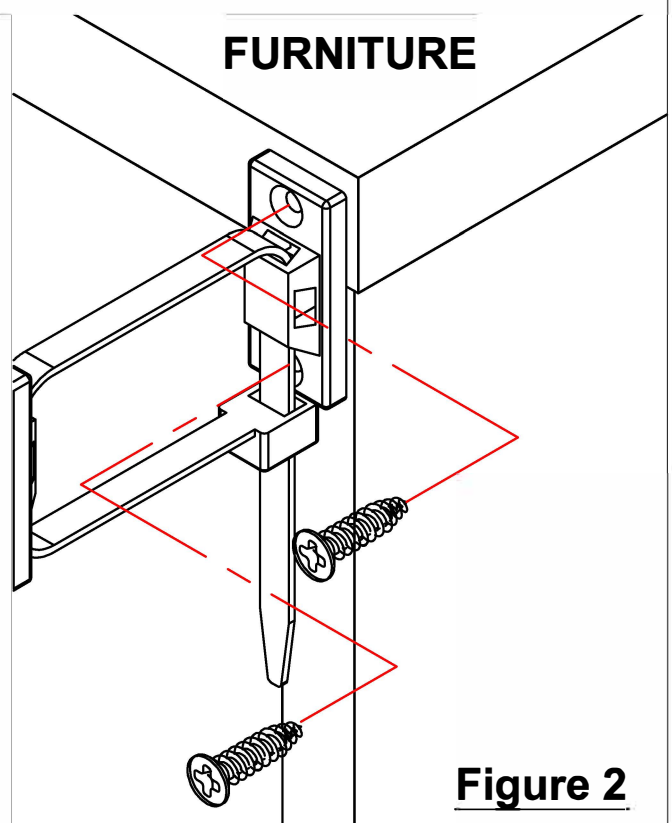


Figure 2