
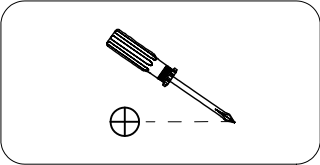
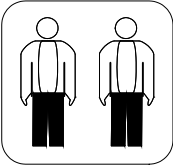


FIBI

|       |                                |      |   |
|-------|--------------------------------|------|---|
| Style | 4255-4256                      |      |   |
| Item  | DRESSER - 3 DRAWERS ASSEMBLING |      |   |
| Code  | 33142554-32142565              |      |   |
| Date  | 07/10/2024                     | Rev. | 3 |

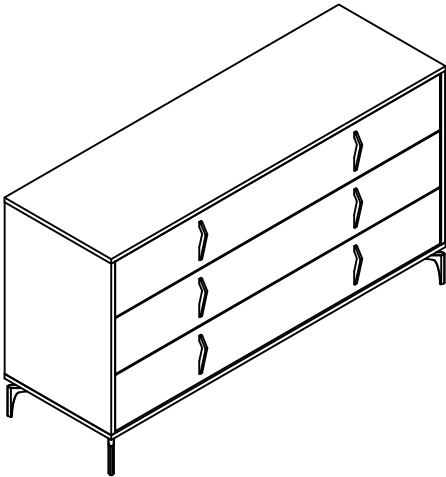


Screwdriver  
Not  
Included

Hardware :


| POS.    | A | 14 | NR | POS. | B | 4 | NR | POS. | C | 1 | NR |
|---------|---|----|----|------|---|---|----|------|---|---|----|
|         |   |    |    |      |   |   |    |      |   |   |    |
| M6 X 25 |   |    |    |      |   |   |    |      |   |   |    |

**1** Open dresser box from the bottom side

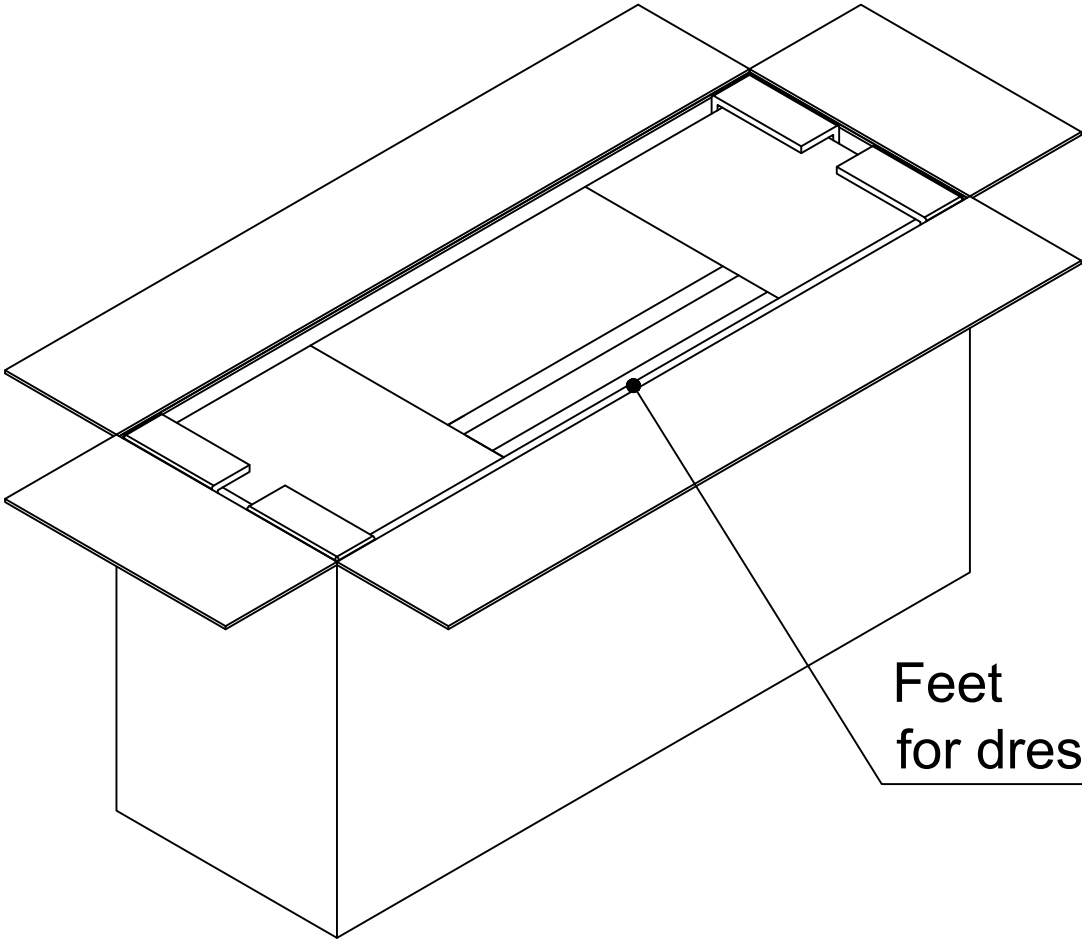

Feet  
for dresser




Do not remove carton  
during the assembly  
process.





## 2 Mount the feet on the bottom of the dresser

FRONTSIDE

BACKSIDE

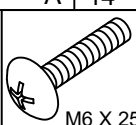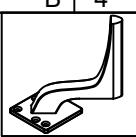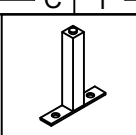
|                                                                                                |   |    |     |
|------------------------------------------------------------------------------------------------|---|----|-----|
| POS.                                                                                           | A | 14 | INR |
| <br>M6 X 25 |   |    |     |
| POS.                                                                                           | B | 4  | INR |
|             |   |    |     |
| POS.                                                                                           | C | 1  | INR |
|             |   |    |     |

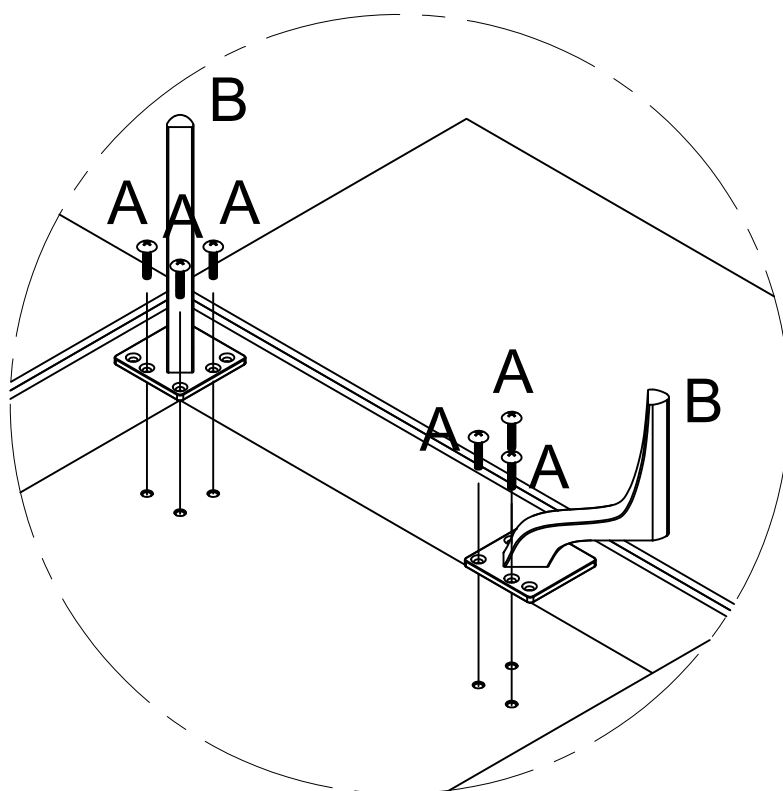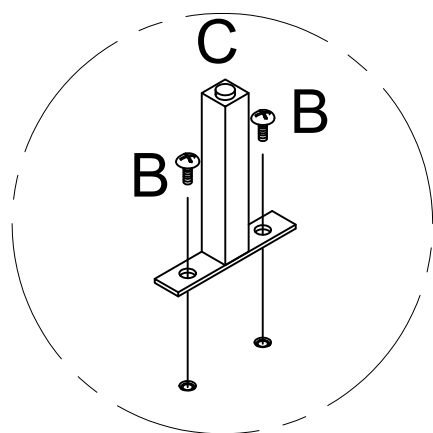


**3** Flip over the dresser on its feet

**WARNING**



2 people  
required

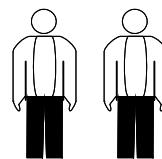


FRONTSIDE

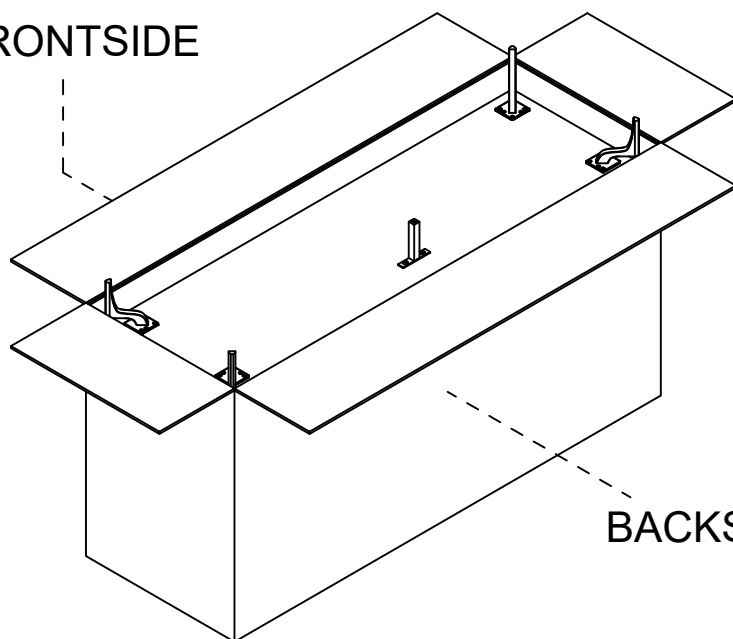


BACKSIDE

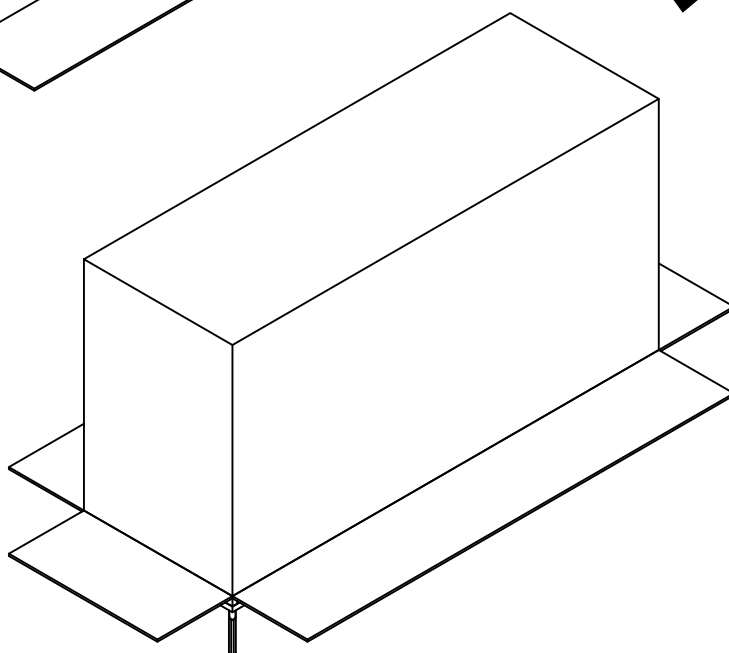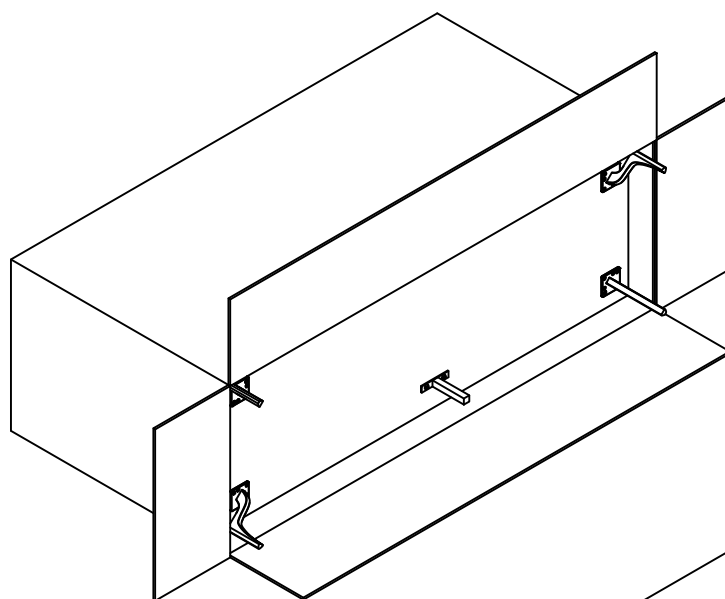

**4** Lift the carton



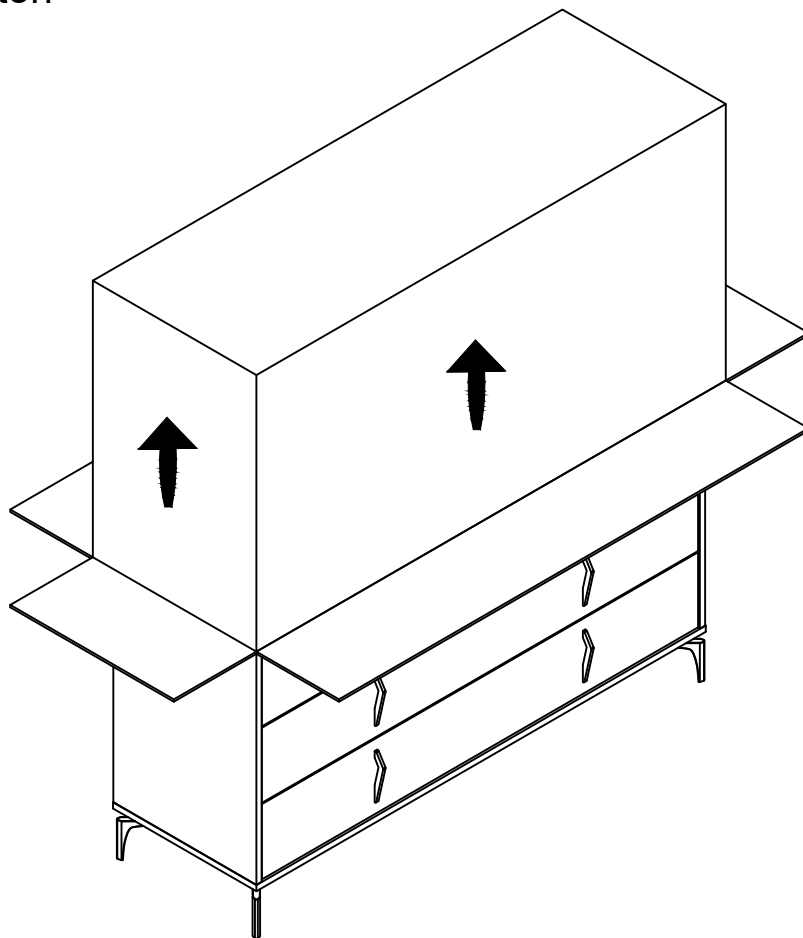


**5** Open the first drawer and follow the instruction to fix the dresser by the wall

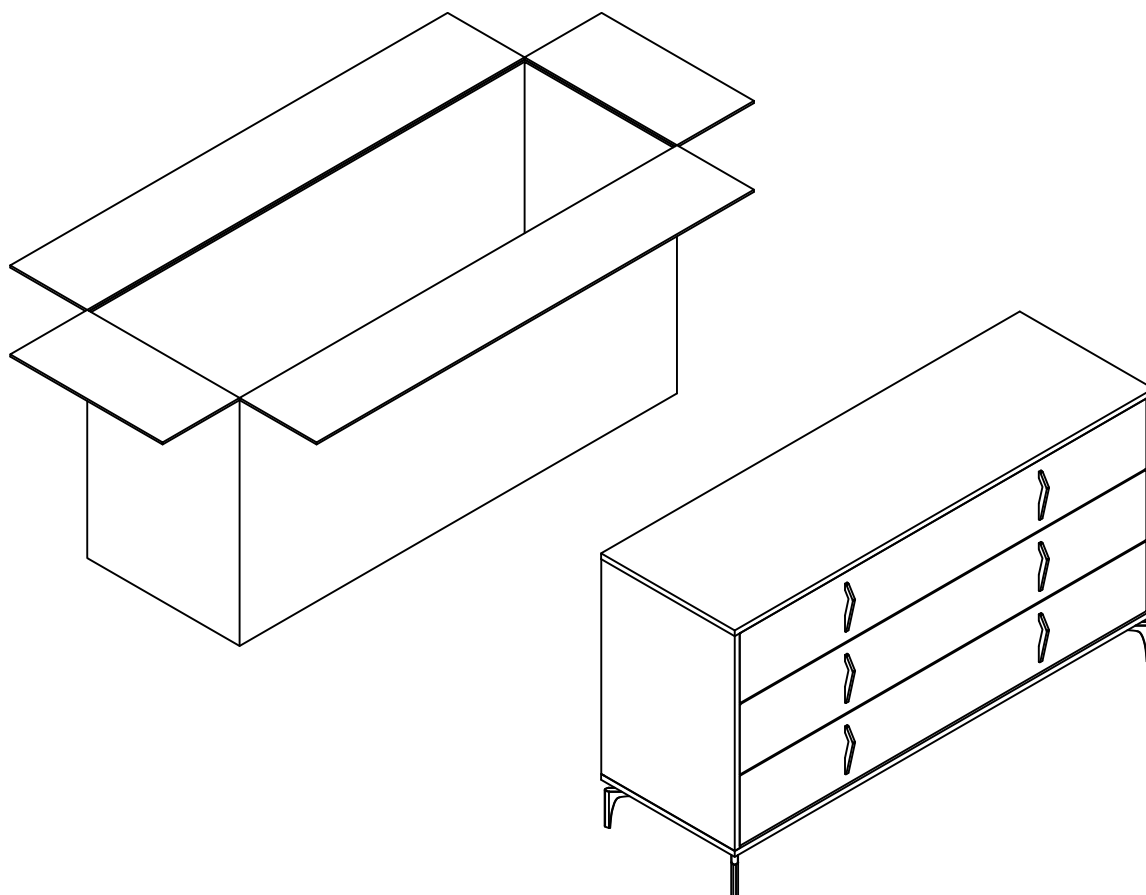


Hardware : 4 brackets  
4 1 1/2" screws  
4 3/4" screws  
2 brackets strap

Screwdriver  
Not  
Included

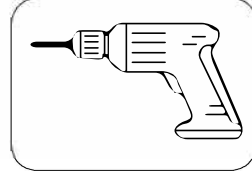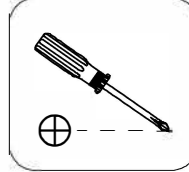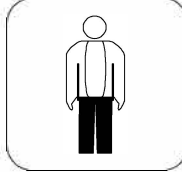


**1**

Determine desired location of furniture piece. Find wall stud behind furniture piece and position one bracket vertically on the stud approximately 1" below the top of furniture piece. Mark and drill pilot hole in the center of the stud with a 3/32" drill bit. Attach bracket to stud with the two 1 1/4" screws. (Figure 1)

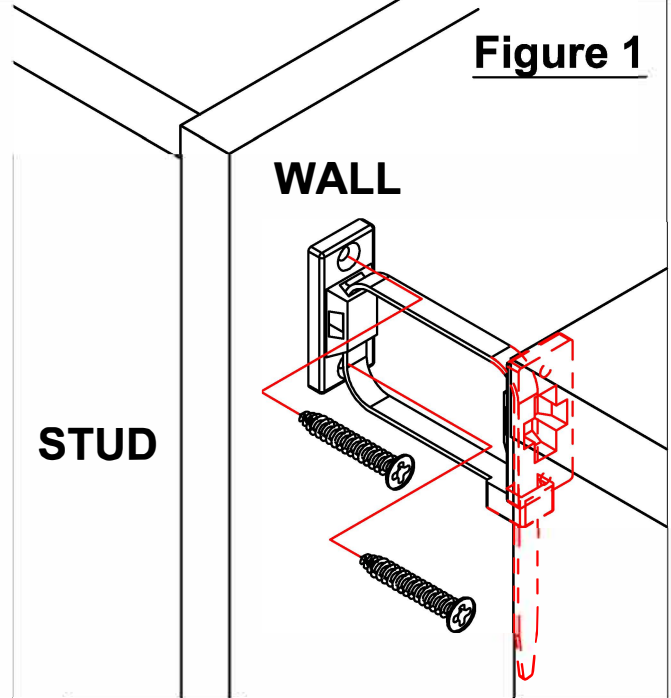


**Figure 1**

**2**

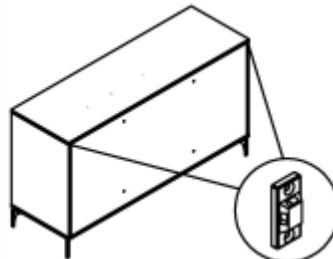

The second bracket will need to be attached horizontally to the top of furniture frame. Temporarily move furniture away from wall and place a bracket near top of frame. Mark and drill holes for screws with a 3/32" drill bit. Attach bracket to furniture piece with the two 3/4" screws. (Figure 2)

Move furniture piece into its final position, taking care to line up the wall bracket with furniture bracket. Thread the strap through the brackets as shown in the illustrations. Tighten strap until snug. Note: Do not overtighten.

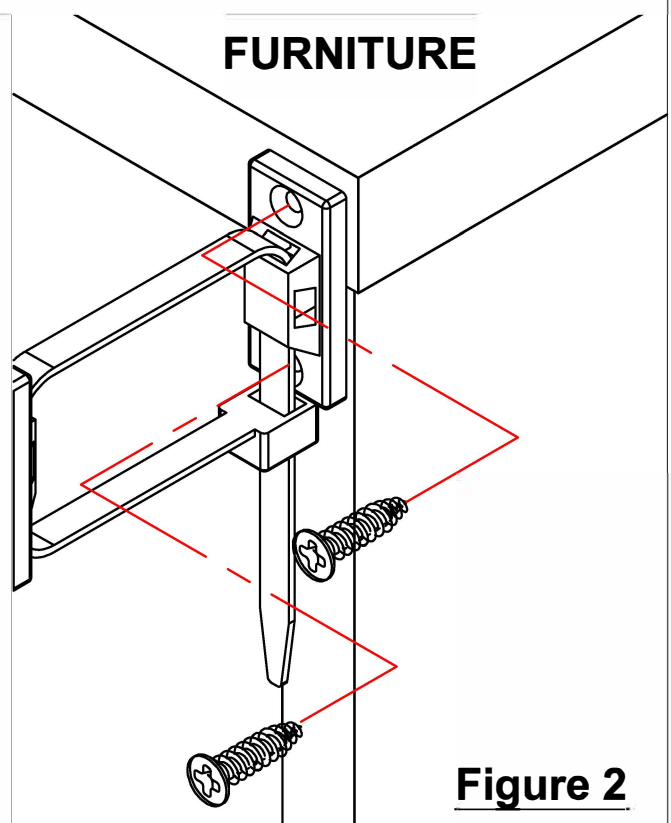

**Figure 2**