ROOMS TO GO


# Assembly Instruction


Manufactured by RVID for Rooms To Go

| | | | |
|---|---|---|---|
| RVID: 579-90 | DRESSER | **SKU# 32157910** | |
| 579-61 | MIRROR | **SKU# 32257912** | |
| 581-90 | DRESSER | **SKU# 32158126** | |
| 581-61 | MIRROR | **SKU# 32258128** | Version #1 - 2026/03/20 |

*** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly

*** Note: Do not tighten all the bolts until the assembly is fully complete


| Code | PART LIST | | |
|---|---|---|---|
| A | Dresser |  | 1PC |
| B | Mirror |  | 1PC |
| C | Mirror Support |  | 2PCS |


| Code | HARDWARE LIST | | |
|---|---|---|---|
| 1 (Pre-installed) | Bolt 1/4"-20*1-3/4" *Pre-installed* |  | 8PCS |
| | Spring Washer 1/4" *Pre-installed* | | 8PCS |
| | Flat Washer 1/4"*19mm *Pre-installed* | | 8PCS |
| | Threaded Washer 1/4"*10mm *Pre-installed* | | 8PCS |
| 2 | Allen Key 4mm |  | 1PC |
| 3 | Anti-tipping kit |  | 2SETS |

| TOOLS REQUIRED (NOT PROVIDED) | |
|---|---|
| Description | Sketch |
| Phillips Head Screwdriver |  |

Remarks:
Anti-tip hardware must be installed by customer
Anti-tip hardware attached to the drawer of the dresser

STEP 1: Place the mirror (B) on the top of Dresser (A)
Then assemble mirror support (C) to the mirror (B) and the Dresser (A)
Tighten with the hardware (1) by using Allen Key (2) as shown.

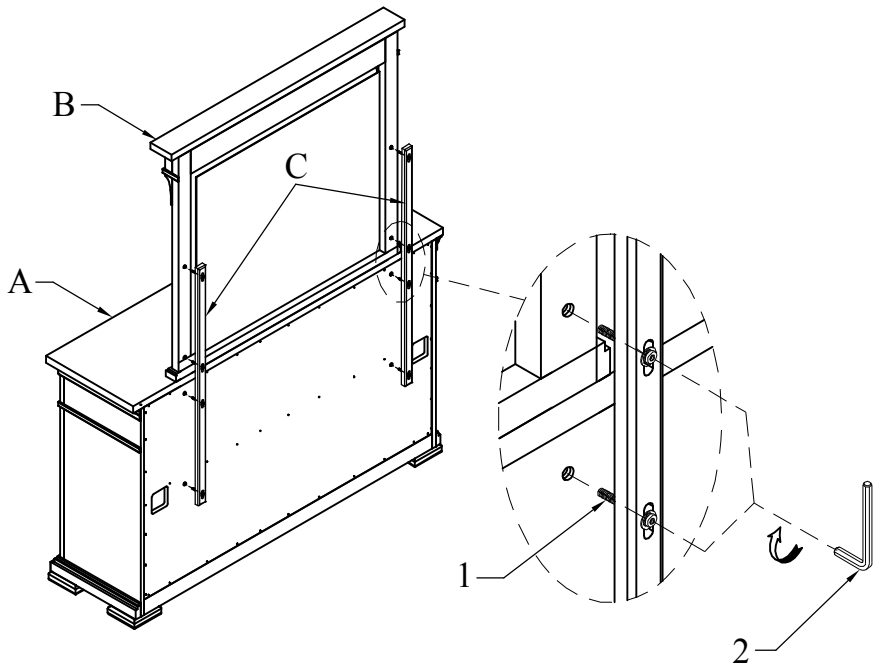

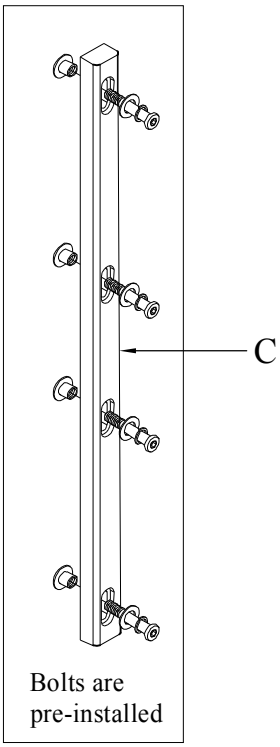
# Hardware Pack Location(s):

579-90 DRESSER, **SKU# 32157910**
579-61 MIRROR, **SKU# 32257912**
581-90 DRESSER, **SKU# 32158126**
581-61 MIRROR, **SKU# 32258128**


ROOMS TO GO

# Assembly Instruction


Manufactured by RVID for Rooms To Go

| | | | |
|---|---|---|---|
| RVID: 579-90 | DRESSER | **SKU# 32157910** | |
| 579-61 | MIRROR | **SKU# 32257912** | |
| 581-90 | DRESSER | **SKU# 32158126** | |
| 581-61 | MIRROR | **SKU# 32258128** | Version #1 - 2026/03/20 |

STEP 2: Move the dresser into its final position, then attach the anti-tip restraint (3) to the wall. Insert screw (3) using a screwdriver.

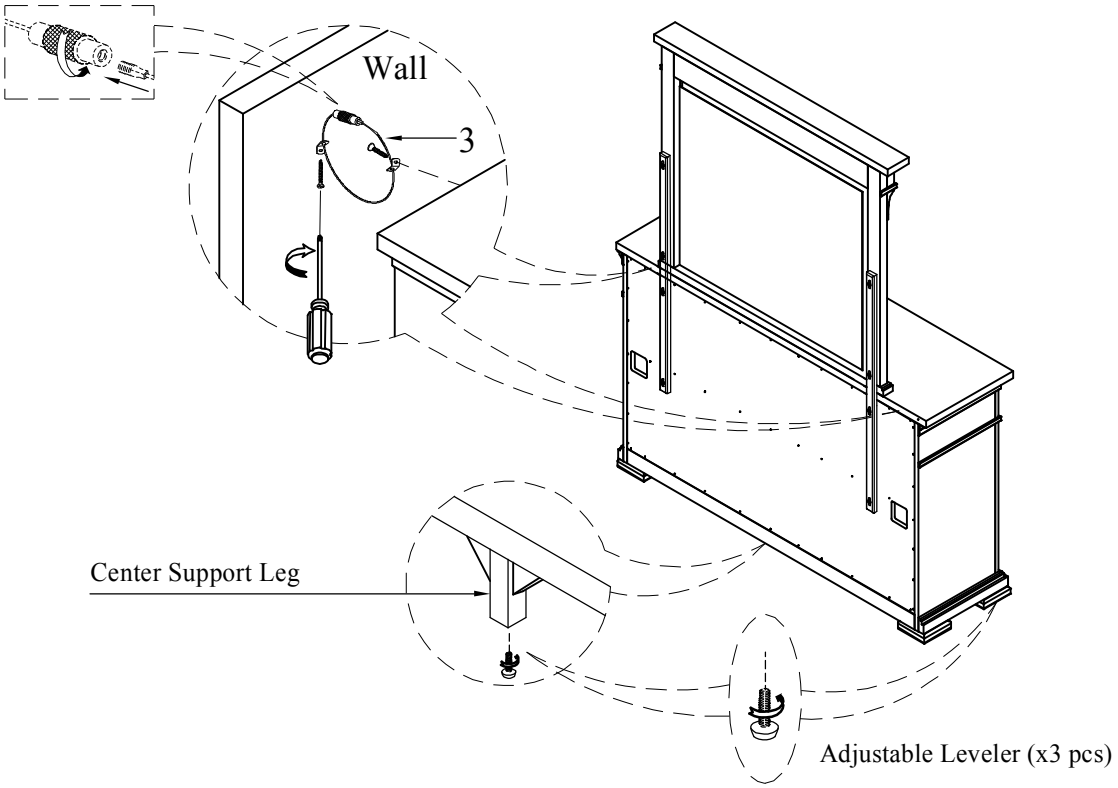


COMPLETED

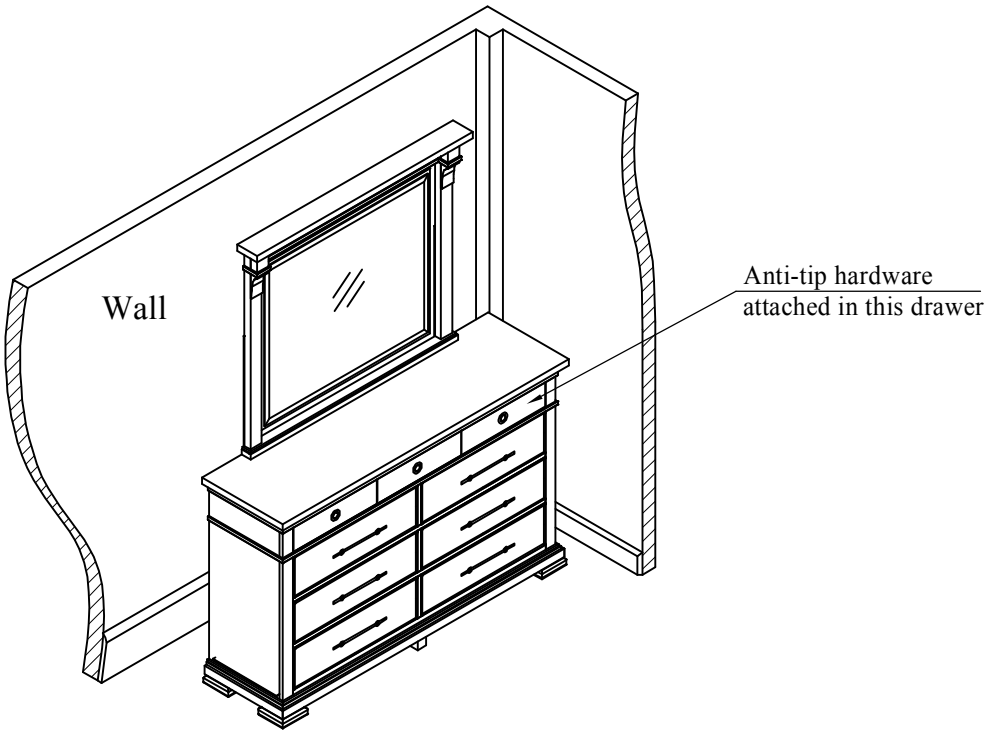


# Hardware Pack Location(s):

579-90 DRESSER, **SKU# 32157910**
579-61 MIRROR, **SKU# 32257912**
581-90 DRESSER, **SKU# 32158126**
581-61 MIRROR, **SKU# 32258128**