Assembly Instructions

 HLLC 900 BLACK
 9020-WAL DRESSER
 SKU 32199007


 HLLC 900 BLACK
 9030-WAL MIRROR
 SKU 32299009

This product is manufactured by HLLC for

ROOMS TO GO

STEP 1: Place the mirror (face down) on a non scratching surface. With the back support on place, screw the four bolts (as shown).

STEP 2: Place the mirror on the dresser, then center and screw the four bolts. tighten the bolts just with the allen key provided.

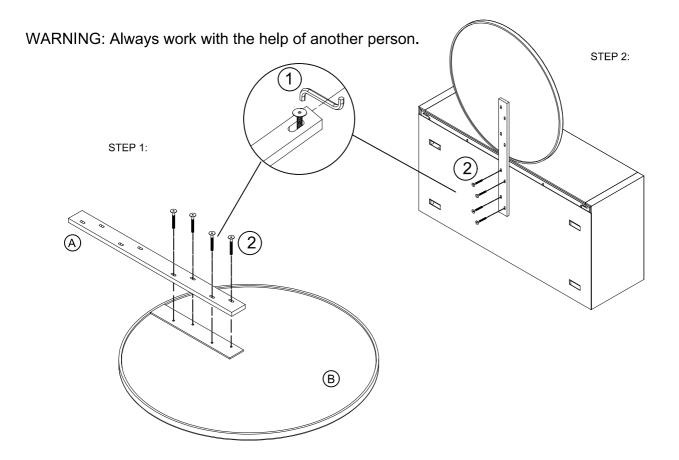

Only use the allen key to tighten the bolts, do not use electrical tools. Check the bolts every three months and tighten again if necessary.