





*****Caution:** Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

Code	PARTS LIST		
1	Mirror		1Pc
2	Dresser (Sold separately)		1Pc
3	Mirror Brackets		2Pcs


Step	Code	Hardware List		
1	A	Allen Key - 4mm		1Pc
2	B	Furniture Tipping Restraint (Sold separately)		1Set

TOOLS REQUIRED (NOT PROVIDED)	
Description	Sketch
Phillips screwdriver	

NOTE: The Mirror support bolts are already pre-installed. Install the Mirror (1) onto the Dresser (2) with Mirror Brackets (3) from the back using allen key (A).

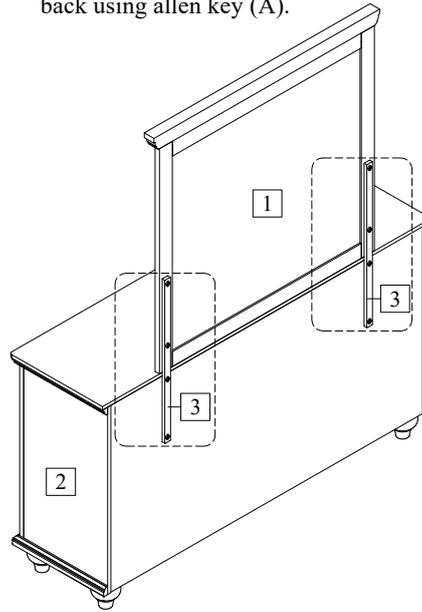
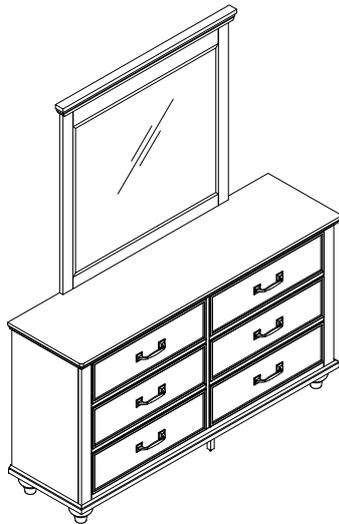


STEP 1

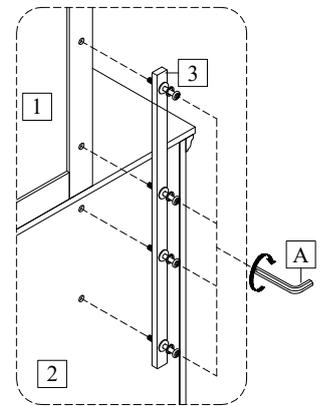

STEP 2

Remark: Anti-tip hardware-customer assembly required.

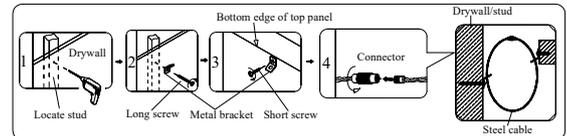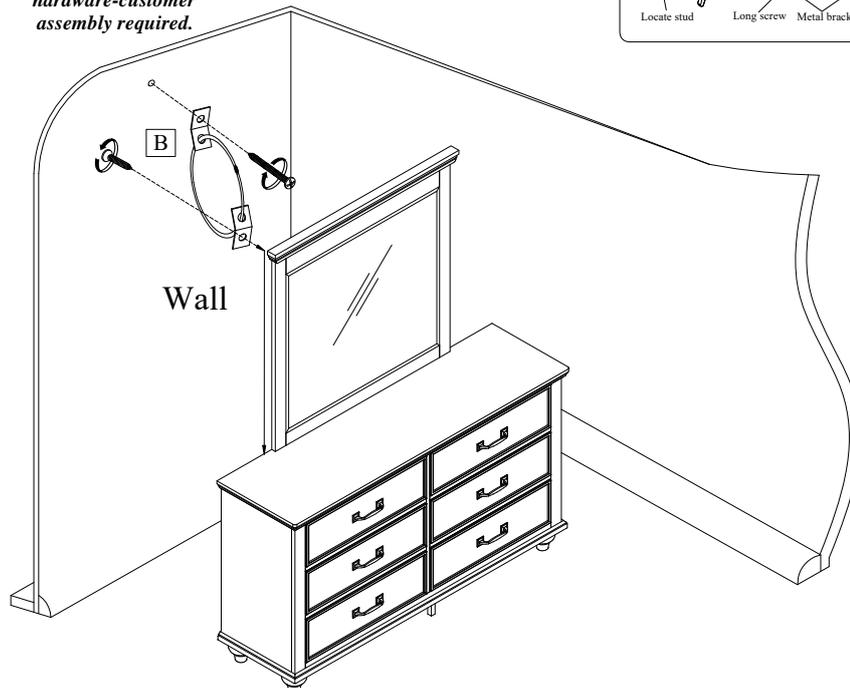

Hardware Pack Location(S):

HMIS 2273/2274/2275-55 Mirror, SKU# : 32222731/32222743/32222755