



Assembly Instructions

FRNR 0713-1 DRAWER DRESSER

SKU#32126131

FRNR 0713-2 MIRROR


SKU#32226133



Version:1 09/25/2025




Manufactured BY FRNR for Rooms To Go

***Cautions: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly

PARTS LIST

Step	Code	Hardware	Q'TY
1	A	Allen Key 	1 Pc

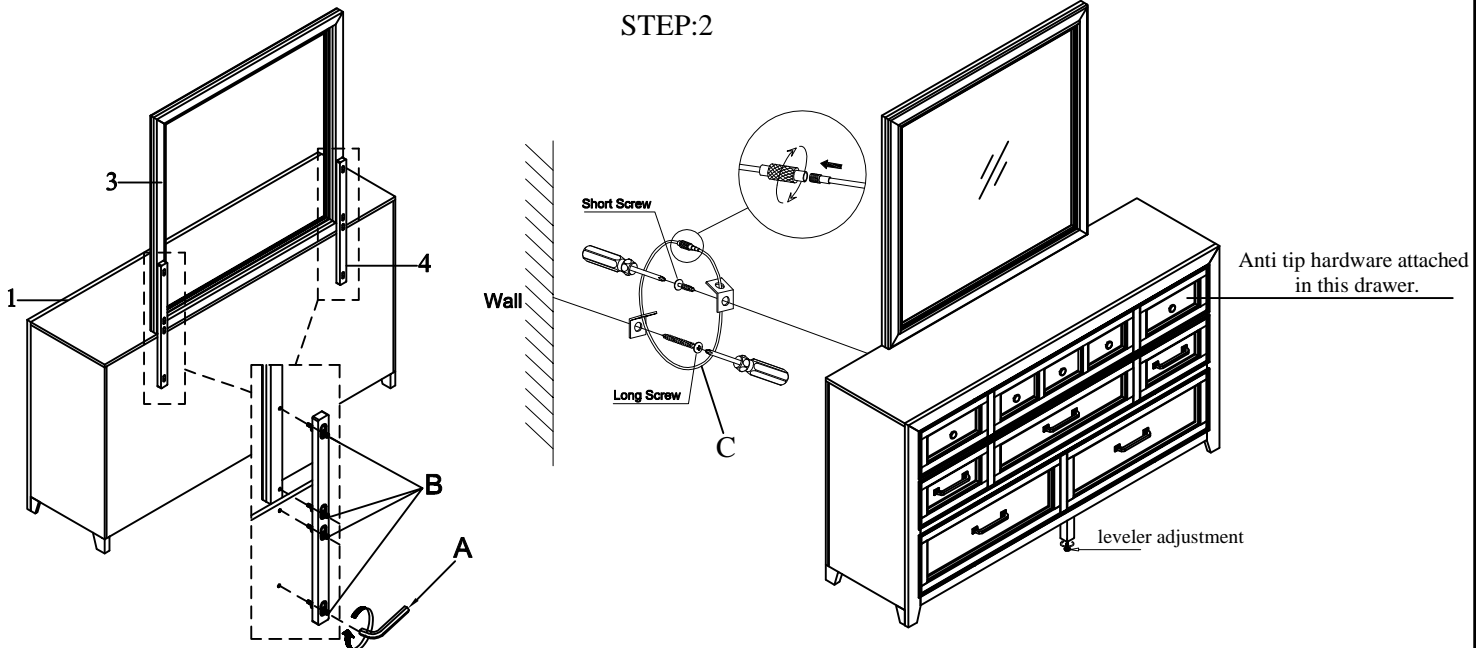
Step	Code	Hardware	Q'TY
Has been pre-installed on the mirror brackets.			
1	B	(ϕ 1/4"-20x45mm) Bolt (ϕ 1/4"*13*2mm) Spring Washer (ϕ 1/4"*19*2mm) Flat Washer 	8pcs
2	C	Anti-tip Restraint 	1set

1. Dresser - 1 Pc Sold separately.	
3. Mirror - 1Pc	
4. Mirror Baskets -2Pcs	

STEP:1

Assemble the mirror into the dresser using bolts to screw into the glass support bar from the back of the dresser

STEP:2



HARDWARE PACK LOCATION(S):

FRNR 0713-1 DRAWER DRESSER

SKU#32126131

FRNR 0713-2 MIRROR

SKU#32226133