





Assembly Instructions

Manufactured for
Rooms To Go


PNWD

3591-1 DRESSER
3591-2 MIRROR


SKU# 32135976
SKU# 32235978

Step	Code	Hardware	Q'TY
	A	Allen Key 	1 Pc
1	B	Bolt 1/4" x 1 1/2"	8 Pcs 
		Spring Washer 1/4" dia.	
		Flat Washer 1/4" dia.	


PARTS LIST

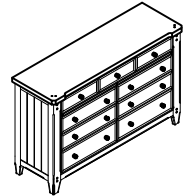


1. Dresser - 1 Pc

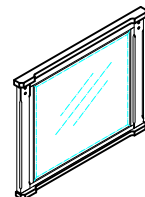

2. Mirror - 1 Pc




3. Mirror Support - 2 Pcs

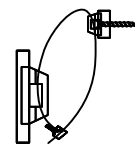


4. Anti-tip restraint - 1 Set

STEP1:

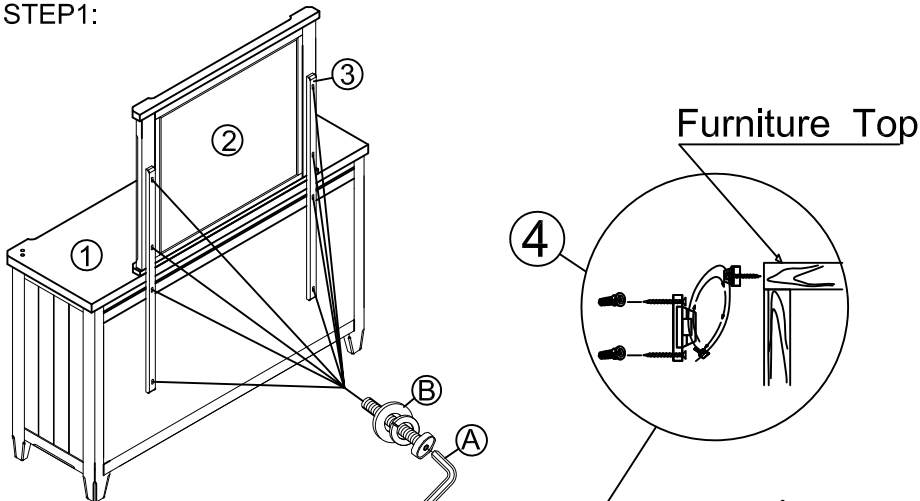

STEP2:

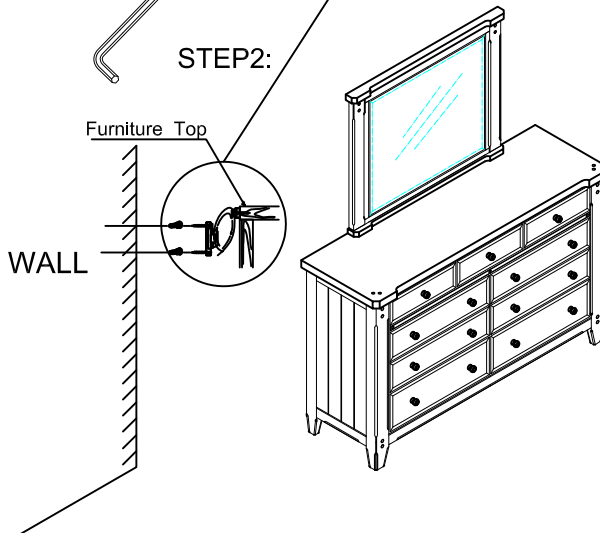

HARDWARE PACK LOCATION(S):

PNWD 3591-1 DRESSER
3591-2 MIRROR

SKU# 32135976
SKU# 32235978