

**(5532/5534-300) COTTAGE MASTER COLLECTION LANDSCAPE MIRROR ASSEMBLY INSTRUCTIONS**

THANK YOU FOR YOUR PURCHASE !

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

READ ALL THE INSTRUCTIONS AND IDENTIFY ALL COMPONENTS AND CHOOSE YOUR CONFIGURATION AND BE SURE YOU HAVE ALL PARTS

TWO PEOPLE ARE NEEDED TO ASSEMBLE.

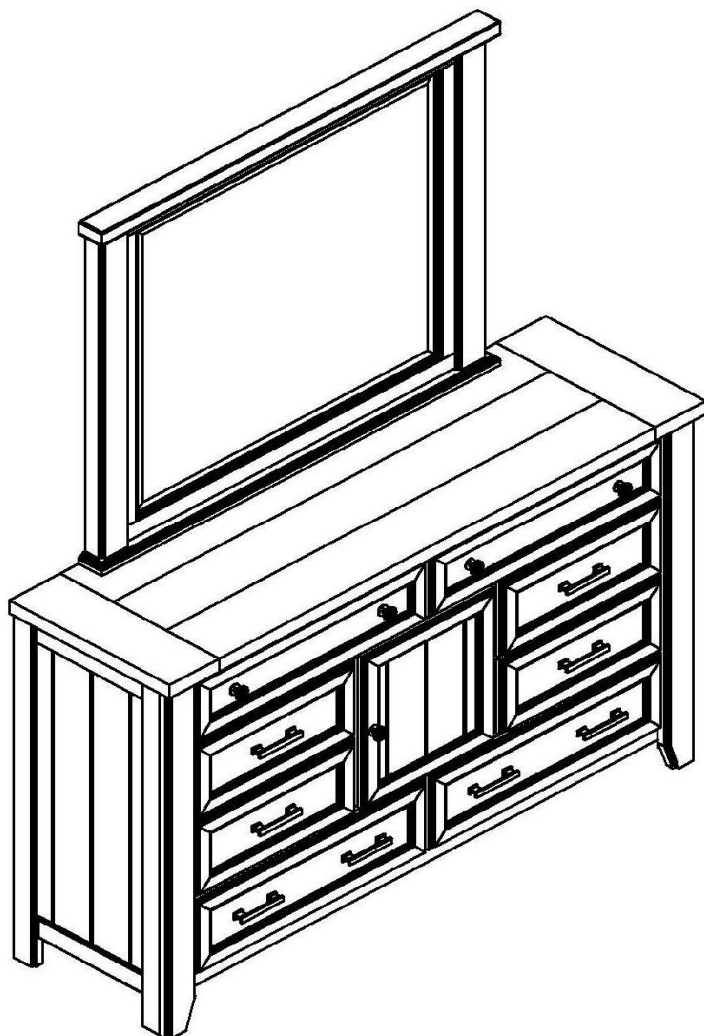
DO NOT COMPLETELY TIGHTEN ALL SCREWS UNTIL ALL COMPONENTS ARE CONNECTED.

**LANDSCAPE MIRROR WITH 8 DRAWER DRESSER AND DOOR****LANDSCAPE MIRROR WITH 8 DRAWER DRESSER AND DOOR CREAM**

32255324	5532300	LANDSCAPE MIRROR
32155322	5532208	8 DRAWER DRESSER

**LANDSCAPE MIRROR WITH 8 DRAWER DRESSER AND DOOR GRAY**

32255348	5534300	LANDSCAPE MIRROR
32155346	5534208	8 DRAWER DRESSER



BEFORE USING THIS PRODUCT  
PLEASE READ, UNDERSTAND AND  
FOLLOW THESE INSTRUCTIONS

KEEP THE INSTRUCTION SHEET FOR FUTURE  
REFERENCES

**FOR INDOOR USE ONLY**

**IMPORTANT NOTES :**

HANDLE THE MIRROR WITH CARE, GLASS IS  
FRAGILE. BEFORE YOU BEGIN  
YOUR PROJECT, COMPLETELY READ THE  
ASSEMBLY INSTRUCTIONS

**TOOLS NEEDED**

PHILIPS SCREWDRIVER  
(NOT INCLUDED)

**TO ASSEMBLE THIS PRODUCTS REQUIRES TWO PEOPLE**

**ASSEMBLY TIPS:**

- 1.- Remove hardware from box and sort by size.
- 2.- Please check to see that all hardware and parts are present prior start of assembly.
- 3.- Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.

**LIST OF CONTENTS****5532/5534-300 LANDSCAPE MIRROR**

FIG.1- LANDSCAPE MIRROR (1)

FIG.2- 36" METAL SUPPORTS (2)


FIG.3.- 8/32" X 1 1/4" SCREWS (4)

HARDWARE PACK (HPK00134-0)





FIG.3.- 8/32" X 1 1/4" SCREWS (4)

**5532/5534-208 8 DRAWER DRESSER**

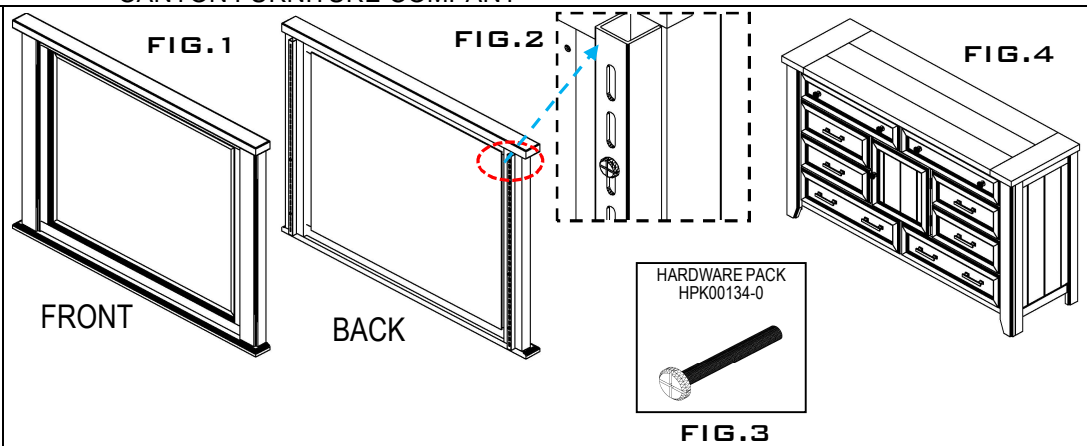FIG.4.- 8 DRAWER DRESSER (1)



- 1.- UNPACK THE LANDSCAPE MIRROR (FIG.1) AND REMOVE THE 1 1/4" SCREWS (FIG.3) AND 36" METAL SUPPORTS (FIG.2) INSTALLED IN THE MIRROR, USING YOUR PHILLIPS SCREWDRIVER (**FIG.5**), THEN SLIDE DOWN BOTH 36" METAL SUPPORTS AND REPLACED CONNECTING USING REMOVAL SCREWS, **SEE FIG.6.**
- 2.- TAKE THE 8 DRAWER DRESSER (FIG.4) AND PLACE IT NEAR TO THE FINAL POSITION IN THE ROOM WITH ANOTHER PERSON'S ASSISTANCE.
- 3.- PLACE MIRROR (FIG. 1) ON TOP OF DRESSER (FIG.4), BE SURE TO POSITION THE MIRROR IN THE MIDDLE OF TOP. THE BACK BOTTOM EDGE OF THE MIRROR & THE BACK EDGE OF THE TOP SHOULD BE FLUSHED, **SEE FIG.7.**
- 4.- ATTACH 36" MIRROR SUPPORTS AT BACK OF DRESSER, ALIGNING HOLES OF METAL SUPPORTS WITH HOLE THREADED INSERTS IN THE DRESSER **SEE FIG. 8**, ATTACH WITH 1 1/4" SCREWS USING YOUR SCREWDRIVER TIGHT ALL SCREWS, **SEE FIG.7.**

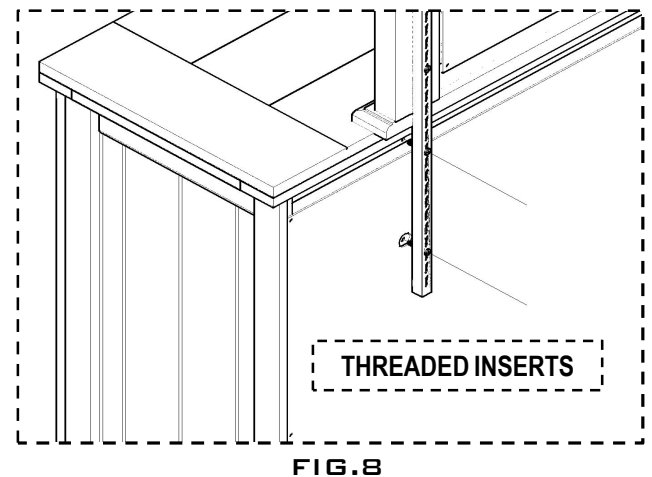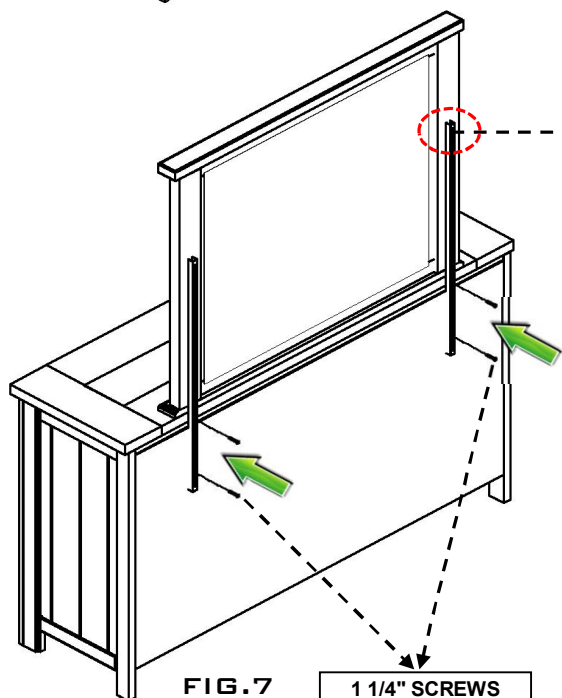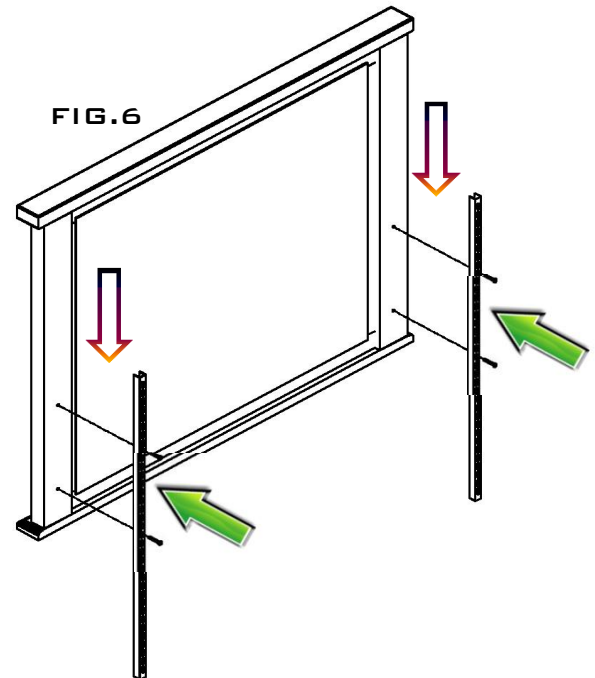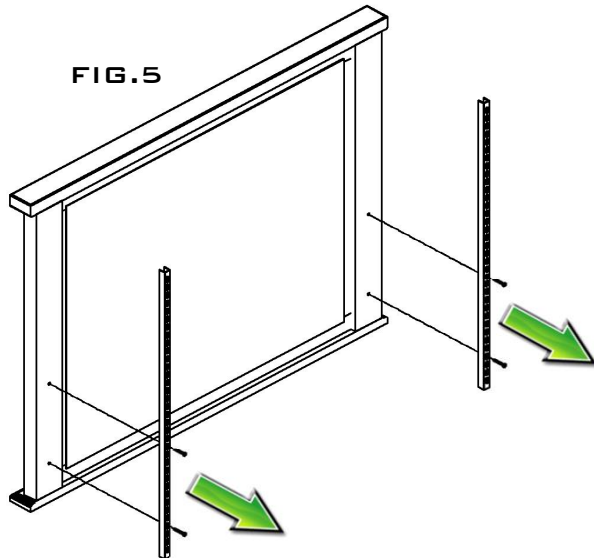RIGHT POSITION FOR  
METAL AND SCREWS