



Assembly Instruction

SLAW 135-7532-010 Dresser

SLAW 135-7532-030 Mirror


SKU # 32175324

32275326

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly

PARTS LIST:			
Code	Description	Sketch	Quantity
A	Dresser		1 pc
B	Mirror		1 pc
C	Mirror support		2 pcs
STEP	Code	Hardware List	Q'TY
1	D	Allen bolt- $\varnothing 1/4 \times 18 \times 1-1/4$ "	
		Flat washer- $\varnothing 1/4 \times 19 \times 1.5$ mm	
		Lock washer- $\varnothing 1/4$	
1	E	Allen Key - 4mm	1 pc

Step	Code	Anti Tipping Kit List	
2	F	Anti tipping kits	1 Set

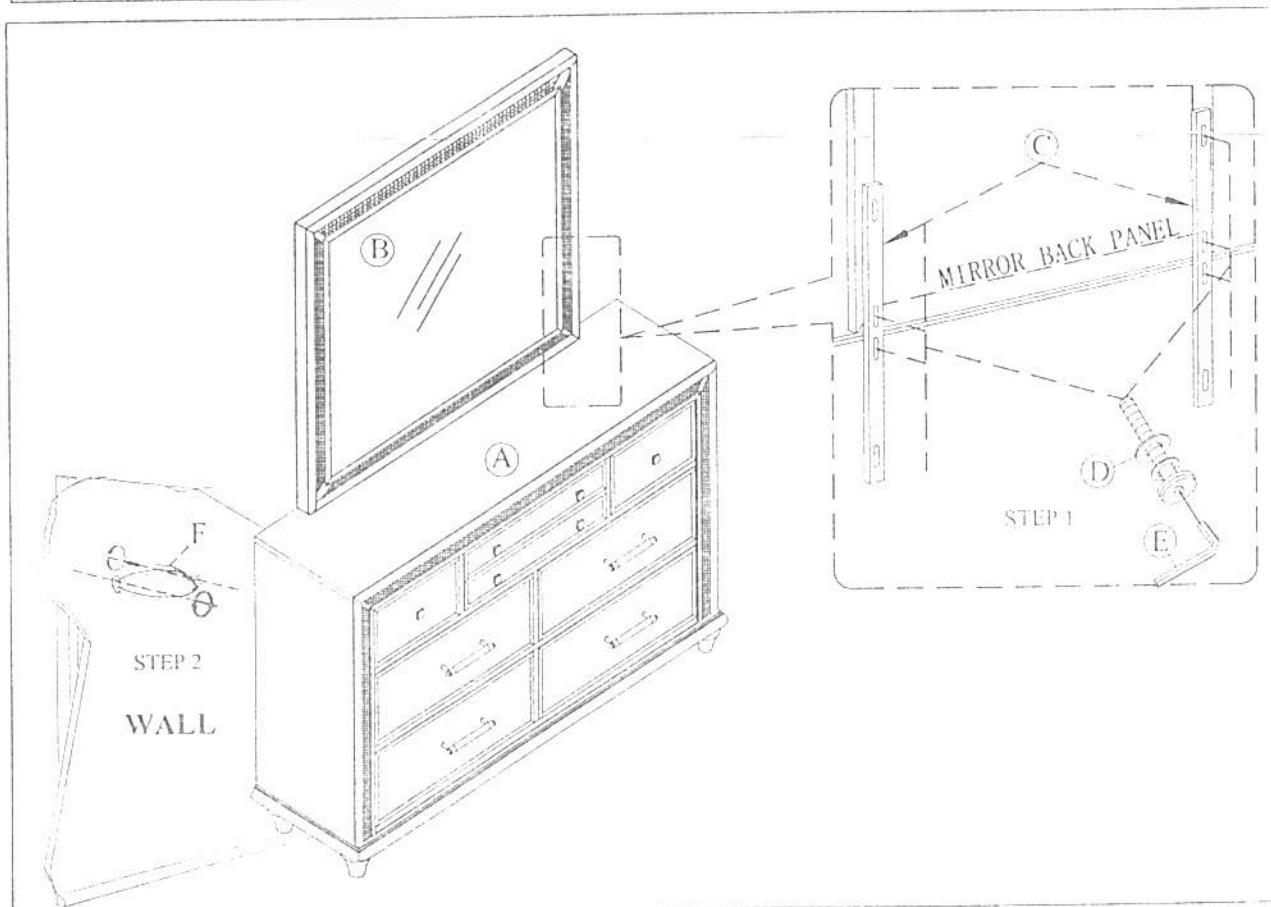

Hardware Location(s): Back of Mirror,
Mirror, Sku # 32275326

Anti Tipping Kit Location(s): inside top drawer
Dresser , SKU # 32175324