

SCREW 4 PC


30 mm
1,18 in
6 MA
SCREWDRIVER
or
NOT INCLUDED

MIRROR BACK

DRESSER 32186353

MIRROR 32286355

WOODEN BRACKET

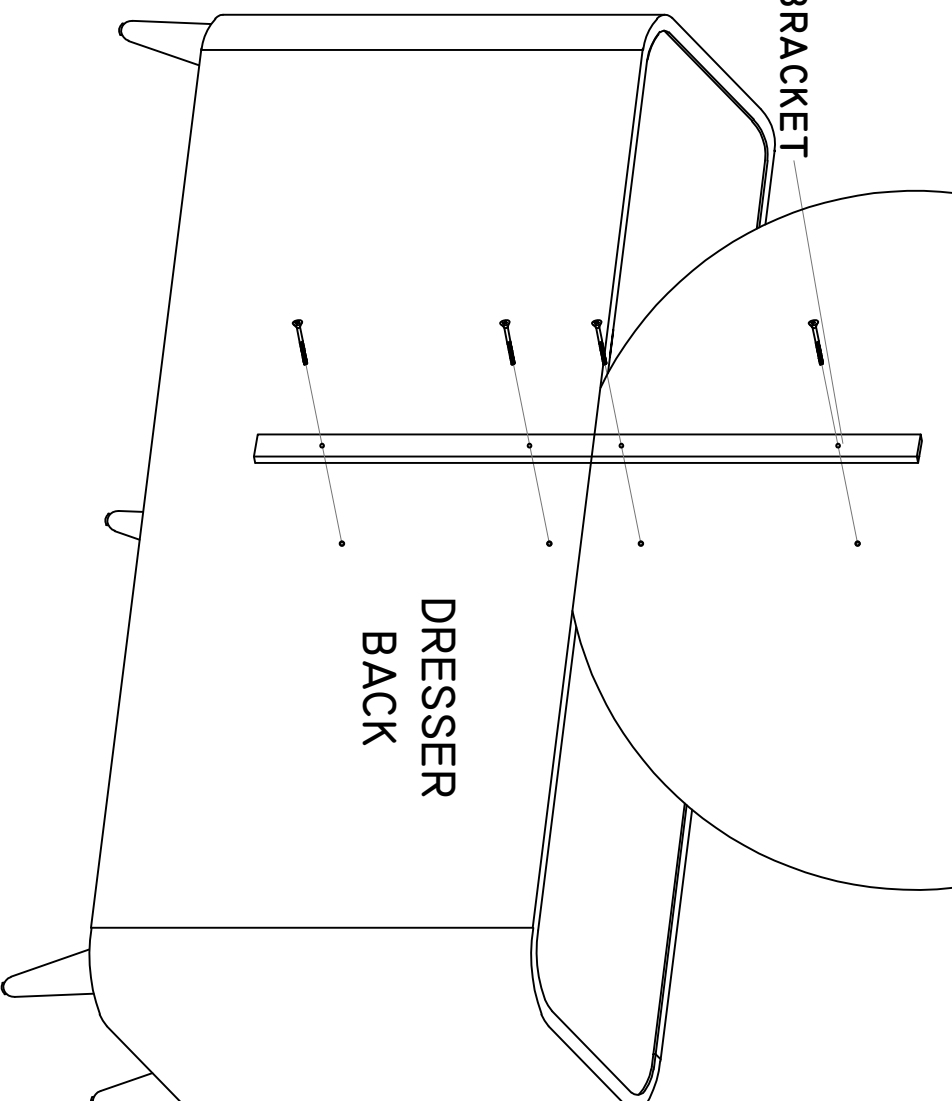

ISIG
8635

WALNUT JENNER

INSTRUCTIONS HOW TO INSTALL THE MIRROR ON THE DRESSER