



# ASSEMBLY INSTRUCTIONS

PHOM 375-07M Mirror SKU #32293754


PHOM 375-170 Dresser SKU #32193752

Manufactured by PHOM for Rooms To Go Version 1 - Date Sept 15th, 2025

**Caution:** Please read the instructions thoroughly before unpacking and assembly. Sharp, exposed staple tips can cause injury. Therefore, for your protection, please remove any exposed staples used in the packaging.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


## STEP 1

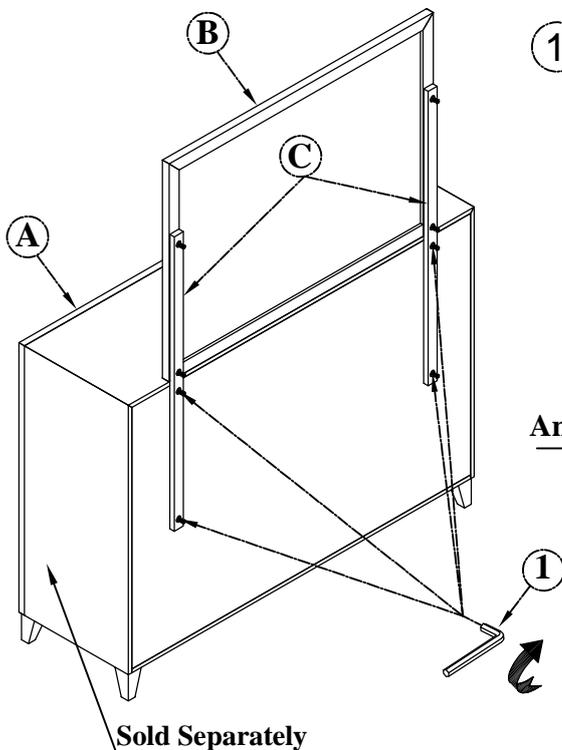

Remark:

Anti-tip hardware must be installed by customer.  
Anti-tipping hardware attached to the back panel.

## STEP 2

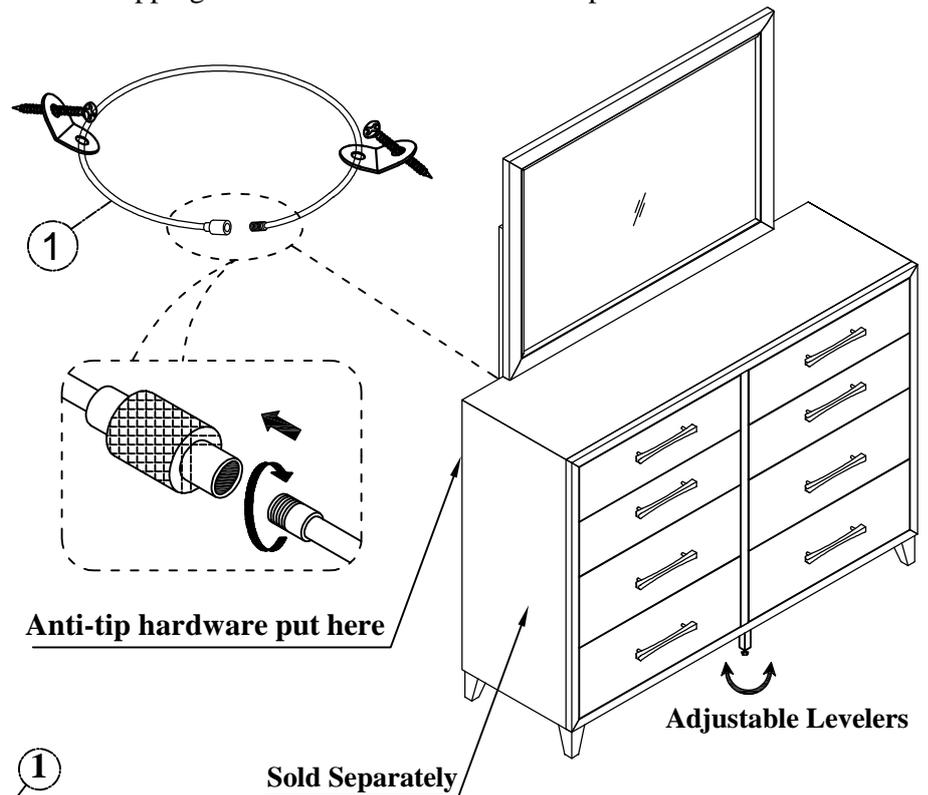

NO.	PART LIST	Q'TY
A	DRESSER (Sold Separately)	1 Pc
B	MIRROR	1 Pc
C	MIRROR BRACKET WITH PRE-INSTALLED BOLTS	2 Pcs

No.	HARDWARE LIST		Q'ty
① Pre-installed on part C	Threaded Washer Ø5/16"x 19 x 10mm	PRE-INSTALLED	8 Pcs
	Flat Washer Ø5/16"x 19 x 2mm	PRE-INSTALLED	8 Pcs
	Spring Washer Ø5/16"x 12mm	PRE-INSTALLED	8 Pcs
	Allen Bolt Ø5/16"x 18 x 1-3/4"	PRE-INSTALLED	8 Pcs
1	Allen Key #4 x 3-1/8"		1 Pc
2	Tipping Restraint Kit		1 Set

Hardware Pack Location (s):

375-07M Mirror SKU #32293754  
375-170 Dresser SKU #32193752

Made in Viet Nam

01 OF 01