




# ASSEMBLY INSTRUCTION

PHOM SKU#: 356-210  
356-211  
356-20R


**QUEEN PANEL HEADBOARD**  
**QUEEN PANEL FOOTBOARD**  
**QUEEN BED RAILS**

32303567  
32703565  
32903569

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the part list below.

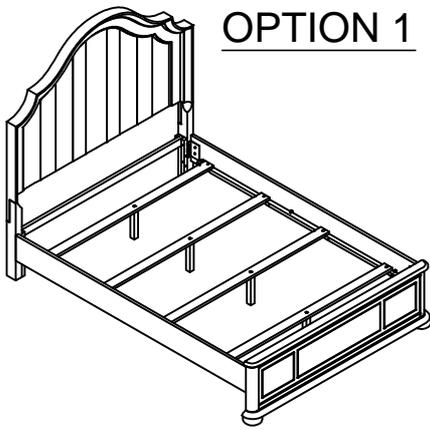

**OPTION 1**

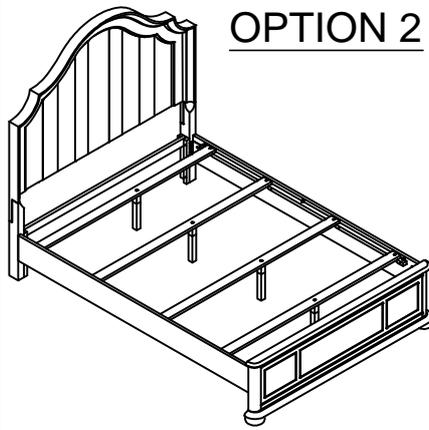


**OPTION 2**

No.	Parts List		
A		Side Rails	2 pieces
B		Footboard	1 piece
C		Slats	4 pieces
D		Long Support Slats	4 pieces
E		Short Support Slats	4 pieces


Hardware List			
1		SCREW M4 * 1"	8 pieces

## OPTION 1

### STEP 1

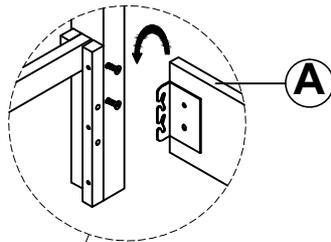


**A**

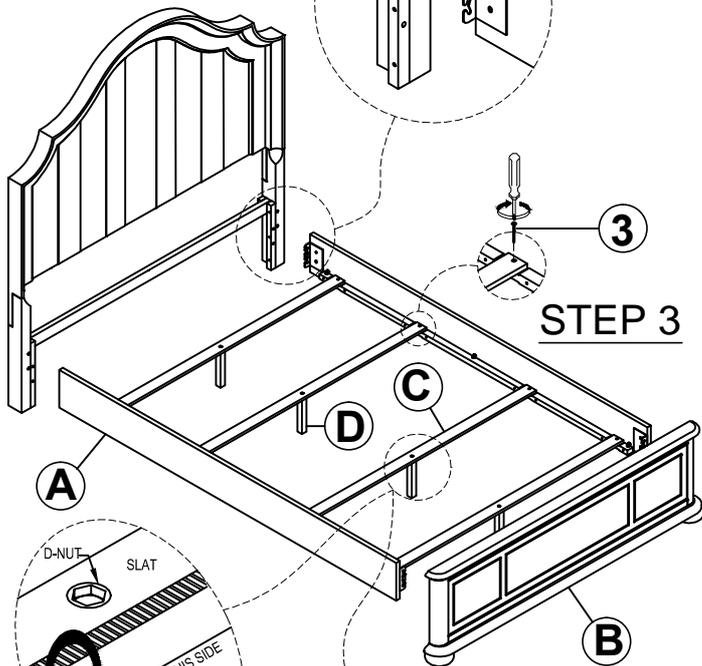

### STEP 3


**3**

**C**

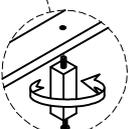

**LEVELER**

### STEP 2

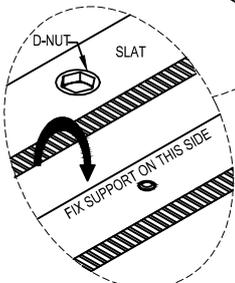


**A**

**D**


**B**

## OPTION 2

### STEP 1

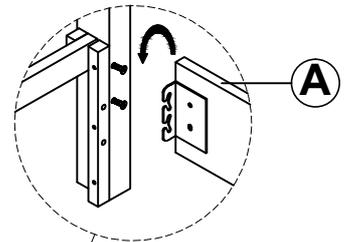


**A**

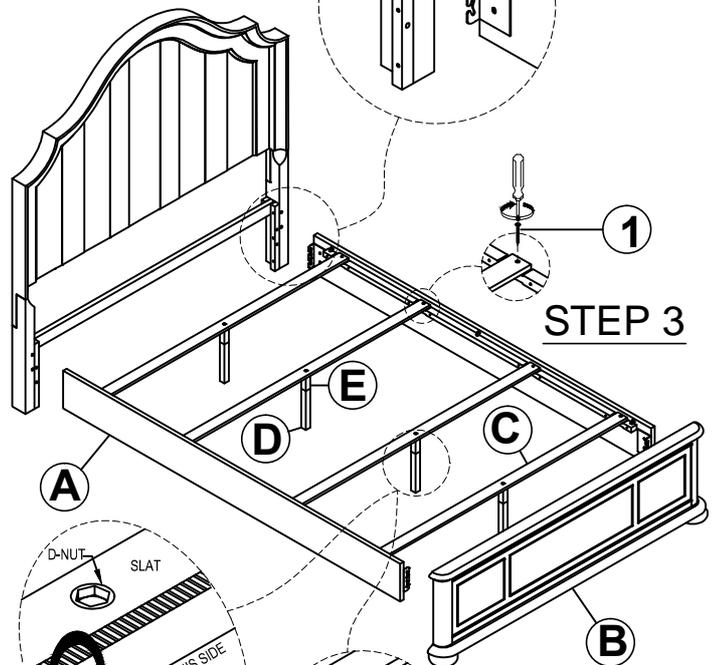

### STEP 3

**1**

### STEP 2

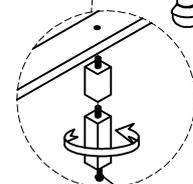

**LEVELER**

**A**

**D**

**B**

**CLEANING INSTRUCTION:** Clear with a soft cloth and warm water with a diluted mild detergent. Follow with a soft cloth and clear water rinse. Then dry thoroughly with a soft cloth.

MADE IN VIETNAM