






Assembly Instructions

JMSN 2412-3 - QUEEN HEADBOARD - SKU#32324129
JMSN 2412-7 - QUEEN FOOTBOARD - SKU#32724127
JMSN 2412-9 - KING QUEEN RAILS - SKU#32924121

Manufactured by JMSN for Rooms to Go


ATTENTION:
This bed comes with reversible bed rails.
If you want to use the bed with just
a mattress and without boxspring,
position the rails so the slat
support is closest to the top
of the rails.

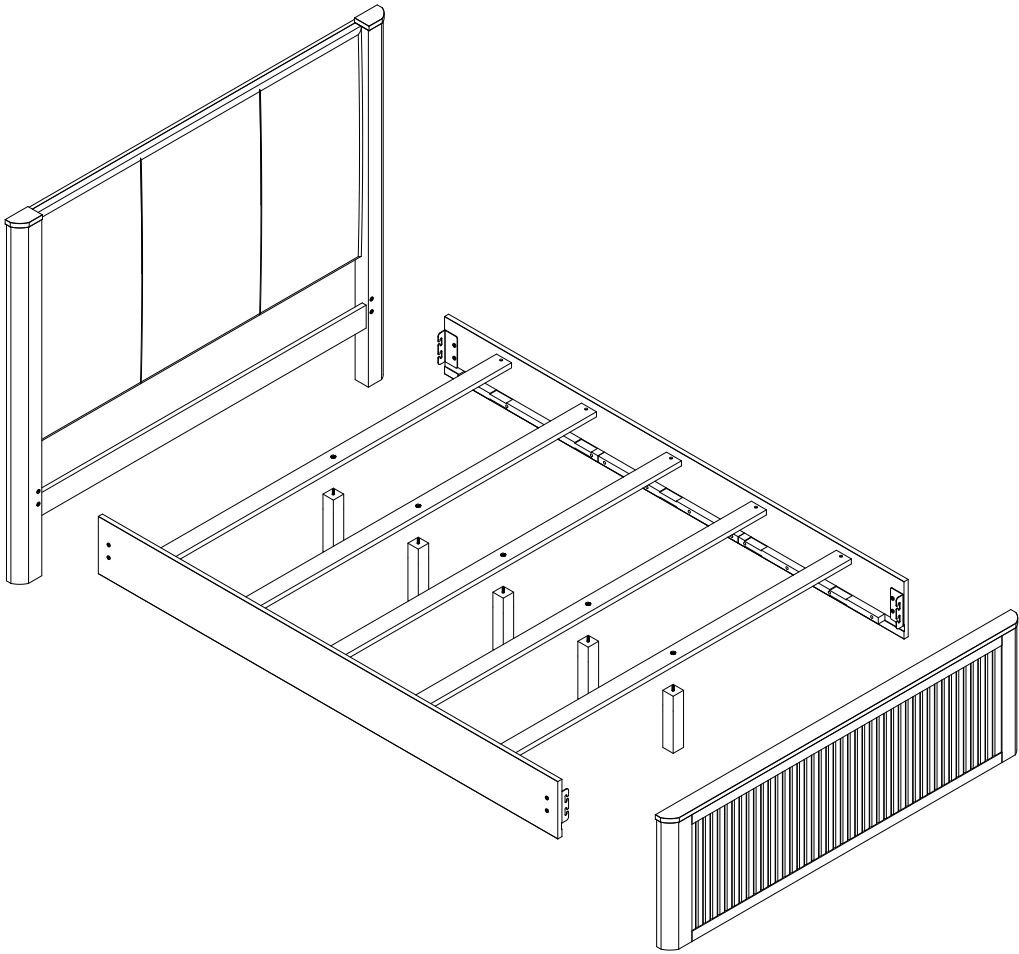

A	 <div>Ø5/32"x1 3/16" Phillips Screw</div>	10
B	 <div>Allen Wrench</div>	01

Tools Required

Phillips screwdriver not supplied

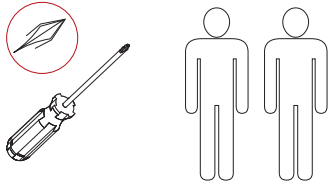

Hardware Pack Location(s): Inside box.

JMSN 2412-3 - QUEEN HEADBOARD - SKU#32324129
JMSN 2412-7 - QUEEN FOOTBOARD - SKU#32724127
JMSN 2412-9 - KING QUEEN RAILS - SKU#32924121



Assembly Instructions


JMSN 2412-3 - QUEEN HEADBOARD - SKU#32324129

JMSN 2412-7 - QUEEN FOOTBOARD - SKU#32724127


JMSN 2412-9 - KING QUEEN RAILS - SKU#32924121

Manufactured by JMSN for Rooms to Go


STEP 1

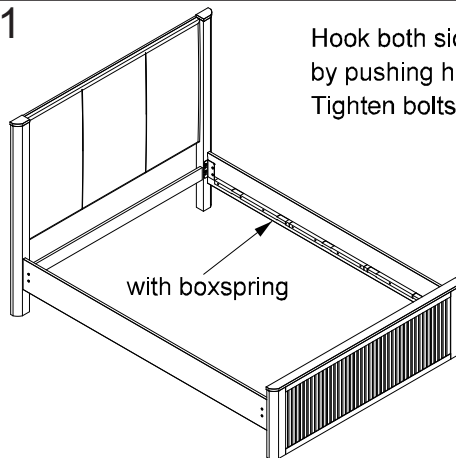

Hook both side rails to Headboard & Footboard by pushing hook down to the bolt. Tighten bolts by Allen Key (B) at this stage.

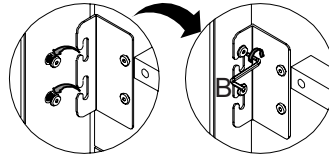


OR

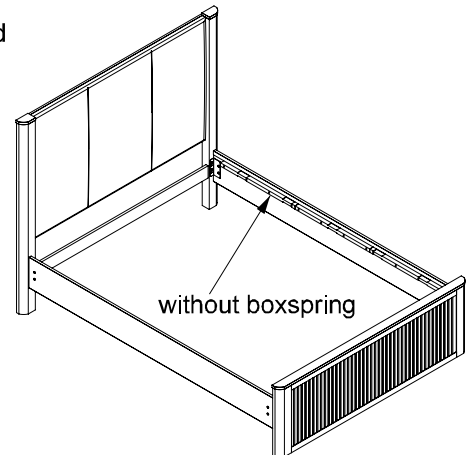


STEP 2

If the slat support is in the lowest position, attach the support leg to the slat.

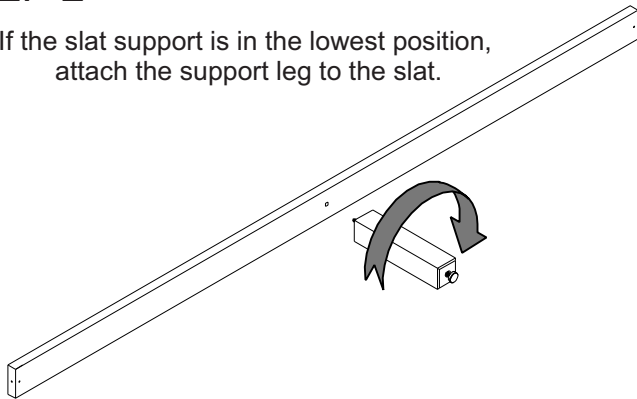


OR

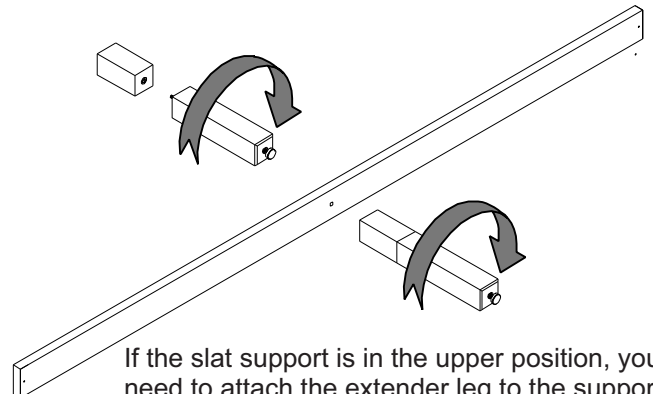


If the slat support is in the upper position, you will need to attach the extender leg to the support leg and attach the fully assembled support leg to the slat.

STEP 3

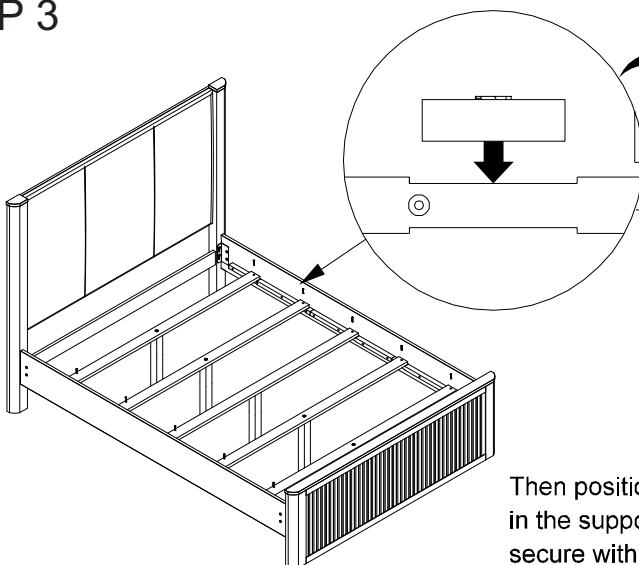

OR

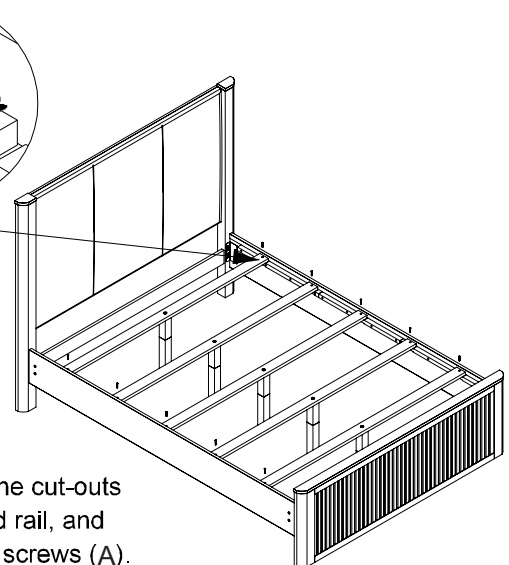

Then position the slats into the cut-outs in the support slat on the bed rail, and secure with the attached 10 screws (A).

Hardware Pack Location(s): Inside box.

JMSN 2412-3 - QUEEN HEADBOARD - SKU#32324129

JMSN 2412-7 - QUEEN FOOTBOARD - SKU#32724127

JMSN 2412-9 - KING QUEEN RAILS - SKU#32924121