

JGWF

Assembly Instructions 2516-QHF UPHL QN Headboard/ Footboard SKU#32325169

2516-QHF UPHL QN Headboard/ Footboard SKU#32325169 2517-QHF UPHL QN Headboard/ Footboard SKU#32325171 2518-QHF UPHL QN Headboard/ Footboard SKU#32325183 2516-RLS UPHL QN/KG Rails SKU#32925161 2517-RLS UPHL QN/KG Rails SKU#32925173 2518-RLS UPHL QN/KG Rails SKU#32925185

| Manufactured by JGWF for ROOMS TO GO▶ | | | | Version 1 - 2024/10/30 | |
|---------------------------------------|---|--------|------|--|-------|
| Code | Hardware List | Q'TY | Code | Part List | Q'TY |
| 1 | Allen Key M4x100mm | 1 PC | A | Headboard | 1 PC |
| 2 | Bolt Ø5/16-18x 2" Spring Washer 5/16" Flat Washer 5/16"x22mm | 8 PCS | | | |
| 3 | Bolt Ø5/16-18x 4"1/4 Spring Washer 5/16" Flat Washer 5/16"x19mm | 2 PCS | В | Headboard legs (Left and Right) | 2 PCS |
| 4 | Bolt Ø5/16-18x 4"1/4 Spring Washer 5/16" Flat Washer 5/16"x22mm | 2 PCS | | | |
| 5 | Screw M4x1"3/8 | 10 PCS | C | Bed Rail Headboard (Left and Right) | 2 PCS |
| Code | Part List | Q'TY | | | |
| Т | Long Support Leg | 5 PCS | D | Legs | 2 PCS |
| G | Short Support Leg | 5 PCS | P | Footboard | 1 PC |
| | | | Е | Side Rail | 2 PCS |
| | | | F | Slats | 5 PCS |
| | | | | | |

Hardware Pack Location(s):


 $\ \, JGWF\ 2516/2517/2518 - QHF\ UPHL\ QN\ HEADBOARD/FOOTBOARD\ -\ SKU\#32325169/\ 32325171/\ 32325183 \\$

***Caution: Please read all instructions carefully before starting the assembly process. Theseparts are cumbersome and heavy. Therefore, two people are recommended in order toprevent personal injury and ensure the parts are not damaged during the assembly.


STEP 1: Attach the Legs to Headboard using Bolt (2)& Allen Key (1) backside **STEP 2:** Attach the Legs to Footboard using Bolt (3)& Allen Key (1)

***Caution: Please read all instructions carefully before starting the assembly process. Theseparts are cumbersome and heavy. Therefore, two people are recommended in order toprevent personal injury and ensure the parts are not damaged during the assembly.


STEP 3: Loosen the Bolts which pre-fixed on Headboard & Footboard. Attach Side Rail to Headboard & Footboard and tighten the Bolts.

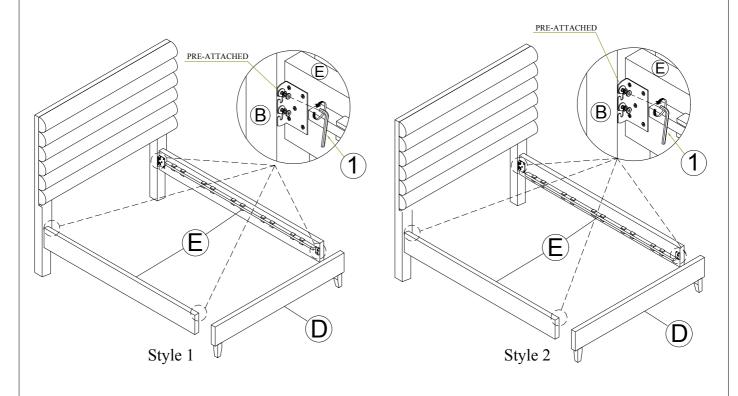

STEP 4: Attach the Bed Rail Headboard (R)&(L) to Headboard using Bolt (2) and Bolt(3)& Allen Key (1)

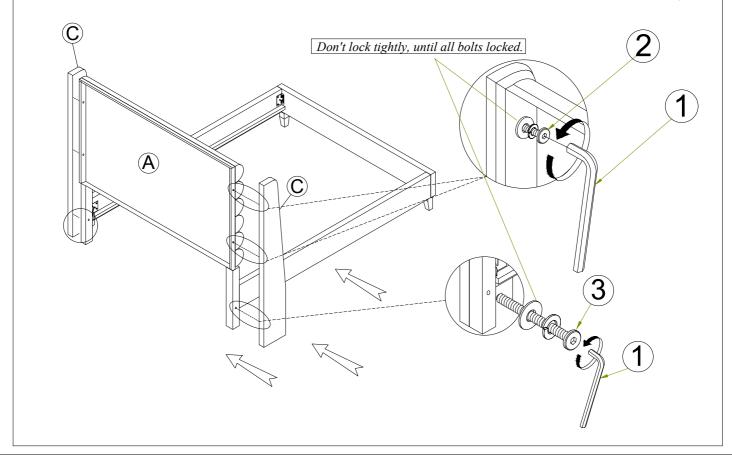

***Caution: Please read all instructions carefully before starting the assembly process. Theseparts are cumbersome and heavy. Therefore, two people are recommended in order toprevent personal injury and ensure the parts are not damaged during the assembly.

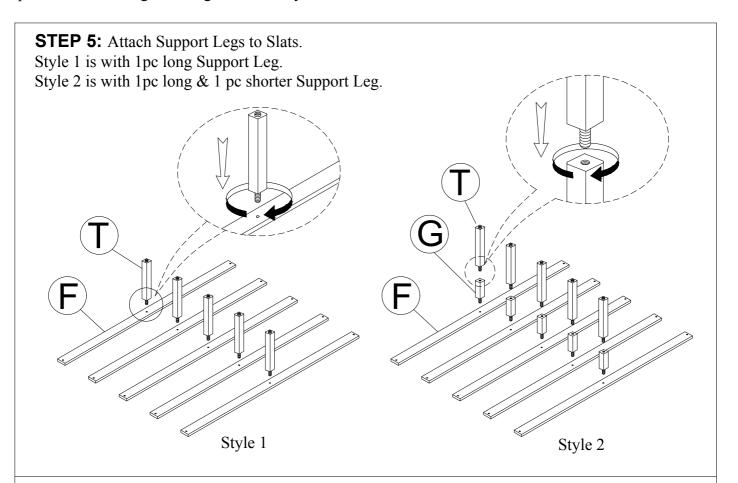

STEP 6: Fix the Slats on to Side Rails by Screw(4).

Not include

Style 1

Adjustable leveler

Style 2