







Assembly Instruction


STOF 2681/2682-215	QN CANOPY HDBD	SKU NO.: 32326818/32326820
STOF 2681/2682-216	QN CANOPY FTBD	SKU NO.: 32726816/32726828
STOF 2681/2682-217	HEADBOARD POST	SKU NO.: 33026813/33026825
STOF 2681/2682-218	FOOTBOARD POST	SKU NO.: 33226817/33226829
STOF 2681/2682-219	QN CANOPY FRAME	SKU NO.: 33326819/33326821
STOF 2681/2682-932	Q/K BED RAILS	SKU NO.: 32926810/32926822



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the part list below.


Step	Code	Hardware	Q'TY
	A	 Allen Key 4mm x 74mm x 29mm	1Pc
1,2,4	B	 Bolt 1/4" x 45mm x 15mm	12Pcs
		 Spring Washer 1/4" x 11mm x 2mm	12Pcs
		 Flat Washer 1/4" x 18mm x 2mm	12Pcs
		 Captured Hardware 1/4" x 19mm x 10mm	12Pcs
10	C	 Screw Ø8mm x 30mm	10Pcs

TOOLS REQUIRED (NOT PROVIDED)


PHILLIPS SCREWDRIVER



Step	Code	Parts List	Q'TY
1,2,3	1	Headboard 	1Pc
	2	Headboard post R/L 	2Pcs
	3	Stretcher 	1Pc
4,5	4	Footboard 	1Pc
	5	Footboard post R/L 	2Pcs
6	6	Side rail 	2Pcs
3,5	7	Front / Back top rail 	2Pcs
7	8	Left / Right top rail 	2Pcs
9	9	Long support leg 	5Pcs
	10	Short support leg 	5Pcs
9,10	11	Slat 	5Pcs

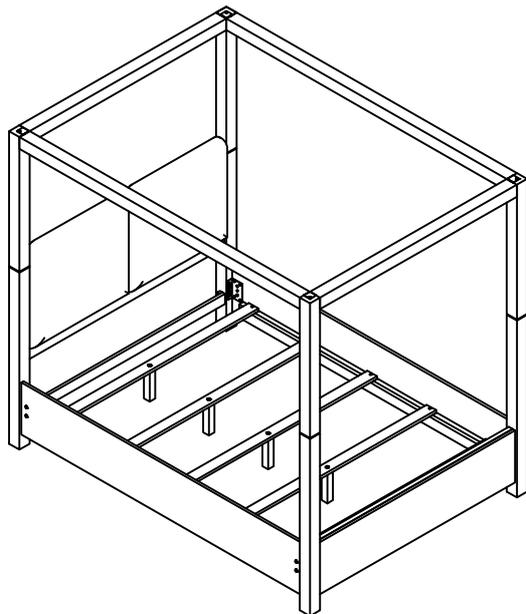

OPTION 1: Low Mattress Position

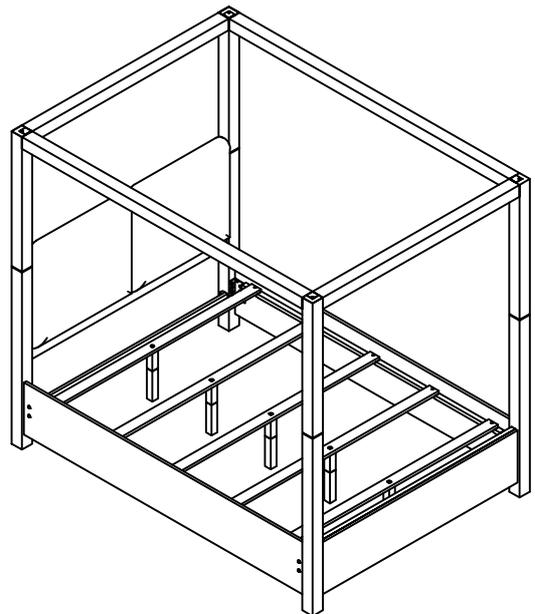

OPTION 2: High Mattress Position

Hardware Pack Location:


QN CANOPY HDBD, SKU NO.: 32326818/32326820

QN CANOPY FTBD, SKU NO.: 32726816/32726828

Assembly Instruction

STOF 2681/2682-215	QN CANOPY HDBD	SKU NO.: 32326818/32326820
STOF 2681/2682-216	QN CANOPY FTBD	SKU NO.: 32726816/32726828
STOF 2681/2682-217	HEADBOARD POST	SKU NO.: 33026813/33026825
STOF 2681/2682-218	FOOTBOARD POST	SKU NO.: 33226817/33226829
STOF 2681/2682-219	QN CANOPY FRAME	SKU NO.: 33326819/33326821
STOF 2681/2682-932	Q/K BED RAILS	SKU NO.: 32926810/32926822

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the part list below.

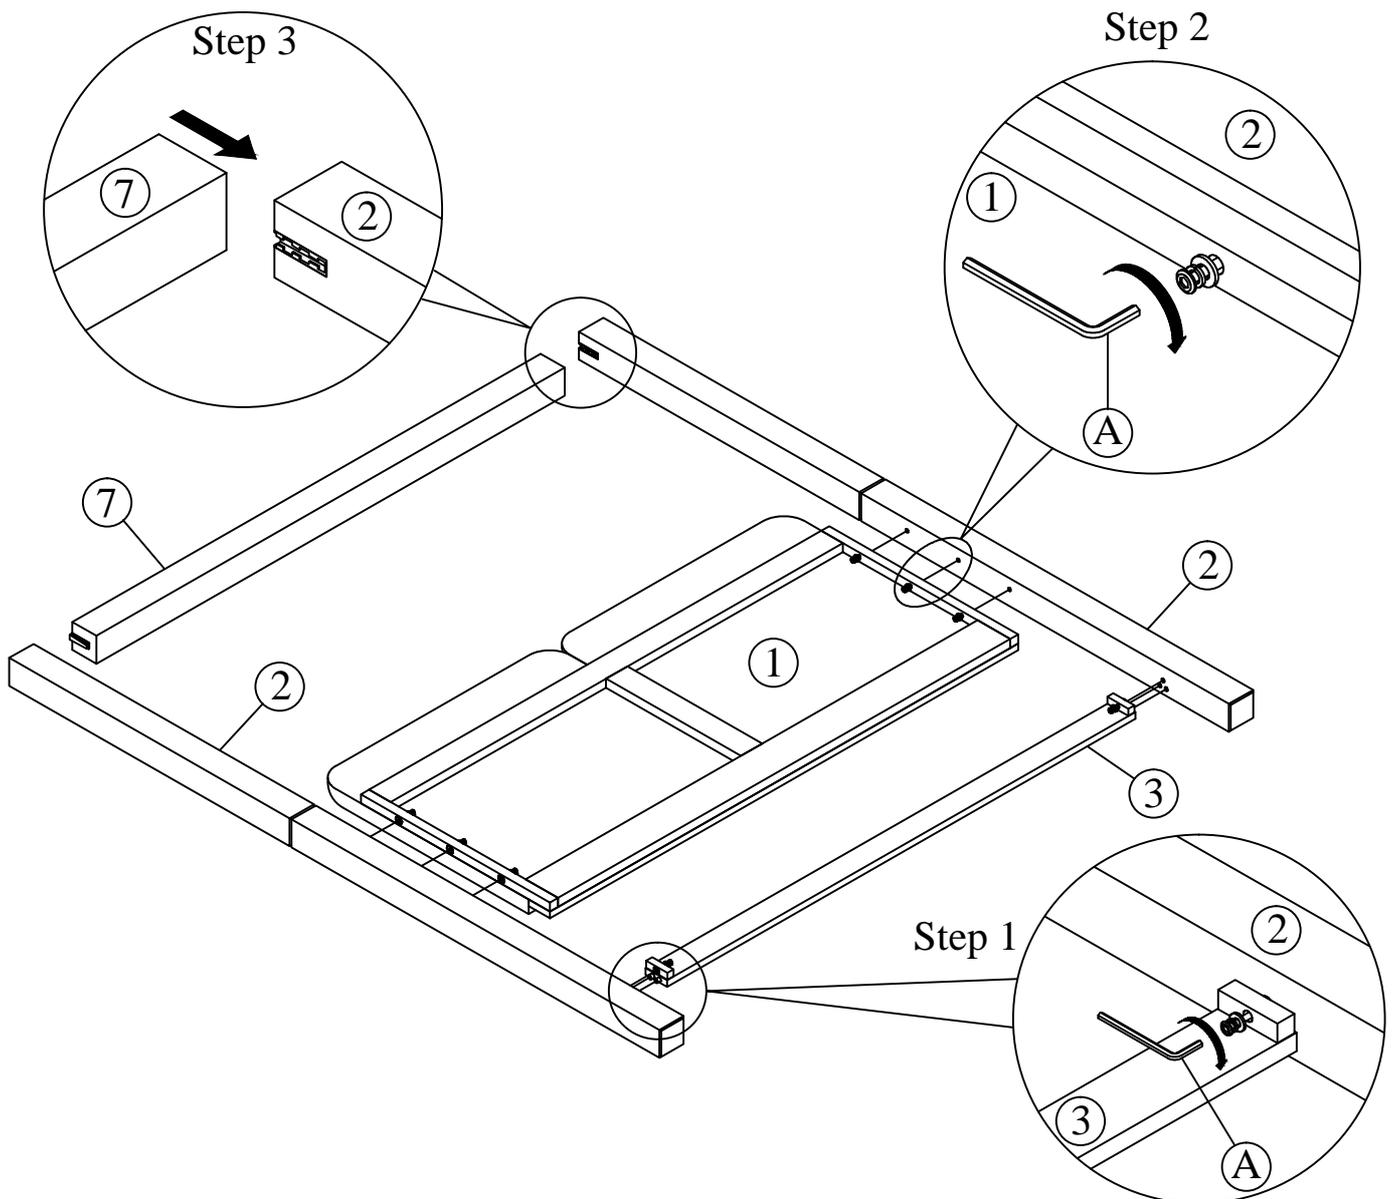

Remark: The bolts (B) were pre-installed on Headboard and Stretcher.

Step 1: Attach stretcher (3) to the headboard post (2) by using allen key (A) tighten the bolts.

Step 2: Attach headboard post (2) to the headboard (1) by using allen key (A) tighten the bolts.

Step 3: Connect front / back top rail (7) to the headboard post (2) by mounting it from the top.


CLEANING INSTRUCTION: Clear with a soft cloth and warm water with a diluted mild detergent. Follow with a soft cloth and clear water rinse . Then dry thoroughly with a soft cloth.



Assembly Instruction

STOF 2681/2682-215	QN CANOPY HDBD	SKU NO.: 32326818/32326820
STOF 2681/2682-216	QN CANOPY FTBD	SKU NO.: 32726816/32726828
STOF 2681/2682-217	HEADBOARD POST	SKU NO.: 33026813/33026825
STOF 2681/2682-218	FOOTBOARD POST	SKU NO.: 33226817/33226829
STOF 2681/2682-219	QN CANOPY FRAME	SKU NO.: 33326819/33326821
STOF 2681/2682-932	Q/K BED RAILS	SKU NO.: 32926810/32926822

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the part list below.

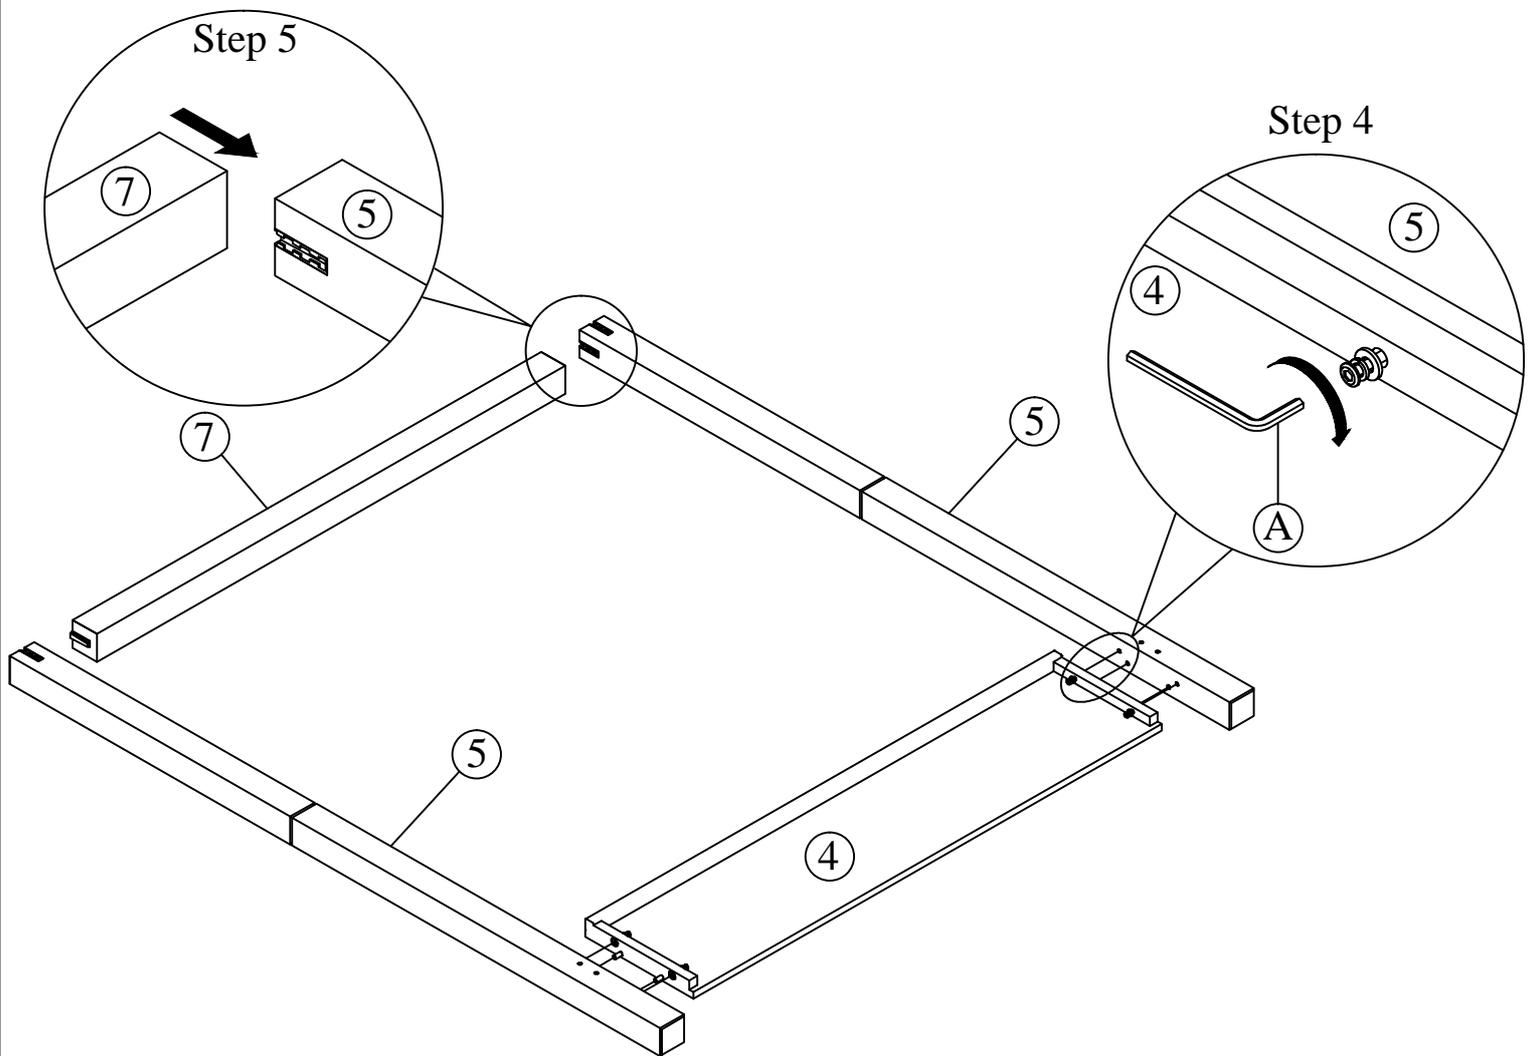

Remark: The bolts (B) were pre-installed on Footboard.

Step 4: Attach footboard post (5) to the footboard (4) by using allen key (A) tighten the bolts.


Step 5: Connect front / back top rail (7) to the footboard post (5) by mounting it from the top.

CLEANING INSTRUCTION: Clear with a soft cloth and warm water with a diluted mild detergent. Follow with a soft cloth and clear water rinse . Then dry thoroughly with a soft cloth.

Assembly Instruction

STOF 2681/2682-215 QN CANOPY HDBD	SKU NO.: 32326818/32326820
STOF 2681/2682-216 QN CANOPY FTBD	SKU NO.: 32726816/32726828
STOF 2681/2682-217 HEADBOARD POST	SKU NO.: 33026813/33026825
STOF 2681/2682-218 FOOTBOARD POST	SKU NO.: 33226817/33226829
STOF 2681/2682-219 QN CANOPY FRAME	SKU NO.: 33326819/33326821
STOF 2681/2682-932 Q/K BED RAILS	SKU NO.: 32926810/32926822

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the part list below.

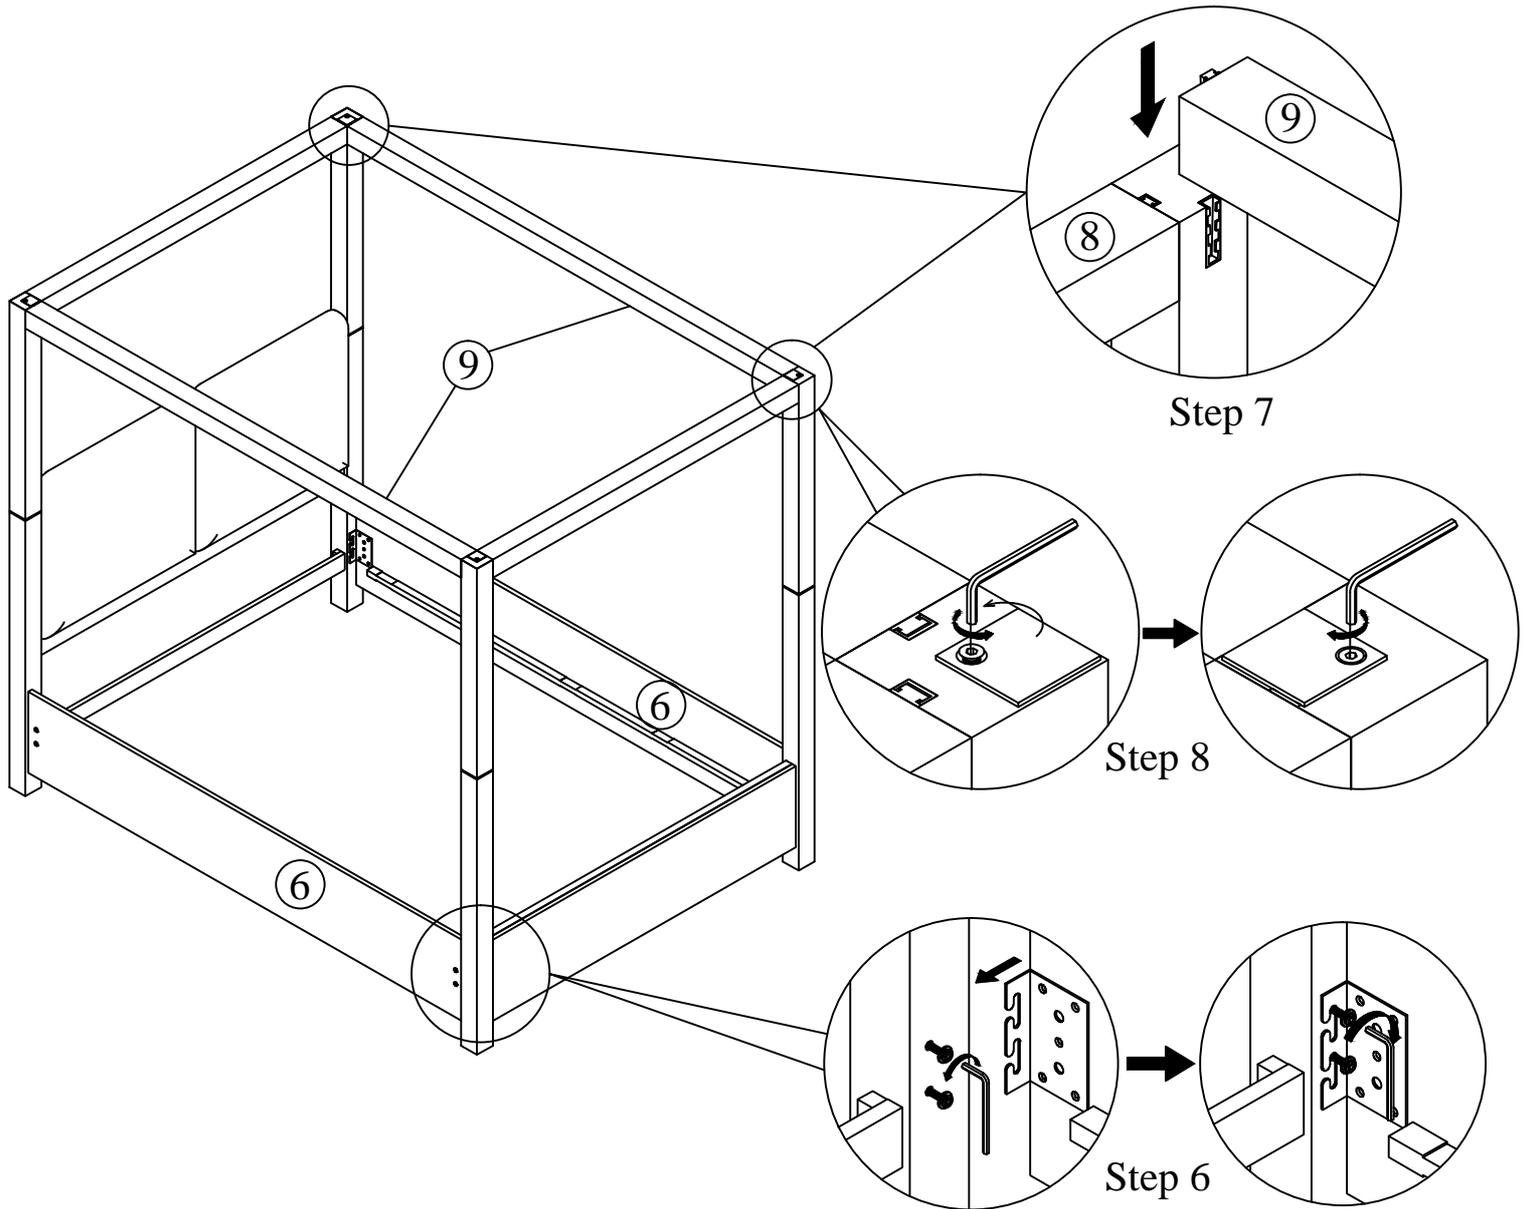

Step 6: Loose the hanger bolts first to made room for the hooks to engage. After the hooks are securely hang in place, tighten the hanger bolts.

Step 7: Connect left / right top rail (8) to the headboard post (2) and footboard post (5) by mounting it from the top.

Step 8: First loose the bolts, rotate the iron plate as shown. Then tighten the bolts.

CLEANING INSTRUCTION: Clear with a soft cloth and warm water with a diluted mild detergent. Follow with a soft cloth and clear water rinse . Then dry thoroughly with a soft cloth.




Assembly Instruction

STOF 2681/2682-215 QN CANOPY HDBD	SKU NO.: 32326818/32326820
STOF 2681/2682-216 QN CANOPY FTBD	SKU NO.: 32726816/32726828
STOF 2681/2682-217 HEADBOARD POST	SKU NO.: 33026813/33026825
STOF 2681/2682-218 FOOTBOARD POST	SKU NO.: 33226817/33226829
STOF 2681/2682-219 QN CANOPY FRAME	SKU NO.: 33326819/33326821
STOF 2681/2682-932 Q/K BED RAILS	SKU NO.: 32926810/32926822

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the part list below.

The reversible siderails can be set up 2 options for mattress position.


OPTION 1: The cleats support slat are at low position so that the mattress is at low position. You will need just the long supports leg for this option.

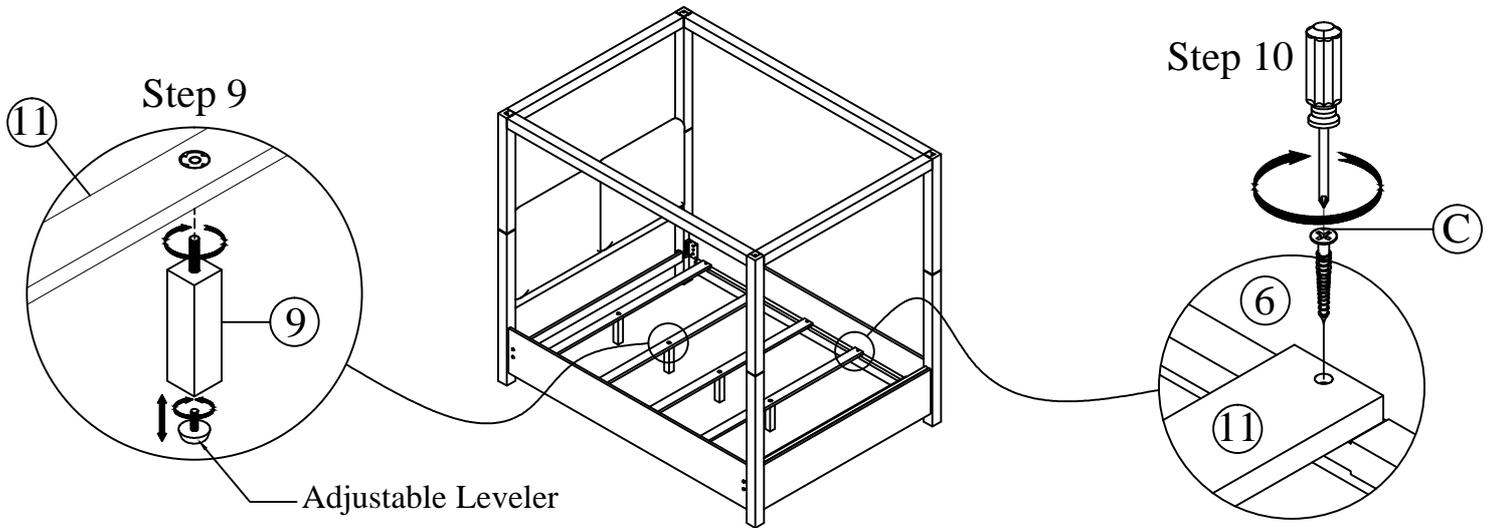

Step 9: Attach long support leg (9) to slat (11) by turning clockwise.

Step 10: Please use a screwdriver(not provided in package) to attach slat (11) to side rails (6) by using screw (C).

OPTION 2: The cleats support slat are high position so that the mattress is high position. You will need both long & short supports leg for this option. The long & short supports leg are connected together before connect to the bed slats.

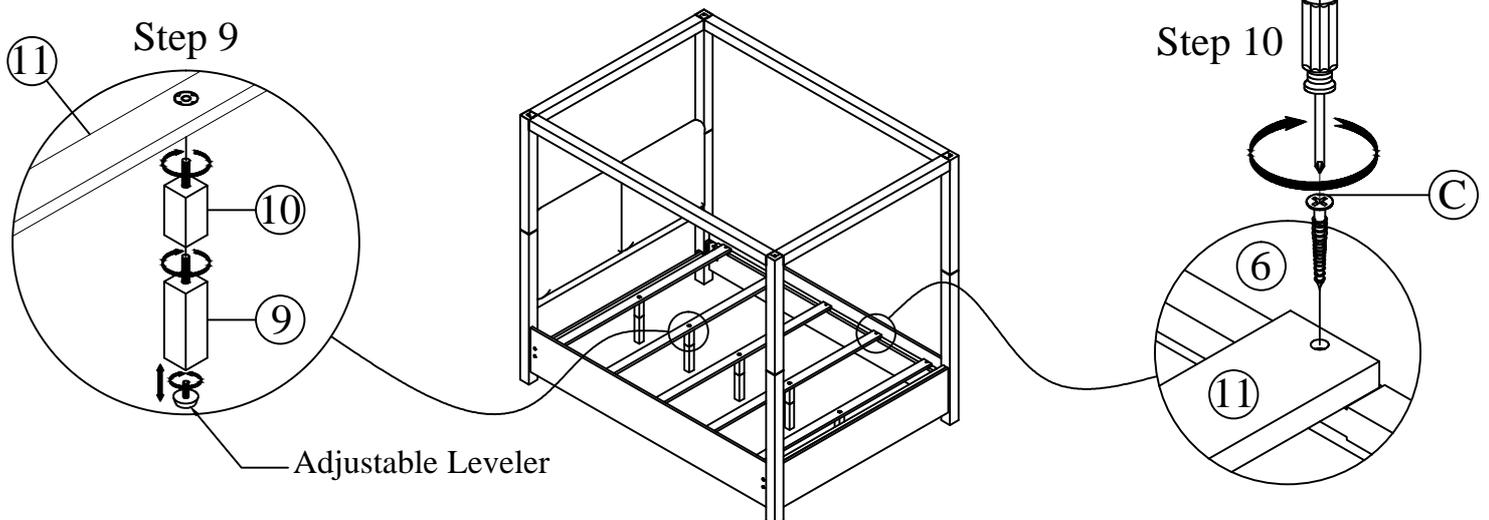

Step 9: Connect long support leg (9) & short support leg (10), and attach them to slat (11) by turning clockwise.

Step 10: Please use a screwdriver(not provided in package) to attach slat (11) to side rails (6) by using screw (C).

CLEANING INSTRUCTION: Clear with a soft cloth and warm water with a diluted mild detergent. Follow with a soft cloth and clear water rinse . Then dry thoroughly with a soft cloth.