



JGWF



Assembly Instructions


3516-QHF QN IVORY UPH HDBD/FTBD
 3517-QHF QN GRAY UPH HDBD/FTBD
 3518-QHF QN GREEN UPH HDBD/FTBD
 3516-QKR KG/QN IVORY UPH SIDERAILS
 3517-QKR KG/QN GRAY UPH SIDERAILS
 3518-QKR KG/QN GREEN UPH SIDERAILS





SKU#32335160
 SKU#32335172
 SKU#32335184
 SKU#32935162
 SKU#32935174
 SKU#32935186

Manufactured by JGWF for ROOMS TO GO ►

Version#1 : 06/30/2026

Code	Hardware List	Q'TY
1	Allen Key M4x100mm 	1PC
2	Bolt Ø5/16-18x 2" (50mm) Spring Washer 5/16" Flat Washer 5/16"x22mm 	10PCS
3	Bolt Ø5/16-18x 4"3/8 (110mm) Spring Washer 5/16" Flat Washer 5/16"x19mm 	2PCS
4	Bolt Ø5/16-18x 4"3/8 (110mm) Spring Washer 5/16" Flat Washer 5/16"x22mm 	2PCS
5	Screw M4x1"1/2 (40mm) 	10PCS
6	Screwdriver (Not Included) 	

Code	Part List	Q'TY
T	Long Support Leg 	5PCS
G	Short Support Leg 	5PCS

Code	Part List	Q'TY
A	Headboard 	1PC
B	Headboard Leg (Left and Right) 	2PCS
C	Bed Rail Headboard (Left and Right) 	2PCS
D	Legs 	2PCS
P	Footboard 	1PC
F	Slats 	5PCS
E	Side Rail 	2PCS



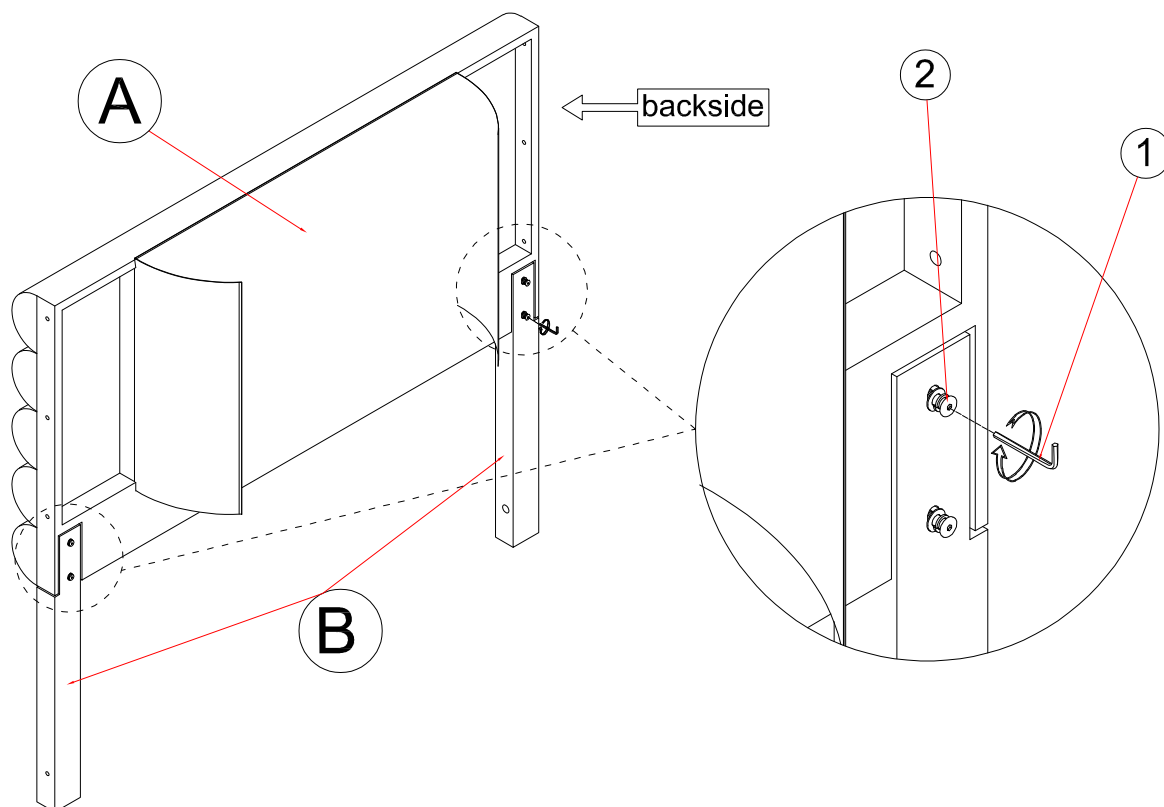
Hardware Pack Location(s):

JGWF 3516/3517/3518-QHF QN IVORY/GRAY/GREEN UPH HDBD/FTBD
 JGWF 3516/3517/3518-QKR KG/QN IVORY/GRAY/GREEN UPH SIDERAILS

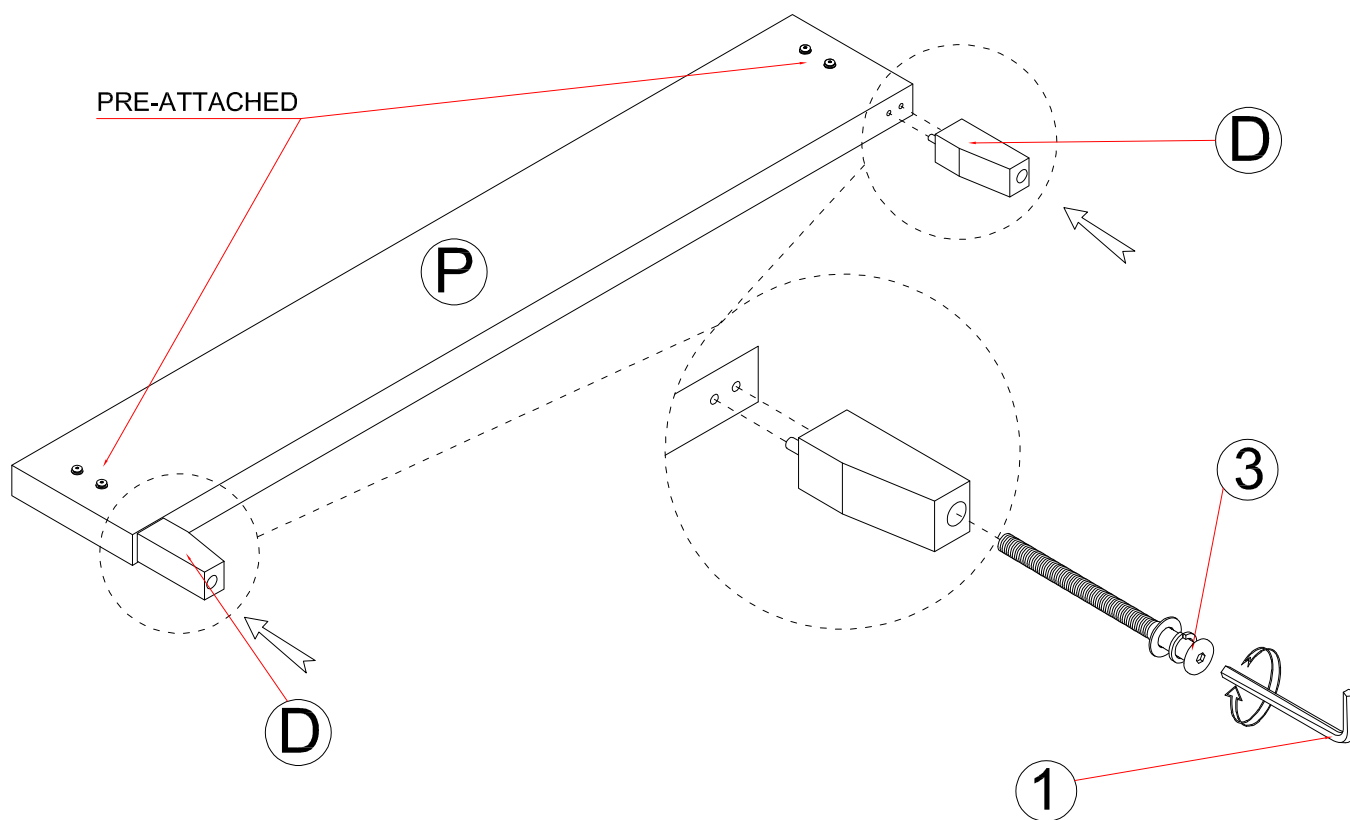
- SKU#32335160/32335172/32335184
 - SKU#32935162/32935174/32935186

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

STEP 1: Attach the Legs (D) to Headboard (P) using Bolt (2) & Allen Key (1).

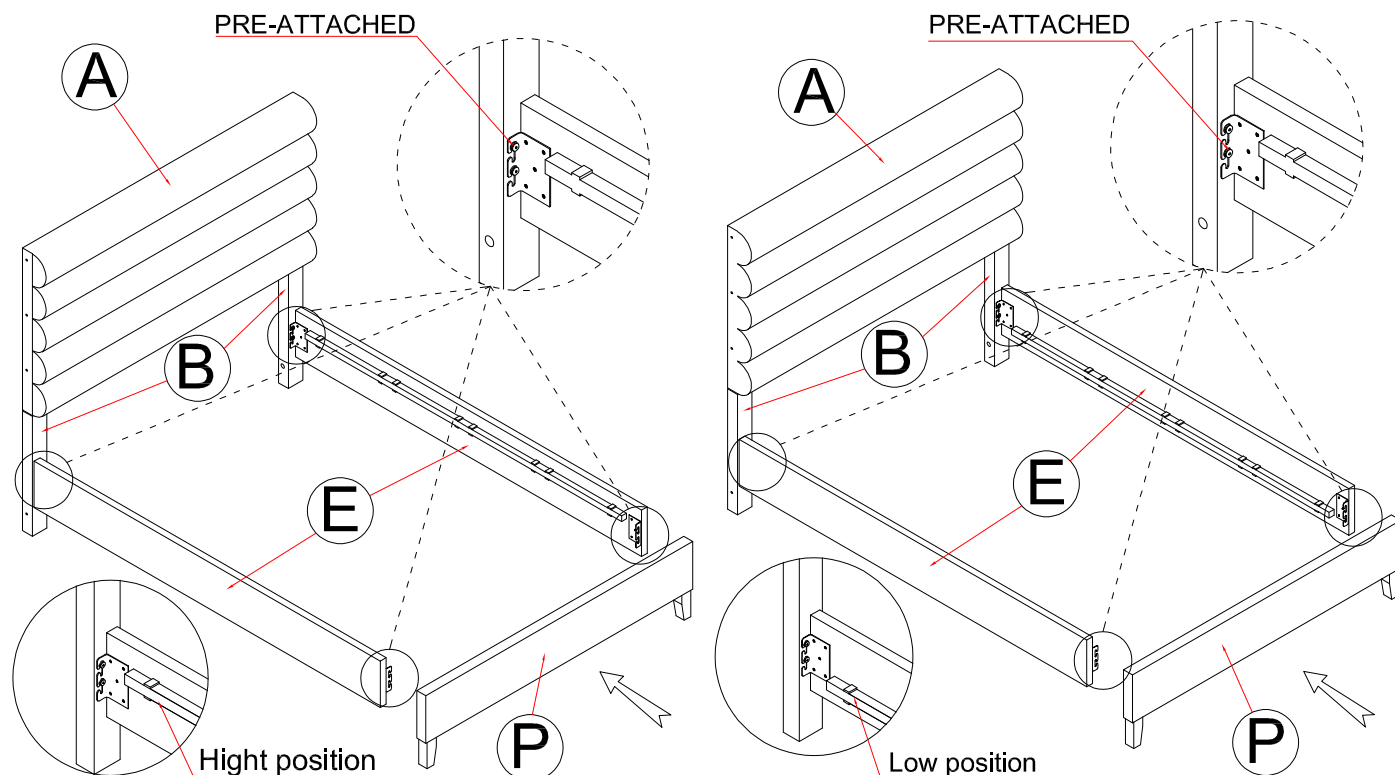


STEP 2: Attach the Legs (D) to Footboard (P) using Bolt (3) & Allen Key (1).

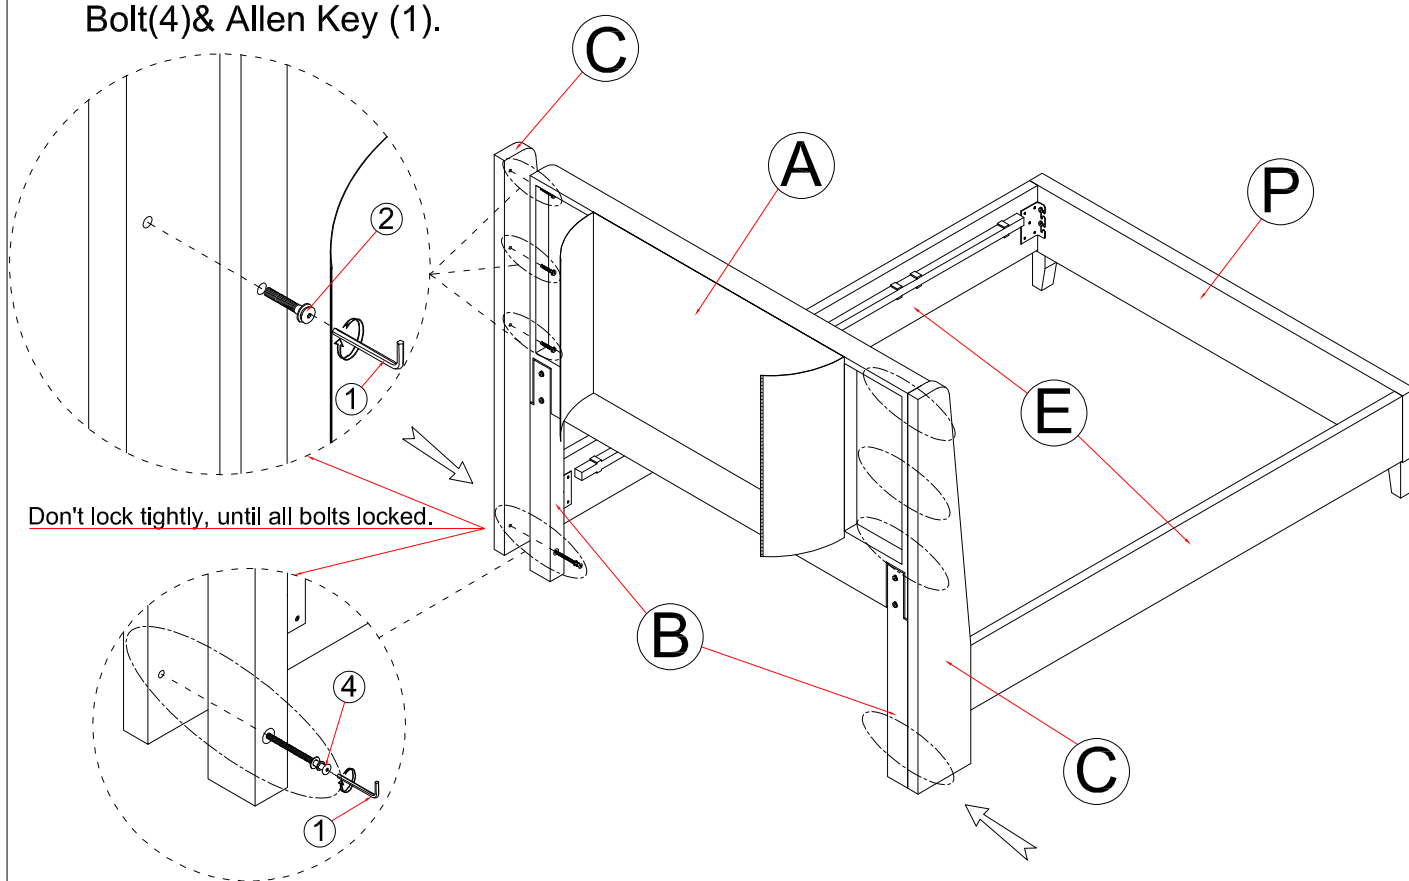


***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

STEP 3: Please check and adjust the pre-installed (pre-attached) hardware to ensure it is properly aligned and securely fixed before assembly

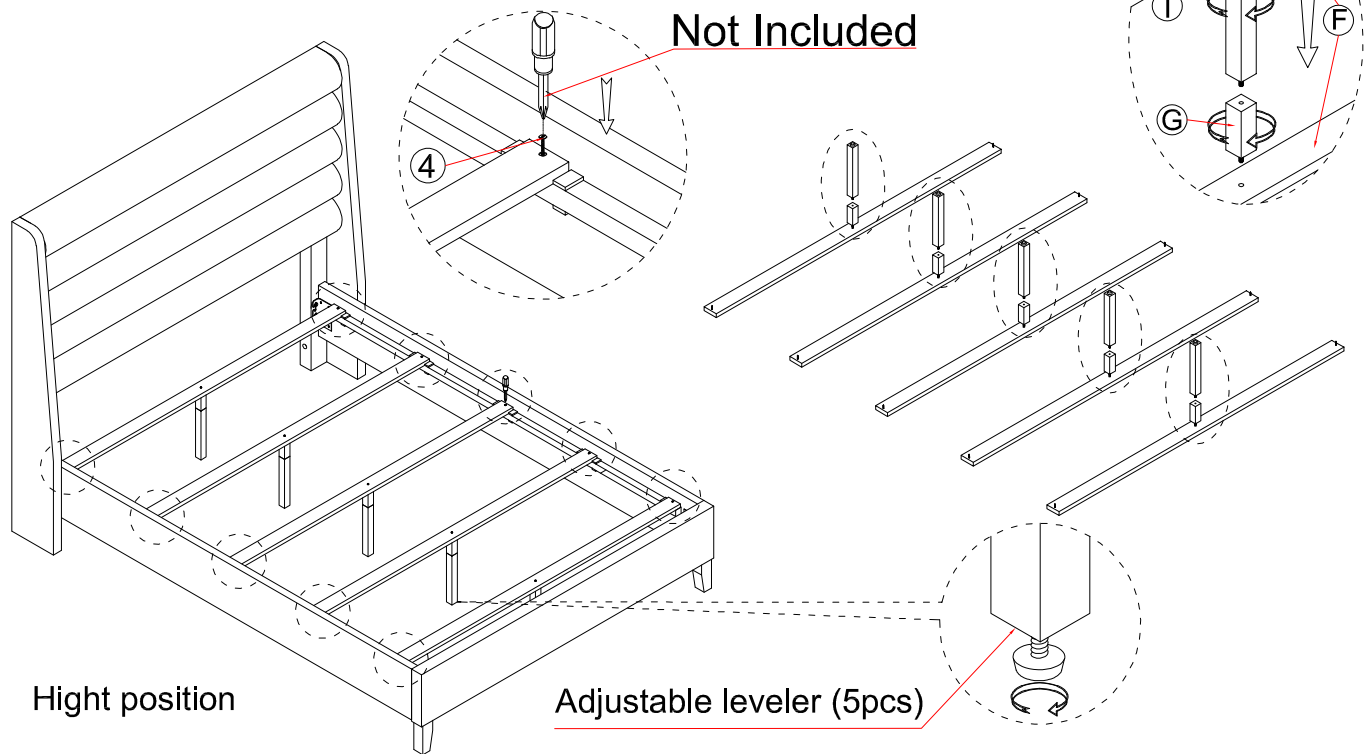


STEP 4: Attach the Bed Rail Headboard to Headboard using Bolt (2) and Bolt(4)& Allen Key (1).



***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

STEP 5 : Attach the Long Support Leg (T) & Short Support Leg (G) on Slats (F) and attach the Slats (F) on Side Rails (E) using Screw (5) .



STEP 5 : Attach the Long Support Leg (T) on Slats (F) and attach the Slats (F) on Side Rails (E) using Screw (5) .

