

Assembly Instructions


| | | | |
|------|----------|---------------------|---------------|
| NAJA | 4046-3QH | QUEEN UPH HEADBOARD | #SKU 32340464 |
| | 4045-3QH | QUEEN UPH HEADBOARD | #SKU 32340452 |
| | 4046-7QF | QUEEN UPH FOOTBOARD | #SKU 32740462 |
| | 4045-7QF | QUEEN UPH FOOTBOARD | #SKU 32740450 |
| | 4046-9RL | QN/KG UPH SIDE RAIL | #SKU 32940466 |
| | 4045-9RL | QN/KG UPH SIDE RAIL | #SKU 32940454 |

Version#1-2025/09/15

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the **HARDWARE LIST** below.


Caution: Please read instructions thoroughly before unpacking assembly parts.

1. We recommend that you assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.
3. Do not tighten all bolts until the assembly is completed.


| NO. | HARDWARE LIST | | Q' ty |
|-----|---|---|-------|
| 1 |  | SCREW M4 * 1" | 10 |
| 2 |  | Allen Key (4mm) | 1 |
| 3 |  | BOLT Ø5/16"-18*60mm(L) (PRE-ASSEMBLED) | 4 |
| | | SPRING WASHER Ø5/16"-13mm (PRE-ASSEMBLED) | 4 |
| | | FLATWASHER Ø5/16"-19mm*2mm(T) (PRE-ASSEMBLED) | 4 |
| 4 |  | BOLT Ø5/16"-18*32mm(L) (PRE-ASSEMBLED) | 4 |
| | | SPRING WASHER Ø5/16"-13mm (PRE-ASSEMBLED) | 4 |
| | | FLATWASHER Ø5/16"-19mm*2mm(T) (PRE-ASSEMBLED) | 4 |

| NO. | PARTS LIST | | Q' ty |
|-----|---|-------------------------------|-------|
| A |  | Headboard | 1 |
| B |  | Side rails | 2 |
| C |  | Footboard | 1 |
| D |  | Slats | 5 |
| E |  | Short Support Slats (leveler) | 5 |
| F |  | Long Support Slats | 5 |

OPTION 1 LOW POSITION

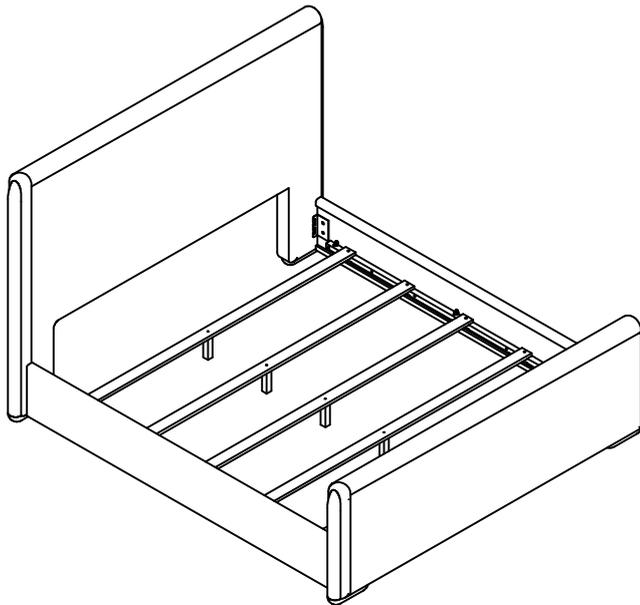

OPTION 2 HIGH POSITION

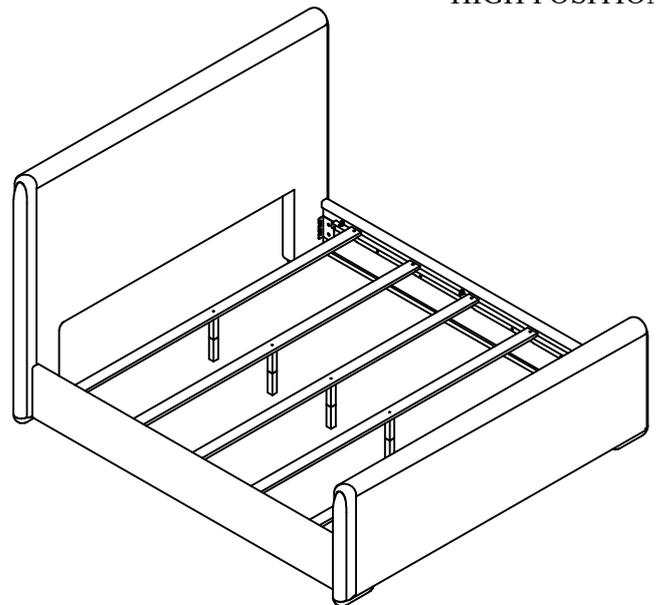

Hardware pack Location(s): NAJA 4046-3QH QUEEN UPH HEADBOARD #SKU 32340464
4045-3QH QUEEN UPH HEADBOARD #SKU 32340452
4046-7QF QUEEN UPH FOOTBOARD #SKU 32740462
4045-7QF QUEEN UPH FOOTBOARD #SKU 32740450

MADE IN VIETNAM

Assembly Instructions

| | | | |
|------|----------|---------------------|---------------|
| NAJA | 4046-3QH | QUEEN UPH HEADBOARD | #SKU 32340464 |
| | 4045-3QH | QUEEN UPH HEADBOARD | #SKU 32340452 |
| | 4046-7QF | QUEEN UPH FOOTBOARD | #SKU 32740462 |
| | 4045-7QF | QUEEN UPH FOOTBOARD | #SKU 32740450 |
| | 4046-9RL | QN/KG UPH SIDE RAIL | #SKU 32940466 |
| | 4045-9RL | QN/KG UPH SIDE RAIL | #SKU 32940454 |


Version#1-2025/09/15

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the **HARDWARE LIST** below.

OPTION 1 LOW POSITION

STEP/PASO: 1

Attach the side rail to the headboard and footboard (BOLT-PRE-ASSEMBLED)

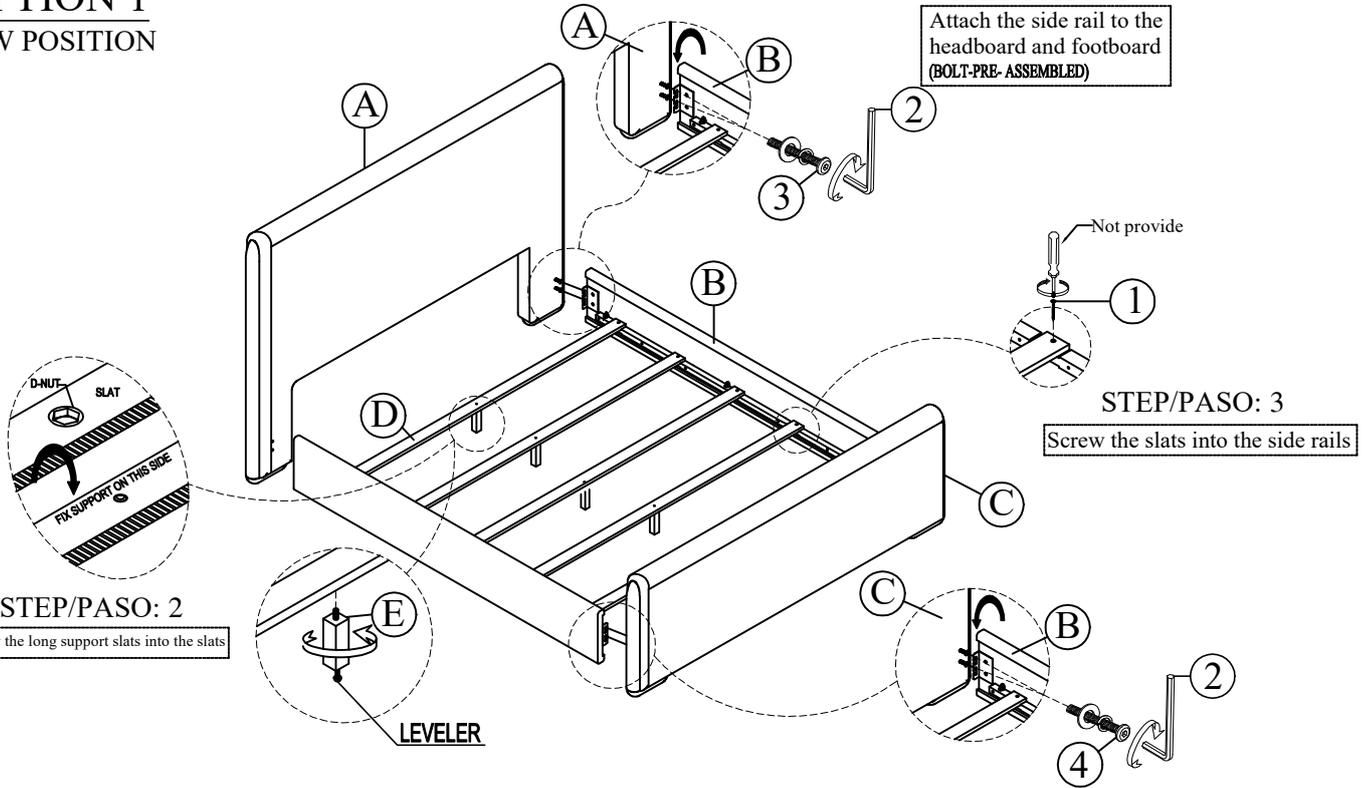

STEP/PASO: 2

Screw the long support slats into the slats


STEP/PASO: 3

Screw the slats into the side rails

OPTION 2 HIGH POSITION

STEP/PASO: 1

Attach the side rail to the headboard and footboard (BOLT-PRE-ASSEMBLED)

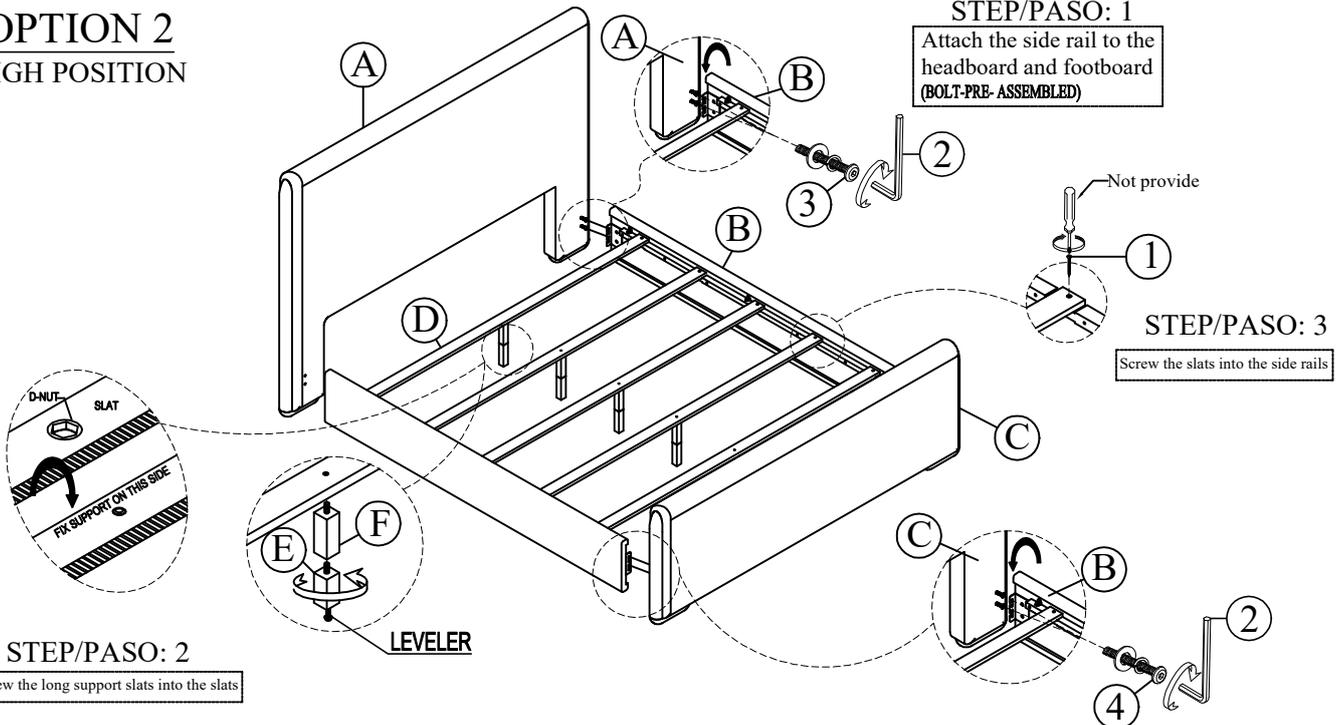

STEP/PASO: 2

Screw the long support slats into the slats

STEP/PASO: 3

Screw the slats into the side rails

Hardware pack Location(s):

| | | | |
|------|----------|---------------------|---------------|
| NAJA | 4046-3QH | QUEEN UPH HEADBOARD | #SKU 32340464 |
| | 4045-3QH | QUEEN UPH HEADBOARD | #SKU 32340452 |
| | 4046-7QF | QUEEN UPH FOOTBOARD | #SKU 32740462 |
| | 4045-7QF | QUEEN UPH FOOTBOARD | #SKU 32740450 |

MADE IN VIETNAM