



Assembly Instructions


WRLW 4162-21/4162-40

CANOPY UPHOLSTERED QUEEN BED/
CANOPY UPHOLSTERED KING BED

Manufactured by WRLW for Rooms To Go

SKU#32341620/33441622

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the Hardware List below.

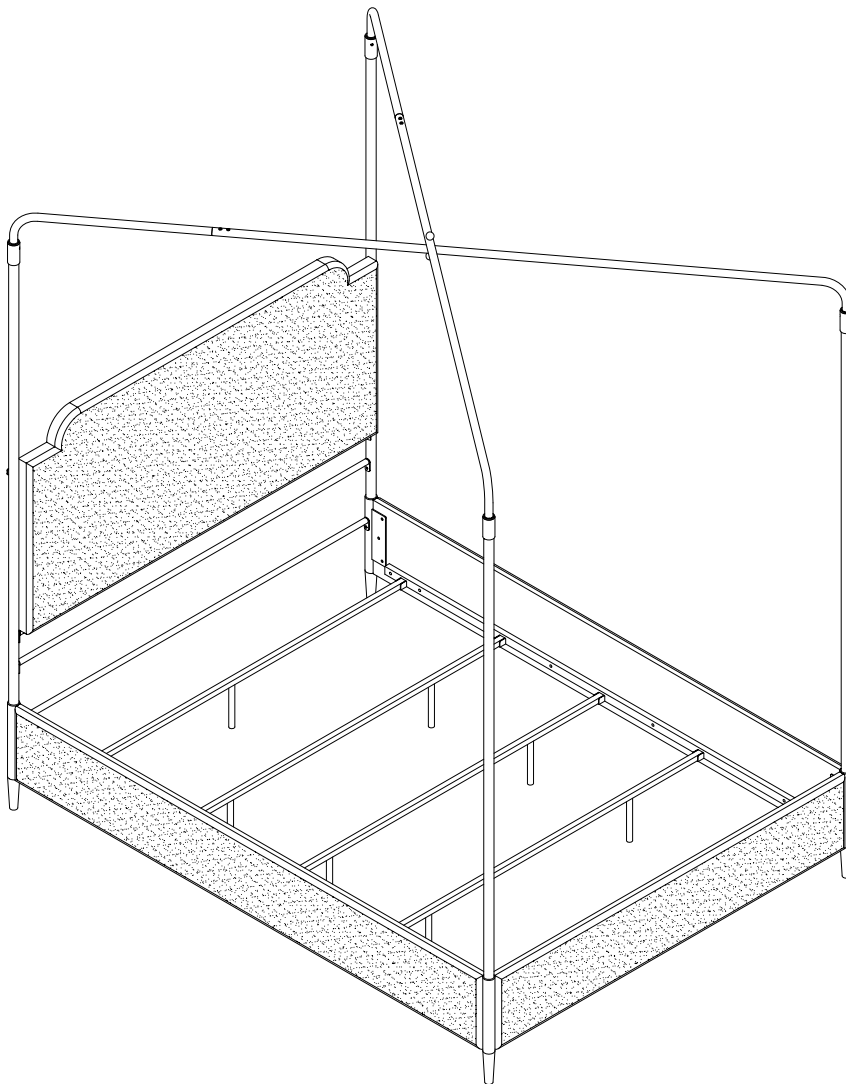

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
WITH SERVICE OR PARTS REPLACEMENT REQUEST











Assembly Instructions

WRLW 4162-21/4162-40

CANOPY UPHOLSTERED QUEEN BED/
CANOPY UPHOLSTERED KING BED

SKU#32341620/33441622

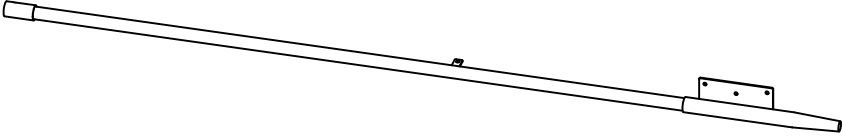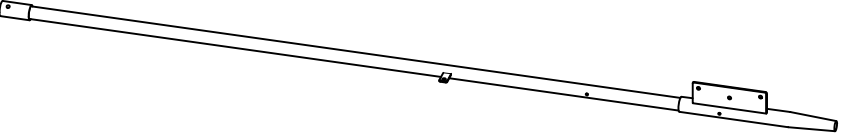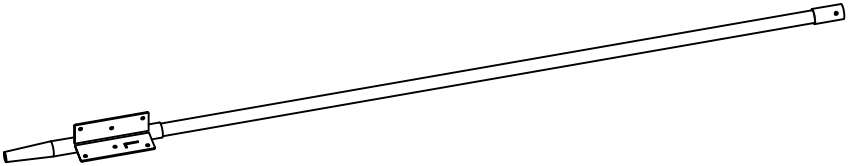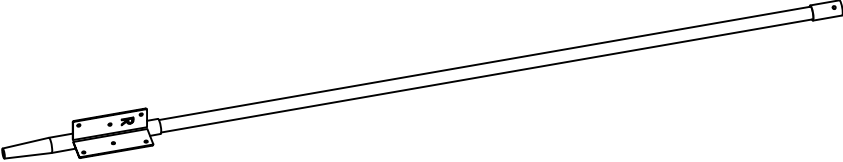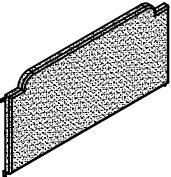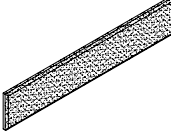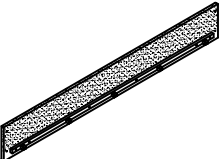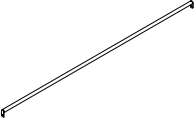4162-21/4162-40 CANOPY UPHOLSTERED QUEEN BED/CANOPY UPHOLSTERED KING BED			
NO.	PARTS LIST	IMAGE	QTY
A	Left headboard post		1
B	Right headboard post		1
C	Left footboard post		1
D	Right footboard post		1
E	Headboard panel		1
F	Footboard panel		1
G	Side panel		2
H	Long cross bar		1

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
WITH SERVICE OR PARTS REPLACEMENT REQUEST







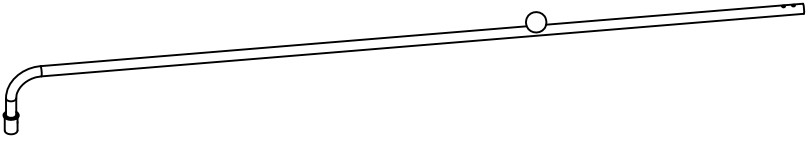



Assembly Instructions

WRLW 4162-21/4162-40

CANOPY UPHOLSTERED QUEEN BED/
CANOPY UPHOLSTERED KING BED

SKU#32341620/33441622

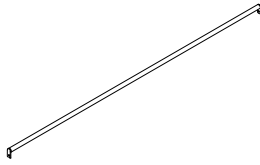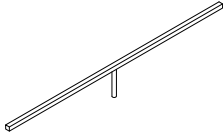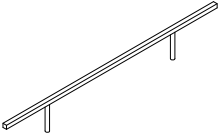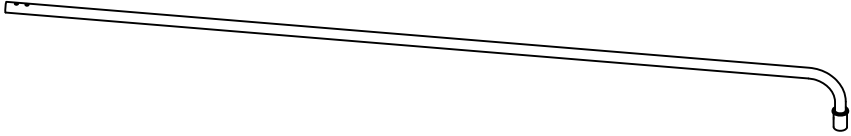4162-21/4162-40 CANOPY UPHOLSTERED QUEEN BED/CANOPY UPHOLSTERED KING BED			
NO.	PARTS LIST	IMAGE	QTY
I	Short Cross bar		1
J	Slat 1		2
K	Slat 2		3
L	Short canopy 1		1
M	Long canopy 1		1
N	Short canopy 2		1
O	Long canopy 2		1
P	Top ball		1

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
WITH SERVICE OR PARTS REPLACEMENT REQUEST












Assembly Instructions

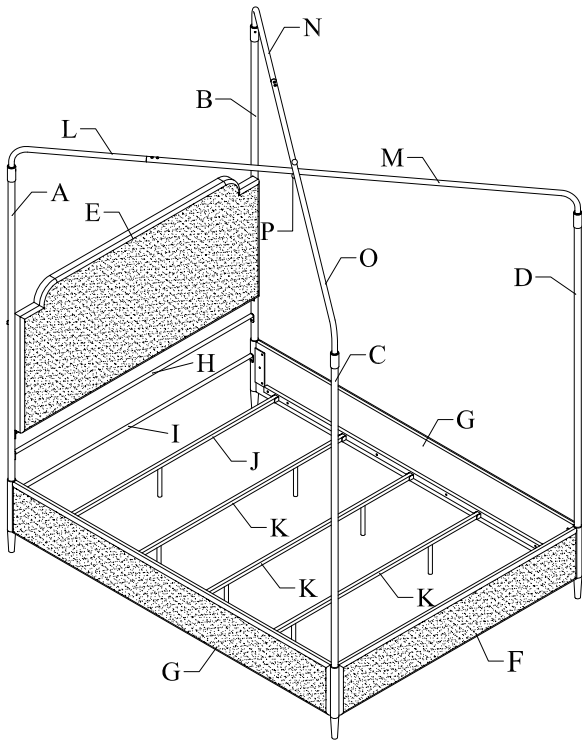WRLW 4162-21/4162-40

CANOPY UPHOLSTERED QUEEN BED/
CANOPY UPHOLSTERED KING BED

SKU#32341620/33441622





STEP	NO#	HARDWARE	QTY
	Q	Allen Key 4x22x60mm 	1
	R	Allen Key 5x24x60mm 	1
1	T	Bolt 1/4"x20x5/8" 	10
2	U	Bolt 5/16"x18x5/8" 	6
3	U	Bolt 5/16"x18x5/8" 	6
4	U	Bolt 5/16"x18x5/8" 	6
5	S	Bolt 1/4"x20x5/8" 	4
7	S	Bolt 1/4"x20x5/8" 	4

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier and will eliminate damage to the product or injury to persons during assembly.
2. Please do not over tighten screws or bolts until assembly is complete.
3. Please put all parts on a non-abrasive floor before assembly, and follow assembly steps to assemble your newly purchased product correctly and efficiently.

Hardware Pack Location

SKU NO	STYLE NO	DESCRIPTION
32341620	4162-21	CANOPY UPHOLSTERED QUEEN BED
33441622	4162-40	CANOPY UPHOLSTERED KING BED

4162-21/4162-40
Hardware Pack Location

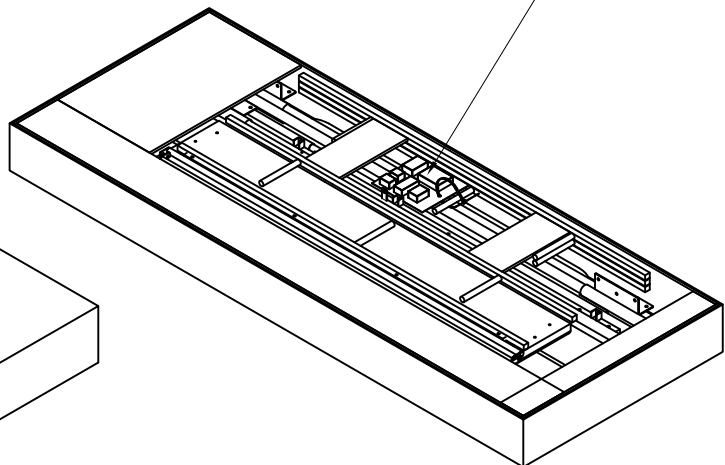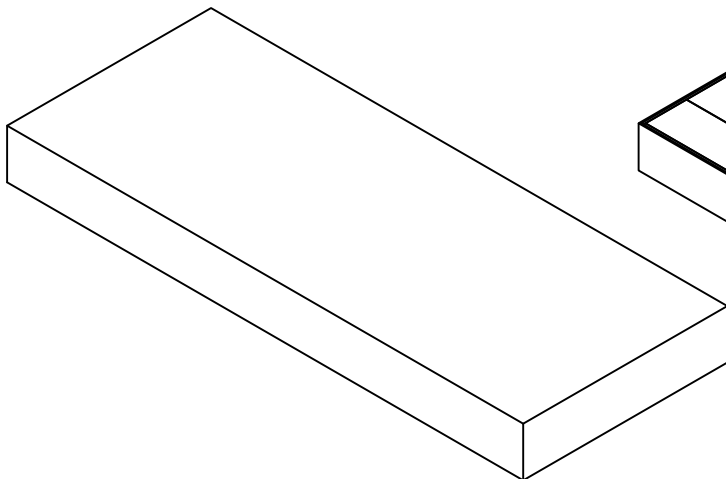

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST



Assembly Instructions


WRLW 4162-21/4162-40

CANOPY UPHOLSTERED QUEEN BED/
CANOPY UPHOLSTERED KING BED


SKU#32341620/33441622

*** Caution : Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

STEP:1

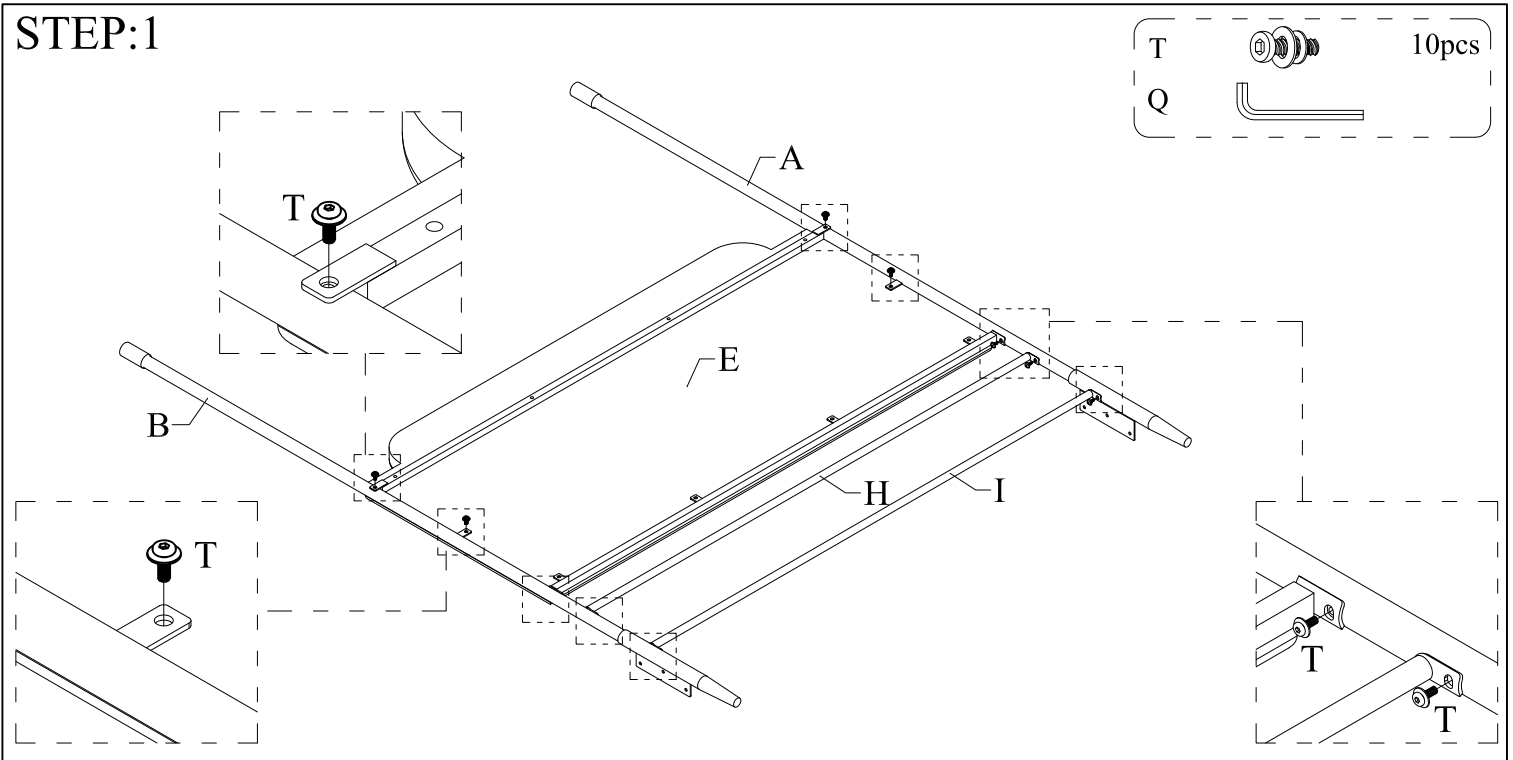

STEP:2

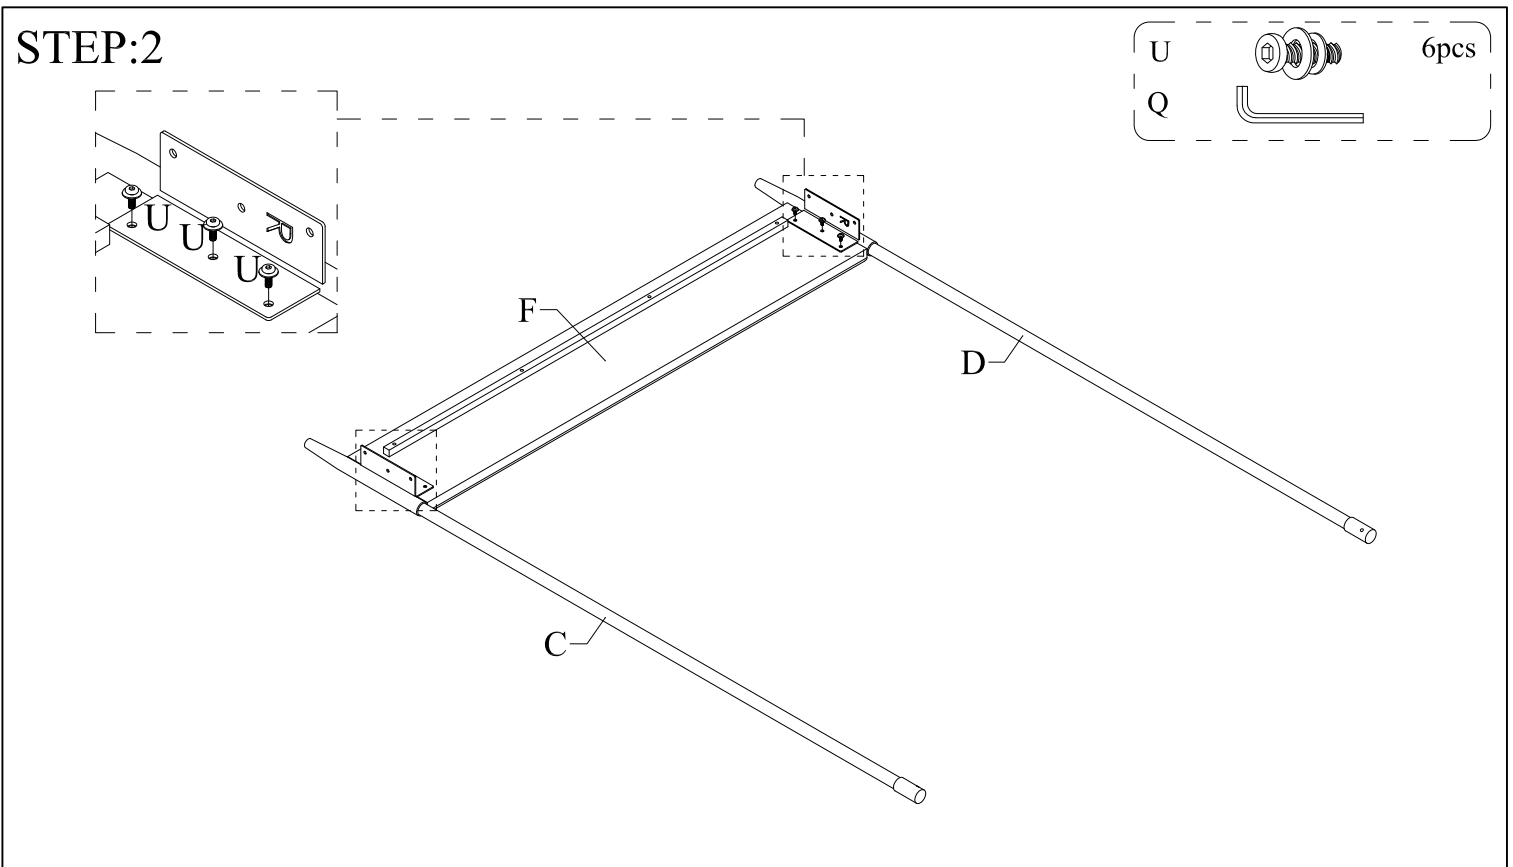

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST





Assembly Instructions

WRLW 4162-21/4162-40



CANOPY UPHOLSTERED QUEEN BED/
CANOPY UPHOLSTERED KING BED

SKU#32341620/33441622

STEP:3

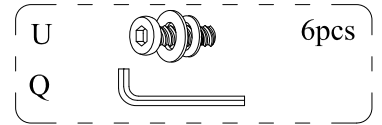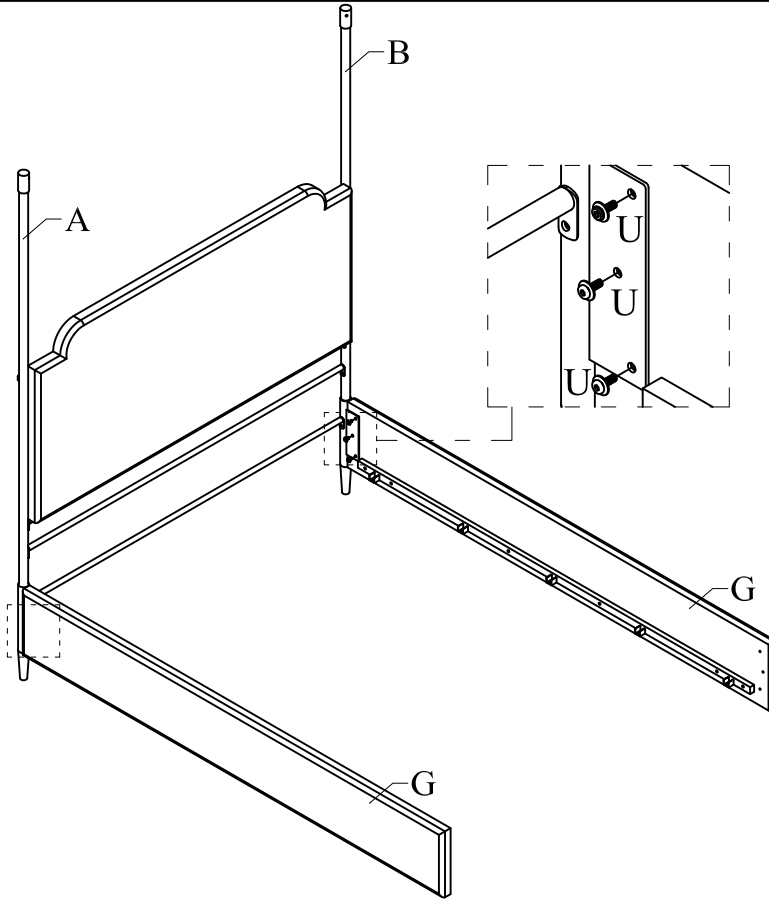

STEP:4

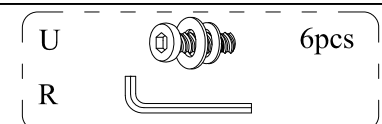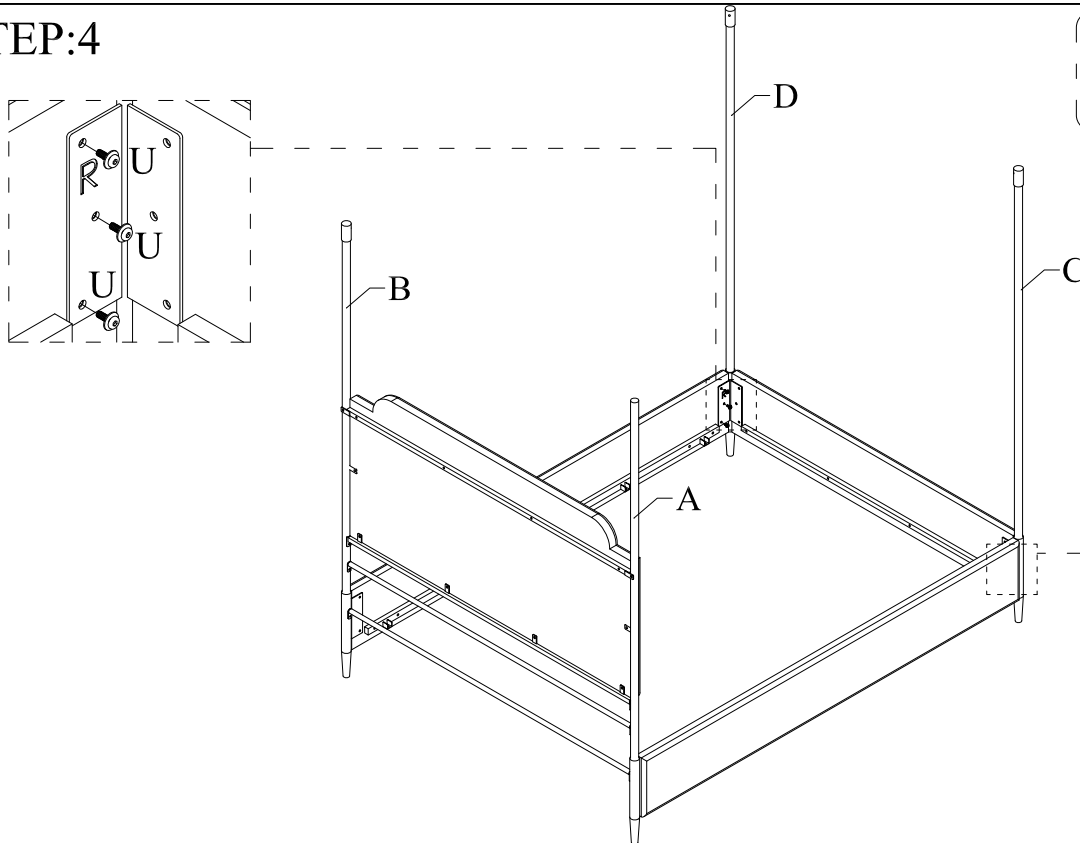

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
WITH SERVICE OR PARTS REPLACEMENT REQUEST





Assembly Instructions

WRLW 4162-21/4162-40


CANOPY UPHOLSTERED QUEEN BED/
CANOPY UPHOLSTERED KING BED

SKU#32341620/33441622

STEP:5

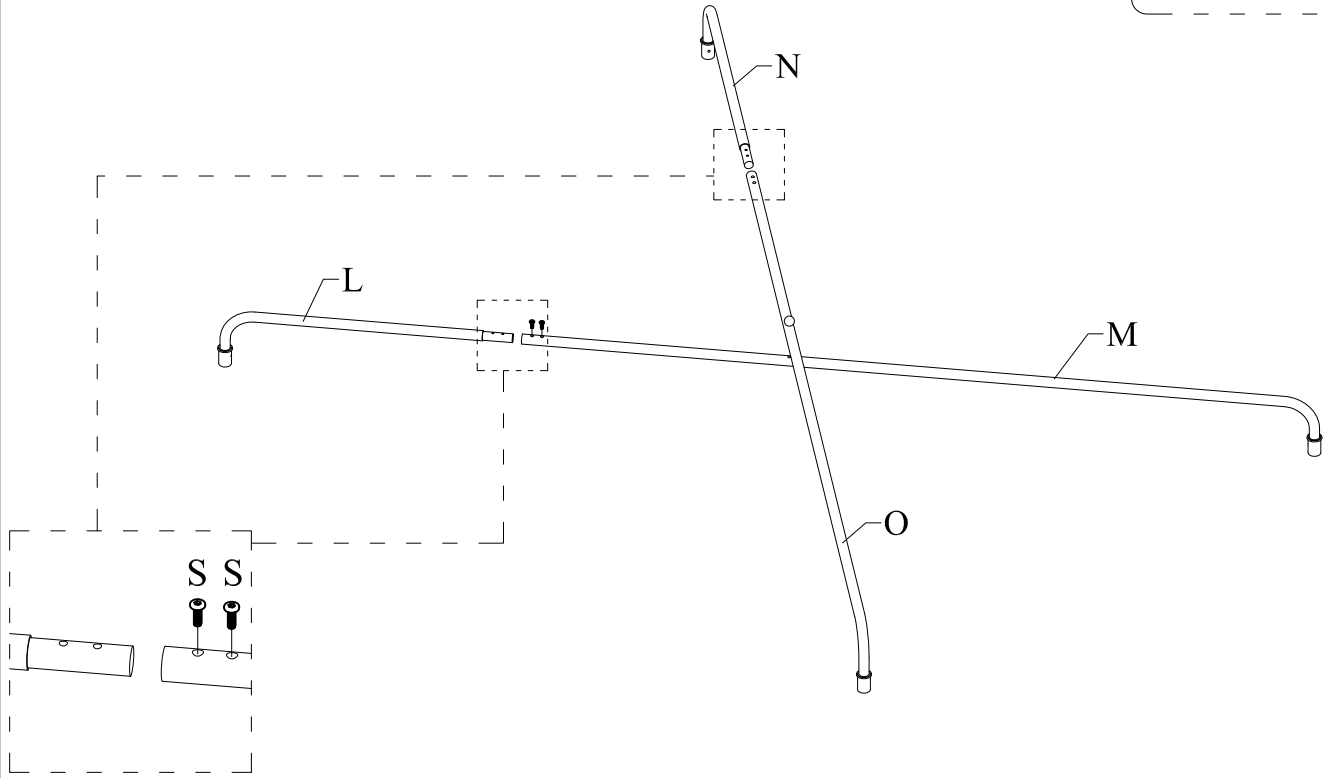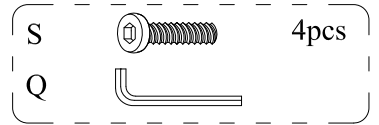

STEP:6

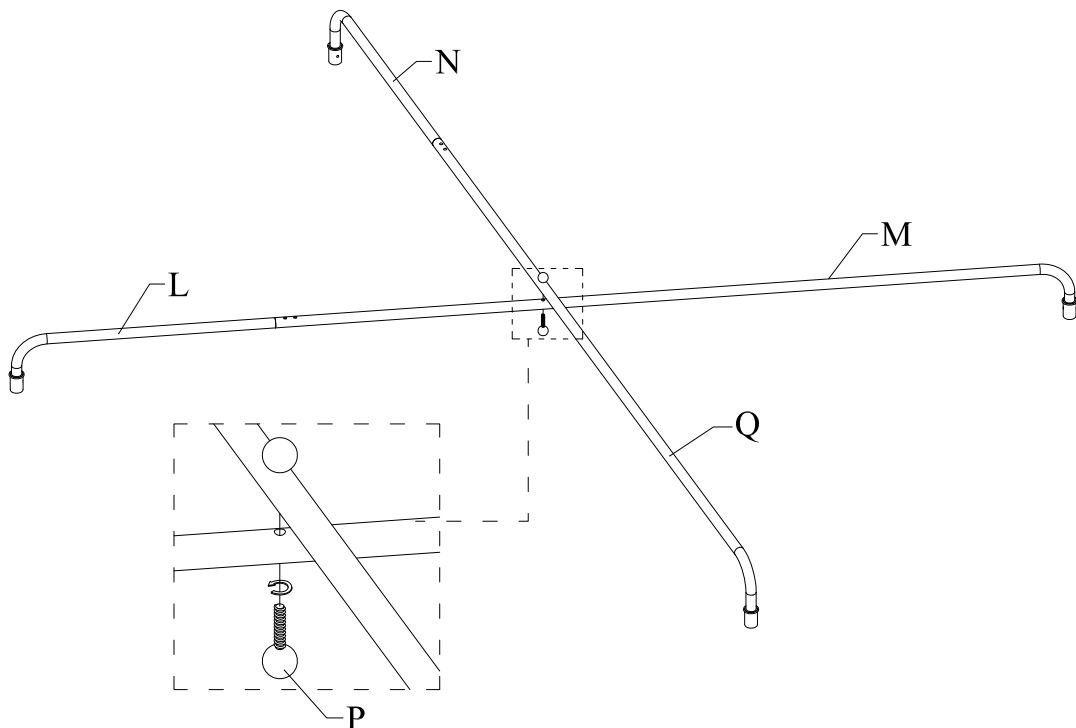

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST





Assembly Instructions

WRLW 4162-21/4162-40


CANOPY UPHOLSTERED QUEEN BED/
CANOPY UPHOLSTERED KING BED

SKU#32341620/33441622

STEP:7

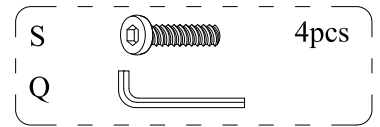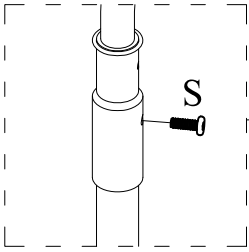


ATTENTION: DO NOT allow to stand on the panels for assembly, this will avoid causing damages the product or injury to person.

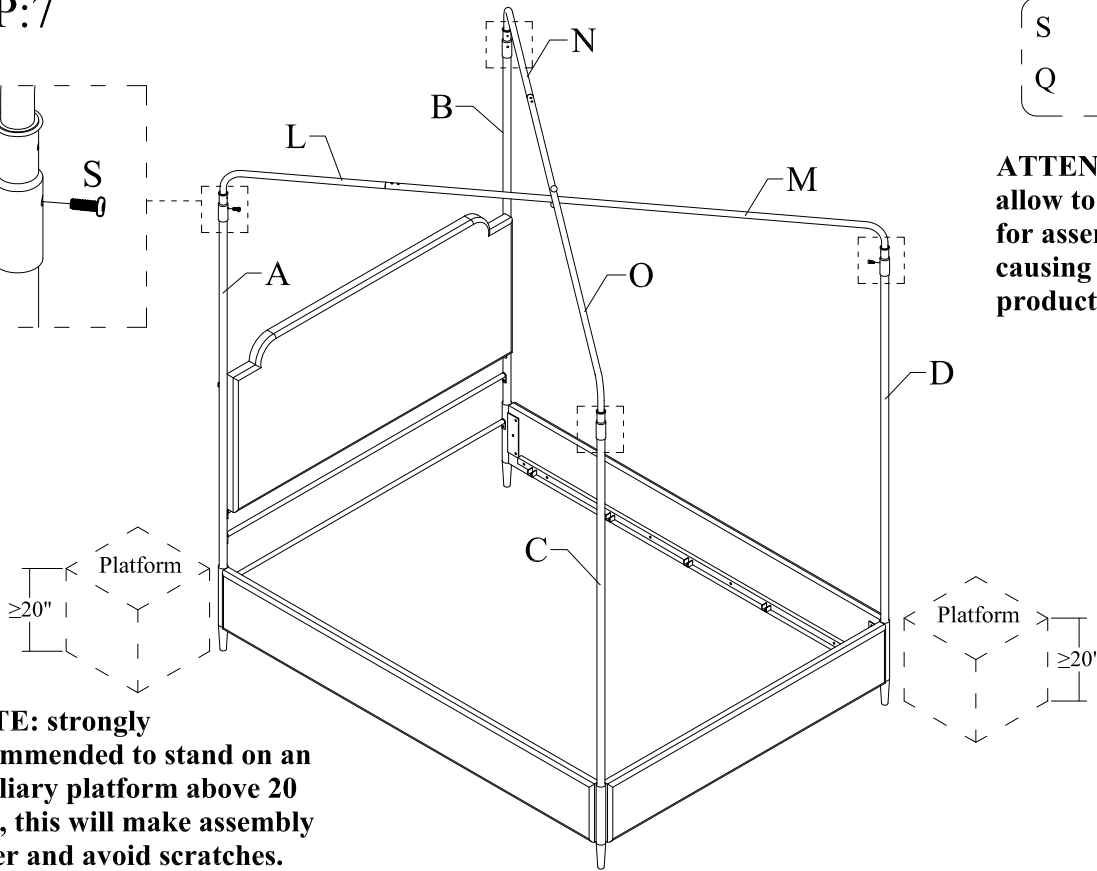

NOTE: strongly recommended to stand on an auxiliary platform above 20 inch, this will make assembly easier and avoid scratches.

NOTE: strongly recommended to stand on an auxiliary platform above 20 inch, this will make assembly easier and avoid scratches.

STEP:8

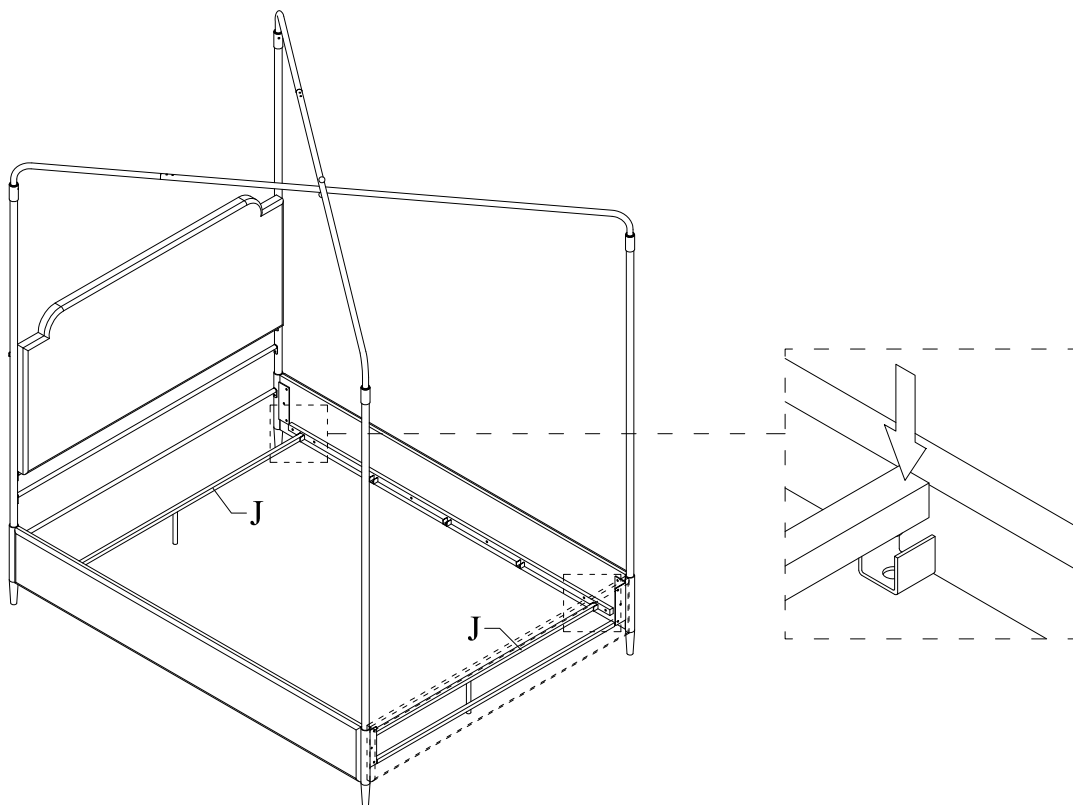

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST




Assembly Instructions

WRLW 4162-21/4162-40

CANOPY UPHOLSTERED QUEEN BED/
CANOPY UPHOLSTERED KING BED

SKU#32341620/33441622

STEP:9

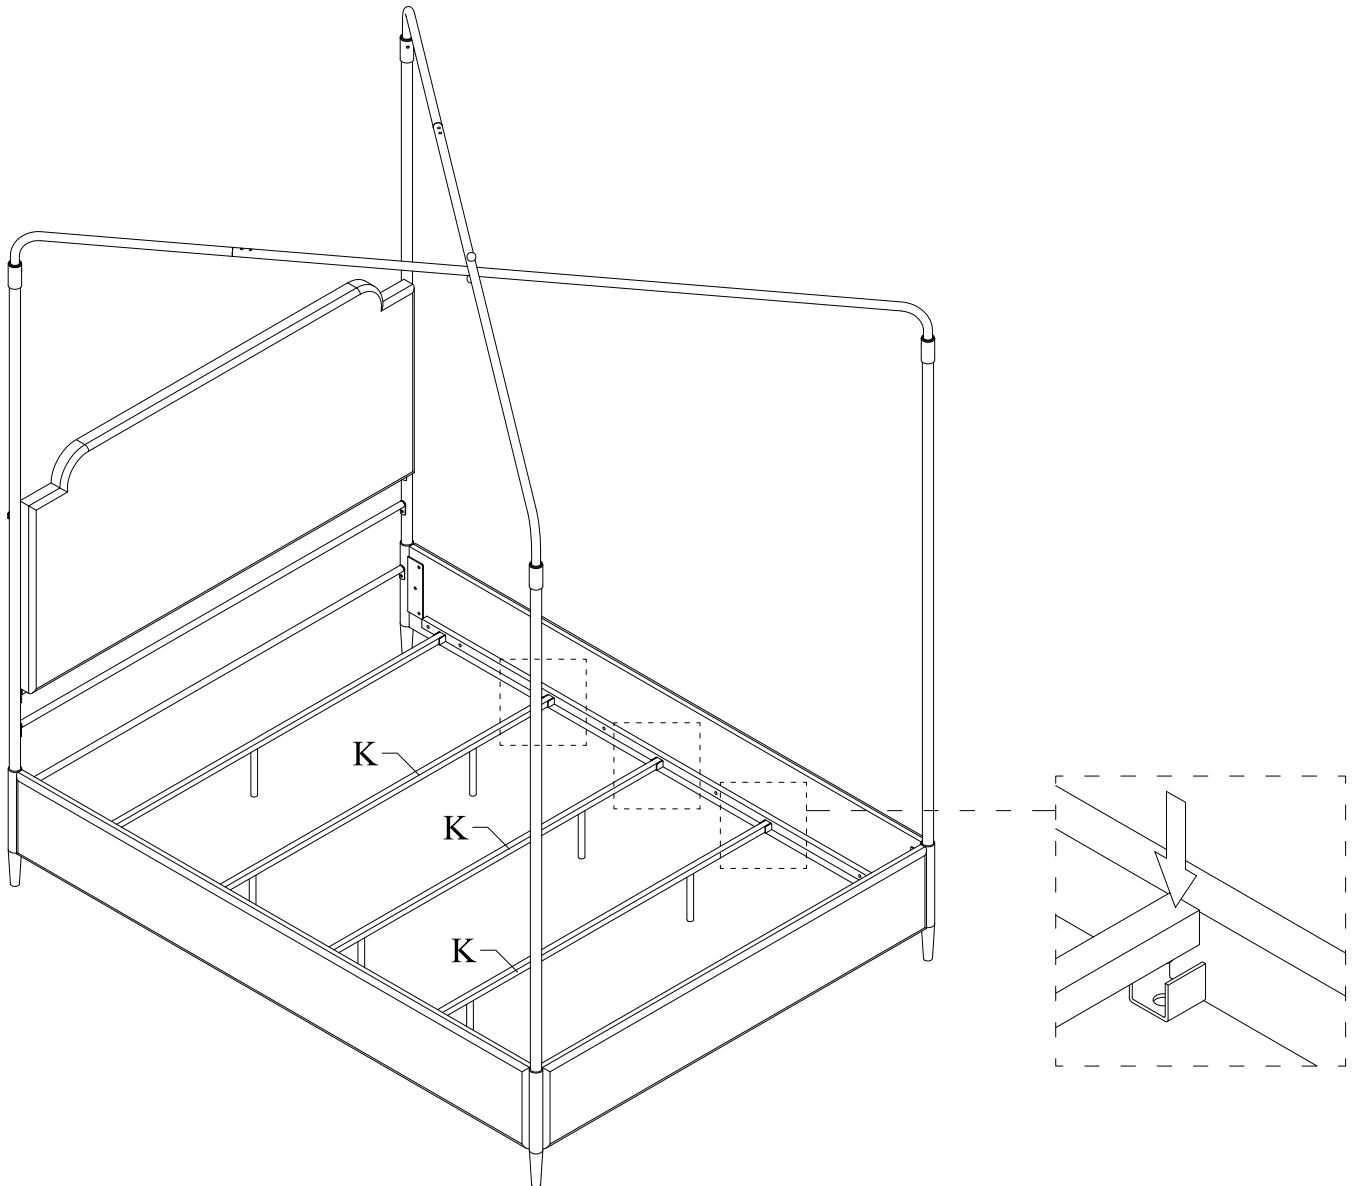

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
WITH SERVICE OR PARTS REPLACEMENT REQUEST