

(5532/5534-120) COTTAGE MASTER COLLECTION QUEEN PANEL BED ASSEMBLY INSTRUCTIONS

THANK YOU FOR YOUR PURCHASE !


PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

READ ALL THE INSTRUCTIONS AND IDENTIFY ALL COMPONENTS AND CHOOSE YOUR CONFIGURATION AND BE SURE YOU HAVE ALL PARTS

TWO PEOPLE ARE NEEDED TO ASSEMBLE.

DO NOT COMPLETELY TIGHTEN ALL BOLTS UNTIL ALL COMPONENTS ARE CONNECTED.

QUEEN PANEL BED CONFIGURATION

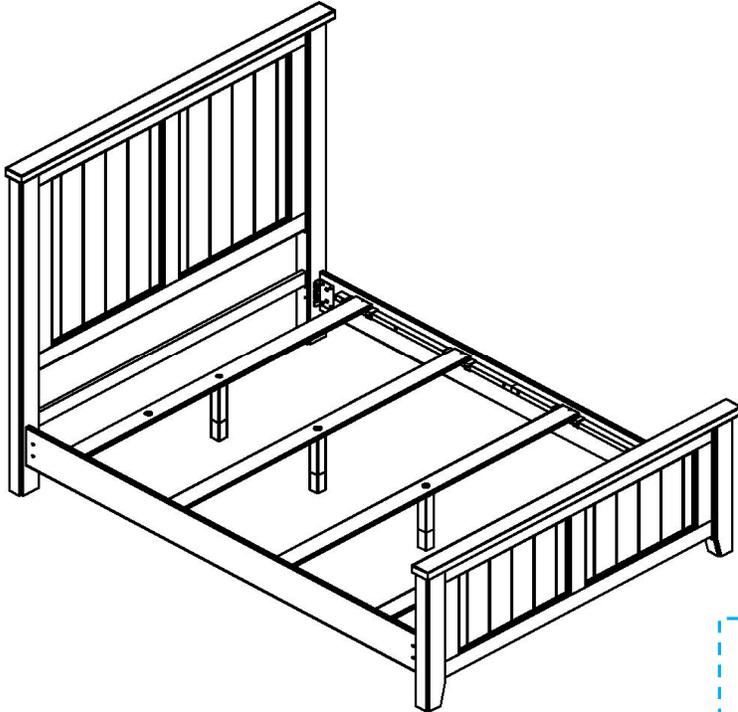

5532 QUEEN PANEL BED

32355326	5532119	QUEEN PANE BED HEADBOARD
32755324	5532120	QUEEN PANEL BED FOOTBOARD
32955328	5532771	SIDE RAILS

5534 QUEEN PANEL BED

32355340	5534119	QUEEN PANEL BED HEADBOARD
32755348	5534120	QUEEN PANEL BED FOOTBOARD
32955342	5534771	SIDE RAILS

WARNING:


THE BED SLATS WILL NO SUPPORT A MATTRESS ALONE, THIS BED REQUIRES A BOX SPRING. SOLD SEPARATELY.

**TO ASSEMBLE THIS
PANEL BED REQUIRES
TWO PEOPLE**

**TIPS: SEE ILLUSTRATION
BELOW**

**MAKE SURE ALL BOLTS
ARE TIGHTENED
COMPLETELY**

1.- USE THE LONG END OF THE ALLEN WRENCH TO
FASTEN BOLTS LOOSELY AND QUICKLY.

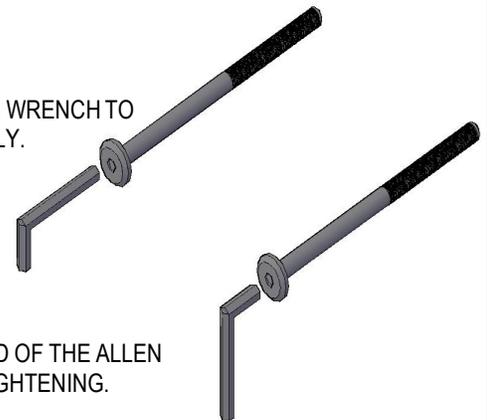

2.- USE THE SHORT END OF THE ALLEN
WRENCH FOR FINAL TIGHTENING.

TOOLS NEEDED

PHILIPS HEAD SCREWDRIVER (NOT INCLUDED)
4MM ALLEN WRENCH (INCLUDED)

LIST OF CONTENTS

5532,5534-119 QUEEN PANEL HEADBOARD

FIG.1- HEADBOARD (1)

5532,5534-120 QUEEN PANEL FOOTBOARD

FIG.2- FOOTBOARD (1)

FIG.3- WOOD SLATS (4)

FIG.4- 7 3/4" SUPPORT LEGS (4)

FIG.5- 3 1/2" SUPPORT LEGS (4)


HARDWARE PACK (HPK00135-0)

FIG.6- 1 1/4" SCREWS (8)

FIG.7- 4MM ALLEN WRENCH (1)


5532,5534-771 SIDE RAILS

FIG.8.- SIDE RAILS (2)

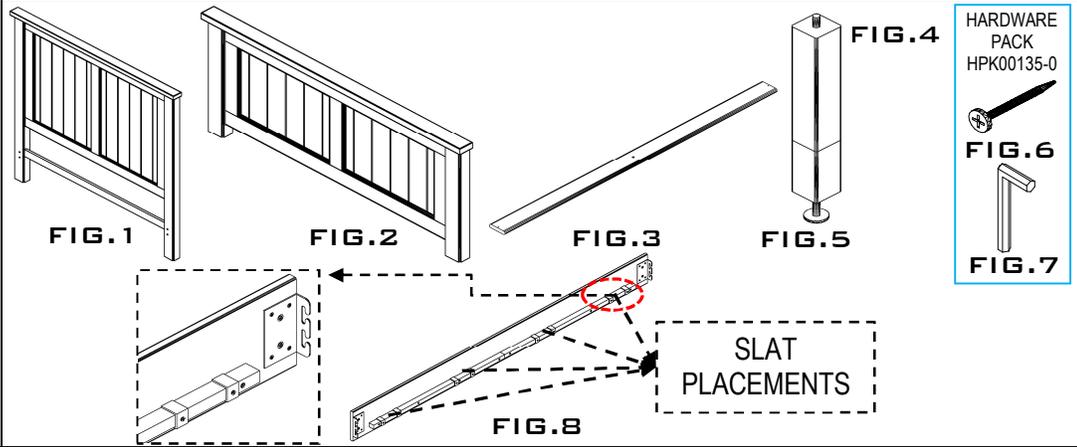

THERE ARE TWO POSSIBLE SETTINGS HIGH AND LOW CHOOSE ONE SEE, FIG.9

- 1.- PLACE HEADBOARD (FIG.1) & FOOTBOARD (FIG.2) AND ONE SIDE RAIL ((FIG.8) IN DESIRED POSITION, LOOSE THE PRE - INSTALLED BOLTS IN HDBD & FTBD **SEE FIG.10** TO ALLOW THE BRACKETS IN THE SIDE RAIL TO SLIDE IN AND PUSH DOWN, **SEE FIG.11** THEN TIGHT.
- 2.- REPEAT THE PROCESS FOR THE SECOND RAIL.
- 3.- ATTACH CENTER SUPPORT LEGS TO THE WOOD SLATS (FIG. 3) INSERTING THE SCREW BOLT INSTALLED IN THE SUPPORT LEG (FIG. 4) THEN TIGHT, PLACE ALL WOOD SLATS ON CLEAT SIDE RAIL (**FIG.12**), THEN EACH SLAT MUST BE FASTEN WITH TWO 1 1/4" SCREWS (FIG.6), **SEE FIG.13**

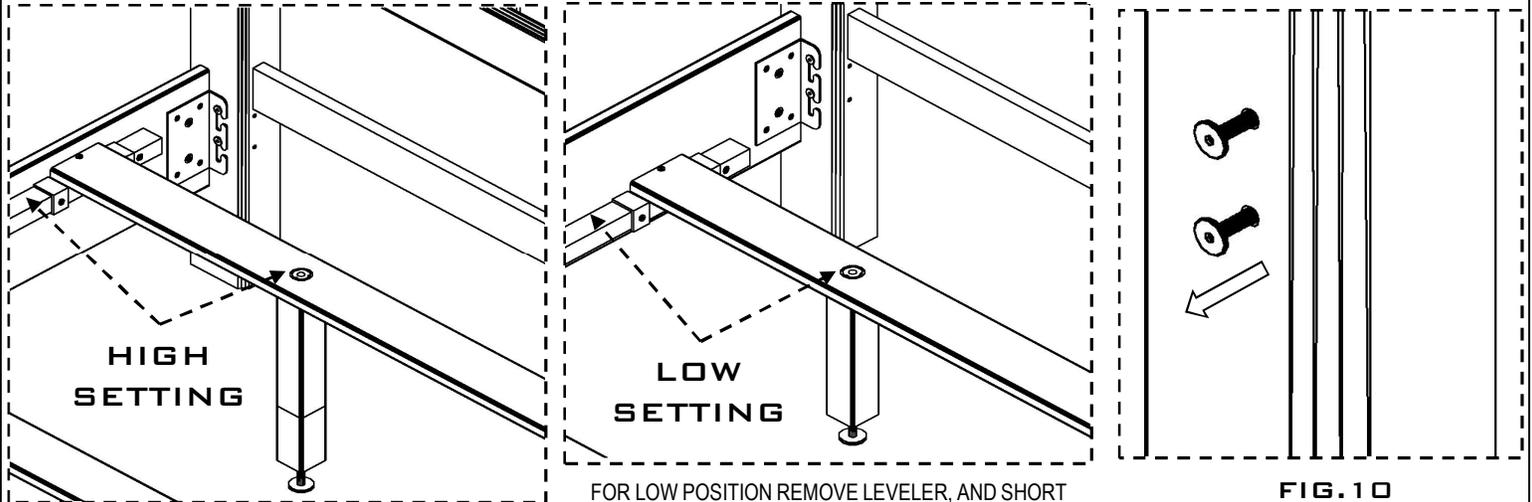

FOR LOW POSITION REMOVE LEVELER, AND SHORT PART OF THE CENTER SUPPORT LEG, THEN INSTALL BACK LEVELER TO THE LONG PART.

