


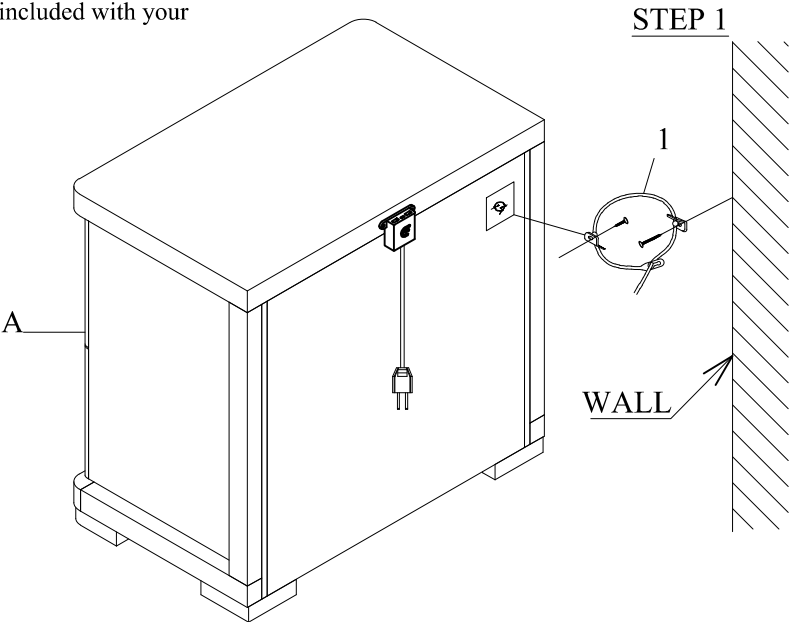


*** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.


CODE	PARTS LIST		
A	Nightstand		1 pc

WARNING: Serious or fatal crushing injuries can occur from furniture tip-over. Please review the instructions for the Tipping Restraint (1) that is included with your product.

CODE	HARDWARE LIST		
1		Tipping Restraint	1 Set
TOOLS REQUIRED (NOT PROVIDED)			
Phillips Screwdriver 			




COMPLETE

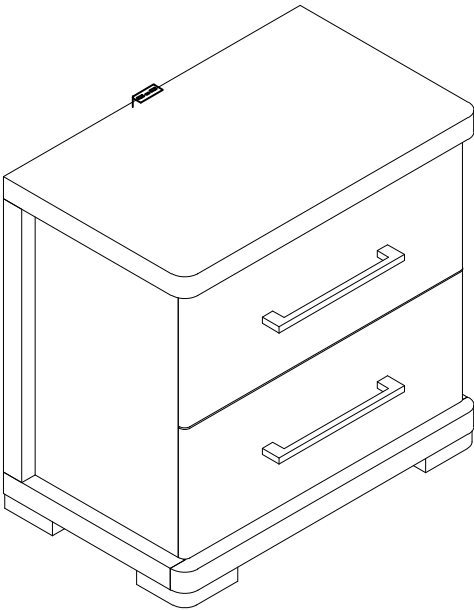



Hardware Pack Location(s):


AUGR RTG5888-20 NIGHTSTAND SKU#32558883

*** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.


CODE	PARTS LIST		
A	Chest		1 pc

WARNING: Serious or fatal crushing injuries can occur from furniture tip-over. Please review the instructions for the Tipping Restraint (1) that is included with your product.

CODE	HARDWARE LIST		
1		Tipping Restraint	1 Set
TOOLS REQUIRED (NOT PROVIDED)			
Phillips Screwdriver 			

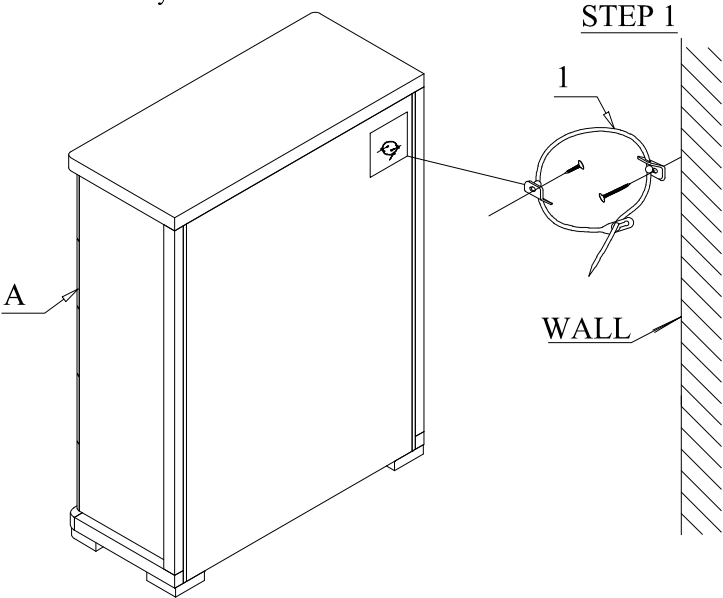


COMPLETE

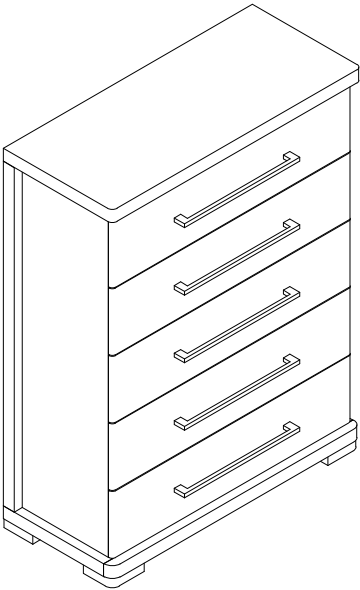



Hardware Pack Location(s):


AUGR RTG5888-40 CHEST SKU#32658885

*** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.


CODE	PARTS LIST		
A	Dresser		1 pc

WARNING: Serious or fatal crushing injuries can occur from furniture tip-over. Please review the instructions for the Tipping Restraint (1) that is included with your product.

CODE	HARDWARE LIST		
1		Tipping Restraint	1 Set
TOOLS REQUIRED (NOT PROVIDED)			
Phillips Screwdriver 			

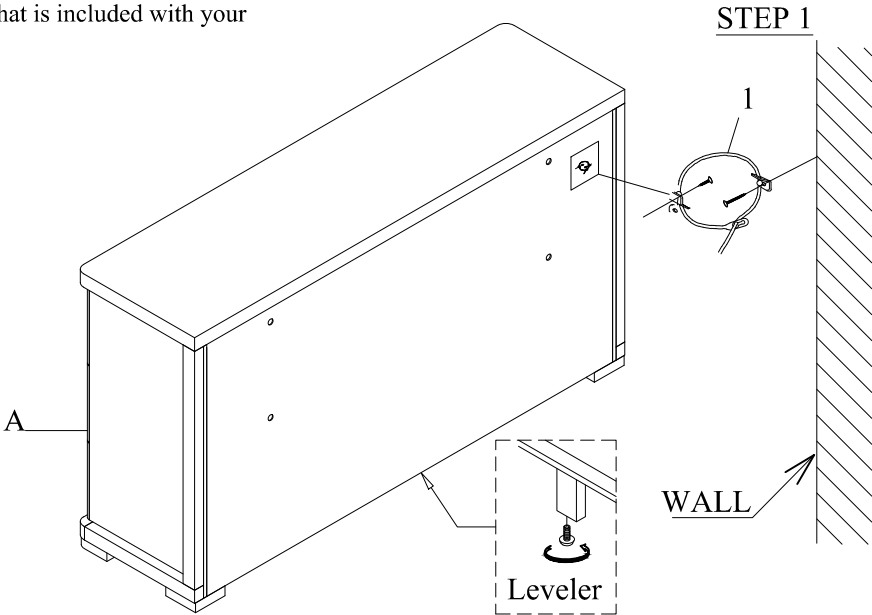

COMPLETE

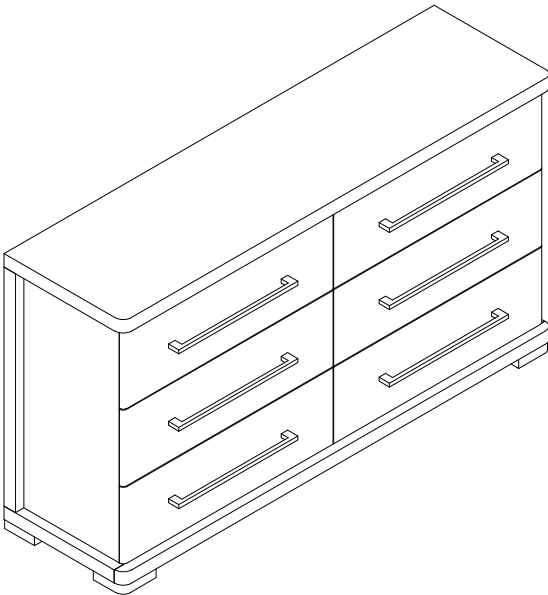




Hardware Pack Location(s):


AUGR RTG5888-10 DRESSER SKU#32158885

AUGR-RTG 5888-01 MIRROR
AUGR-RTG 5888-10 DRESSER


SKU# 32258887
SKU# 32158885

*** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly

CODE	PARTS LIST:		
A	Dresser		1 pc
B	Mirror		1 pc
C	Mirror Supports (Packed in Mirror Carton)		2 pcs


CODE	HARDWARE LIST		
1	Allen Wrench M4 x 2-1/4"		1 pc

NOTE:1. BOLTS ARE PRE-INSTALLED ON THE MIRROR SUPPORT (C).
2. DO NOT FULLY TIGHTEN THE BOLTS UNTIL THE ENTIRE UNIT IS COMPLETELY ASSEMBLED .

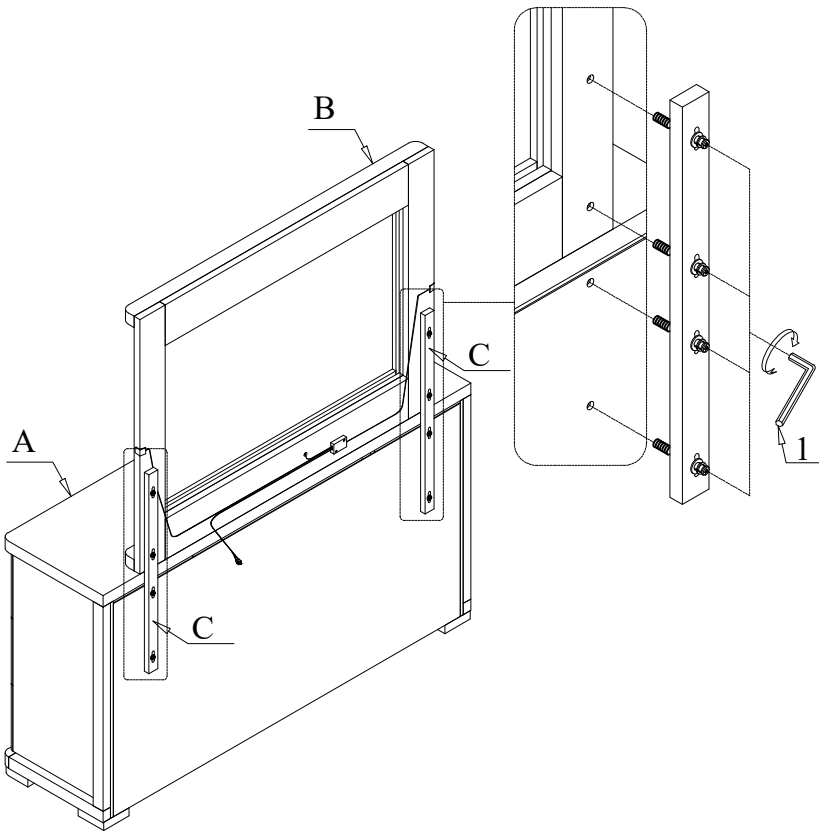

Your Touch is the Switch

Touch 1-Night light
Touch 2-Energy saver light
Touch 3-Bright reading light
Touch 4-Off

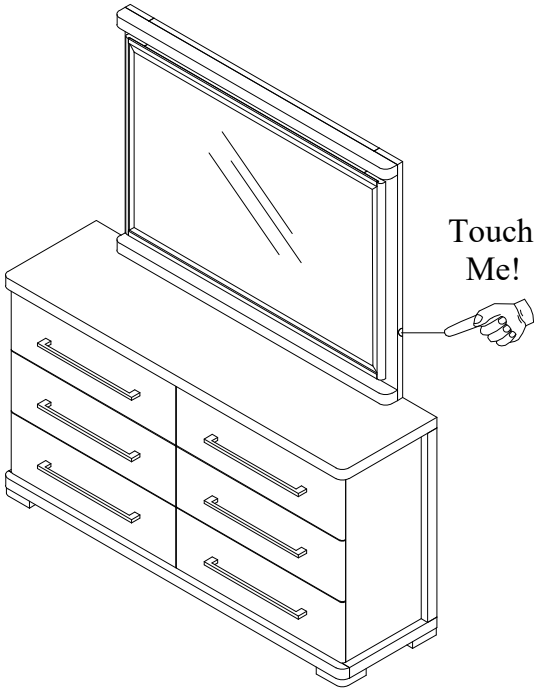

COMPLETE

Hardware Pack Location (s):

AUGR-RTG 5888-01 MIRROR SKU# 32258887

Assembly Instructions

AUGR RTG5888-60H

QUEEN UPH HEADBOARD





SKU# 32358889


AUGR RTG5888-65H

KING UPH HEADBOARD


SKU# 32458881

*** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

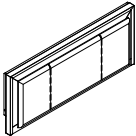
CODE	PARTS LIST		
A	Headboard		1 pc
B	Left Headboard Leg		1 pc
C	Right Headboard Leg		1 pc
D	Headboard Stretcher		1 pc

CODE	HARDWARE LIST		
1	Allen Wrench	M4 x 2-1/4"	 1 pc

NOTE:1. BOLTS ARE PRE-INSTALLED ON THE HEADBOARD LEGS (B & C) AND STRETCHER (D).
2. DO NOT FULLY TIGHTEN THE BOLTS UNTIL THE ENTIRE UNIT IS COMPLETELY ASSEMBLED .

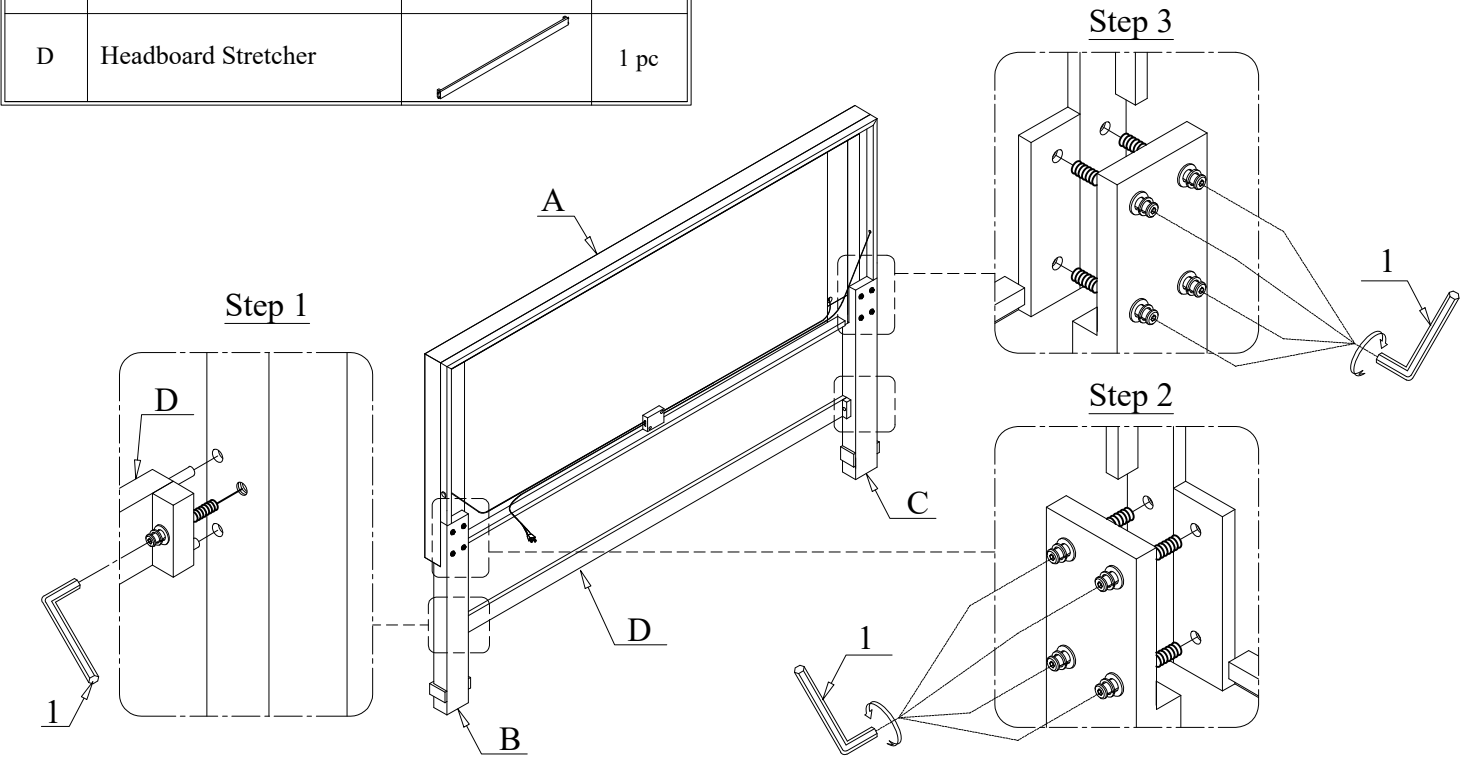

COMPLETE

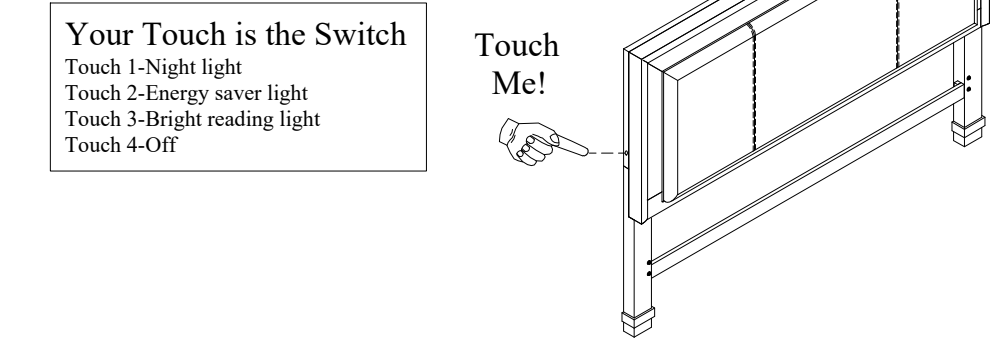

Hardware Pack Location(s):

AUGR RTG5888-60H QUEEN UPH HEADBOARD





SKU#32358889




AUGR RTG5888-65H KING UPH HEADBOARD

SKU#32458881


AUGR-RTG 5888-60H	QUEEN UPH HEADBOARD	SKU# 32358889
AUGR-RTG 5888-60F	QUEEN UPH FOOTBOARD	SKU# 32758887
AUGR-RTG 5888-60R	QUEEN/KING UPH SIDE RAILS	SKU# 32958881

*** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly

CODE	PARTS LIST:		
A	Panel Footboard		1 pc
B	Slats (Packed in Footboard Carton)		5 pcs
C	Support Legs (Packed in Footboard Carton)		5 pcs
D	Side Rail		2 pcs

CODE	HARDWARE LIST		
1	Wood Screw #8 x 30mm		10 pcs
2	Allen Wrench M4 x 2-1/4"		1 pc
TOOLS REQUIRED (NOT PROVIDED)			
Phillips Screwdriver 			

Step 1 Loosen the Allen Bolts in the Headboard Legs and Footboard (A) with Allen Wrench.
Do not remove the Allen Bolts, leave them inserted halfway.

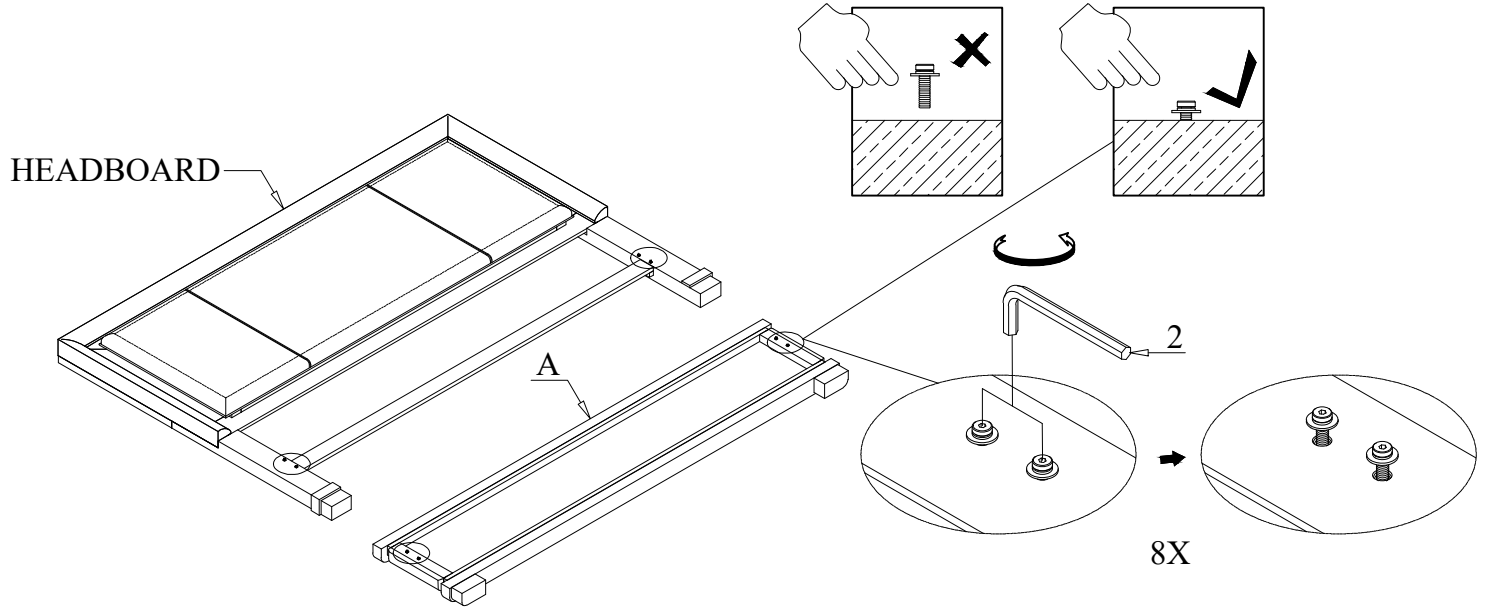

Step 2 Intsall Support Legs (C) into the insert nut on Slats (B).



Hardware Pack Location (s):

AUGR-RTG 5888-60F QUEEN UPH FOOTBOARD SKU# 32758887

AUGR-RTG 5888-60H QUEEN UPH HEADBOARD

SKU# 32358889

AUGR-RTG 5888-60F QUEEN UPH FOOTBOARD

SKU# 32758887

AUGR-RTG 5888-60R QUEEN/KING UPH SIDE RAILS


SKU# 32958881

*** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly



Step 3

Attach Side Rail (D) to Headboard Legs and Footboard (A). Place the Side Rail bracket hooks onto the Allen Bolts loosened in Step 1. Apply downward force until they are fully in place. Tighten Allen Bolts with Allen Wrench .


HEADBOARD

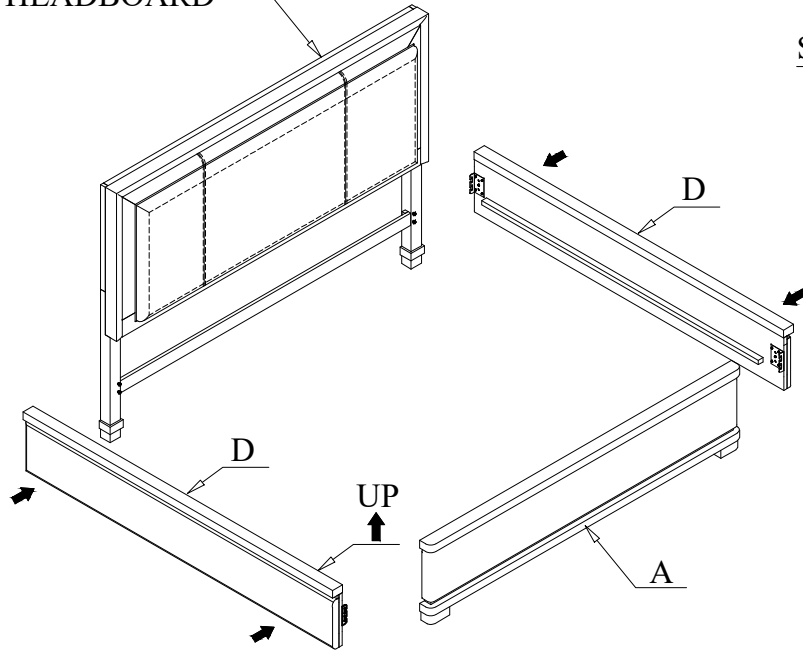


Step 3-1

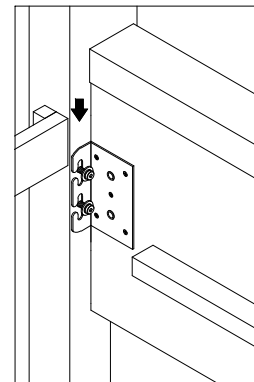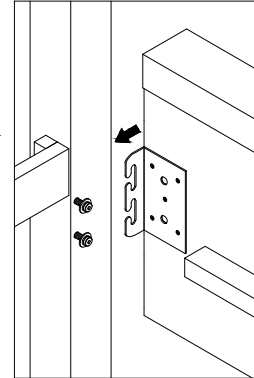


Step 3-2

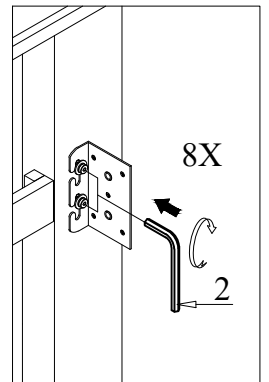


Step 3-3

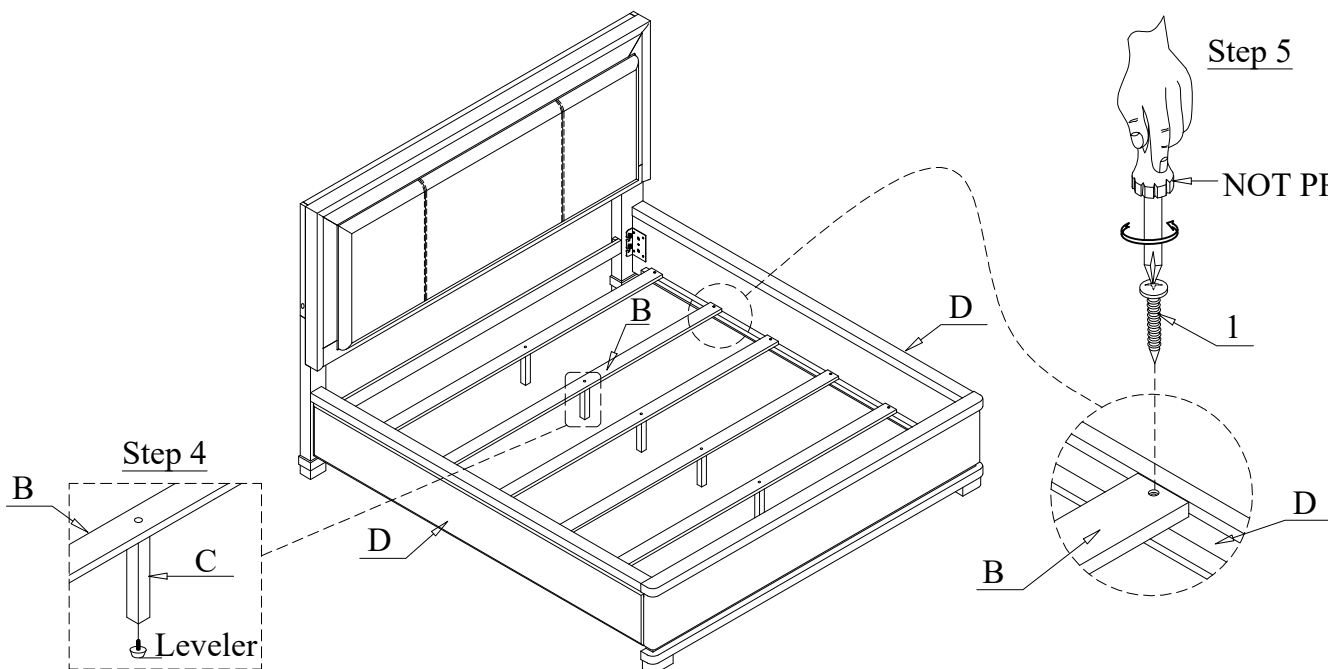

Step 4

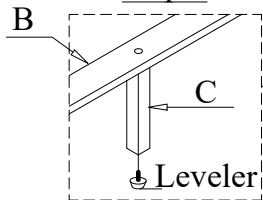





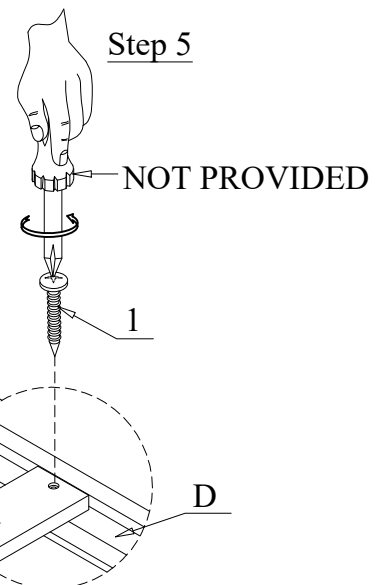


Step 5




AUGR-RTG 5888-65H KING UPH HEADBOARD	SKU# 32458881
AUGR-RTG 5888-65F KING UPH FOOTBOARD	SKU# 32858889
AUGR-RTG 5888-60R QUEEN/KING UPH SIDE RAILS	SKU# 32958881

*** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly

CODE	PARTS LIST:		
A	Panel Footboard		1 pc
B	Slats (Packed in Footboard Carton)		5 pcs
C	Support Legs (Packed in Footboard Carton)		10 pcs
D	Side Rail		2 pcs

CODE	HARDWARE LIST		
1	Wood Screw #8 x 30mm		10 pcs
2	Allen Wrench M4 x 2-1/4"		1 pc
TOOLS REQUIRED (NOT PROVIDED)			
Phillips Screwdriver 			

Step 1 Loosen the Allen Bolts in the Headboard Legs and Footboard (A) with Allen Wrench.
Do not remove the Allen Bolts, leave them inserted halfway.

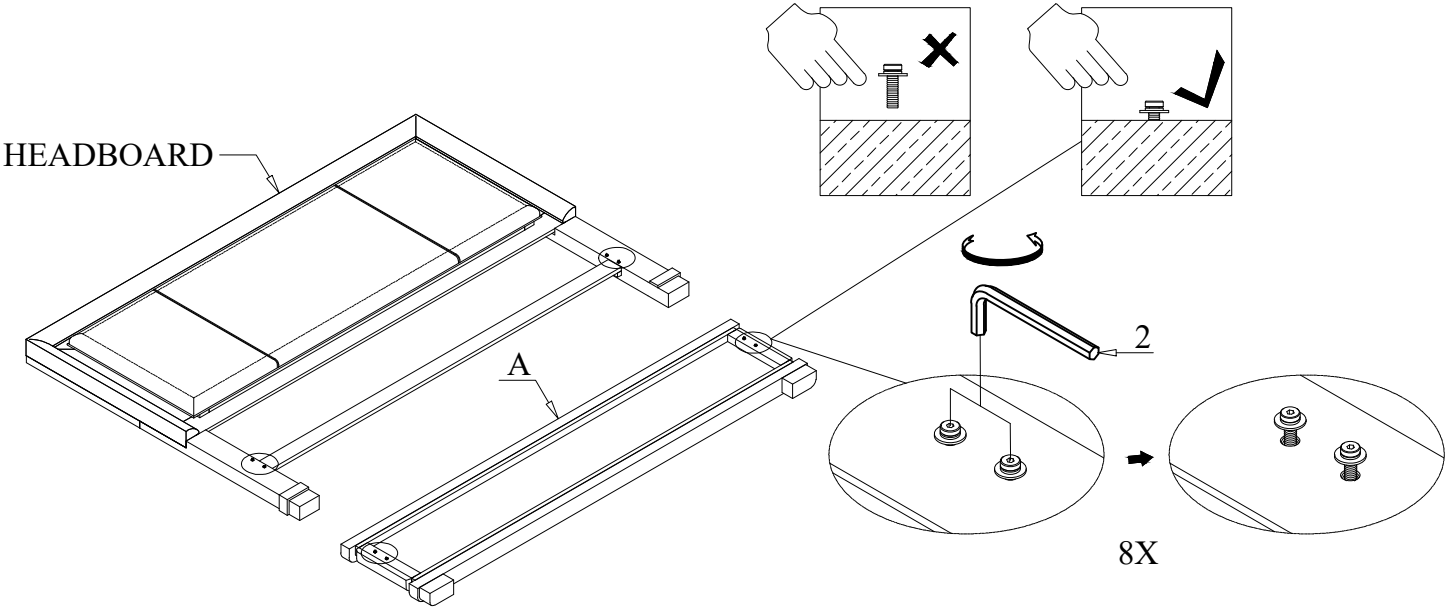

Step 2 Intsall Support Legs (C) into the insert nut on Slats (B).



Hardware Pack Location (s):

AUGR-RTG 5888-65F KING UPH FOOTBOARD SKU# 32858889

AUGR-RTG 5888-65H KING UPH HEADBOARD

SKU# 32458881

AUGR-RTG 5888-65F KING UPH FOOTBOARD

SKU# 32858889

AUGR-RTG 5888-60R QUEEN/KING UPH SIDE RAILS

SKU# 32958881

*** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly

Step 3

Attach Side Rail (D) to Headboard Legs and Footboard (A). Place the Side Rail bracket hooks onto the Allen Bolts loosened in Step 1. Apply downward force until they are fully in place. Tighten Allen Bolts with Allen Wrench .

