












***Cautions: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.


PARTS LIST



No.	Description	Sketch	Q'ty
1	Panel Headboard		1 Pc
2	Bottom Headboard Stretcher		1 Pc
3	Left Headboard Leg		1 Pc
4	Right Headboard Leg		1 Pc
5	Panel Footboard		1 Pc
6	Slat		5 Pcs
7	Long Support Leg		5 Pcs
8	Short Support Leg		5 Pcs
9	Side Rail		2 Pcs

HARDWARE LIST

No.	Description	Size	Sketch	Q'ty
A	Allen Key	M4		1 Pc
B	Screw	M4*30mm		10 Pcs

TOOLS REQUIRED (NOT PROVIDED)

Description	Sketch
Phillips screwdriver	

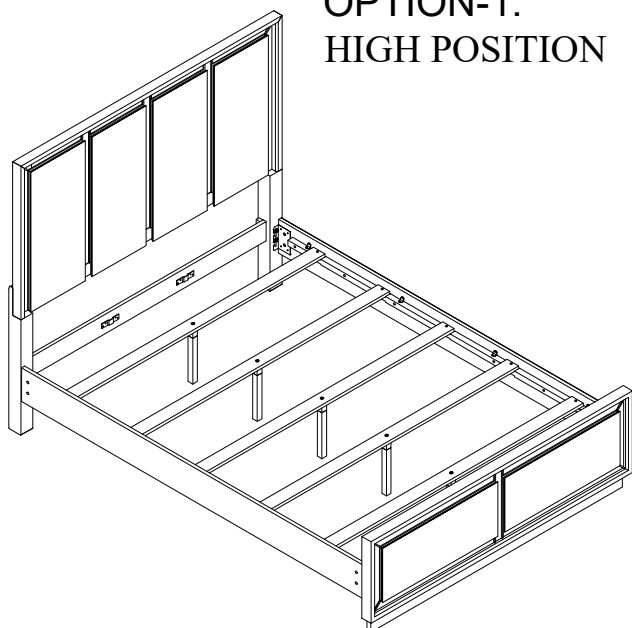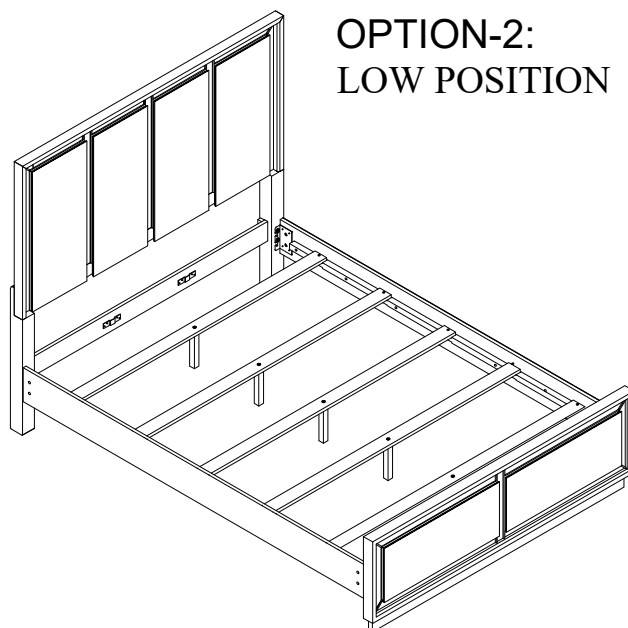OPTION-1:
HIGH POSITIONOPTION-2:
LOW POSITION


Hardware Pack Locations:

5924-54H QN PNL HDBD SKU# 32359247

5924-54F QN PNL FTBD SKU# 32759245


***Cautions: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

Allen bolt is already attached to the support headboard, bottom headboard stretcher.

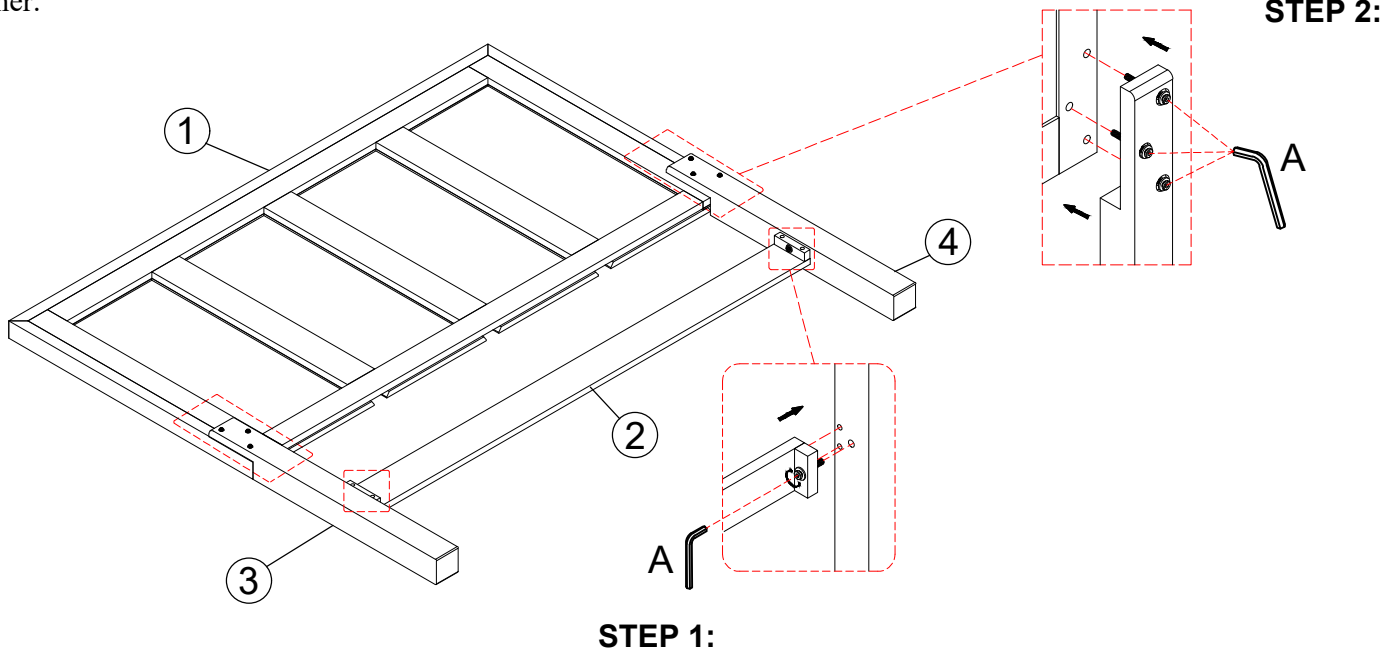


Allen bolt is already attached to the Headboard and the Footboard.
Note: Do not tighten all screws until the Bed Frame is fully assembly.

OPTION-1

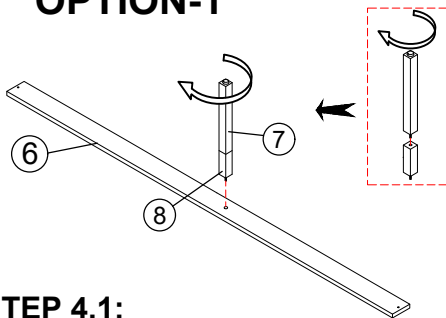

STEP 4.1:

Attach long support leg to short Leg.
Attach support leg to slat.

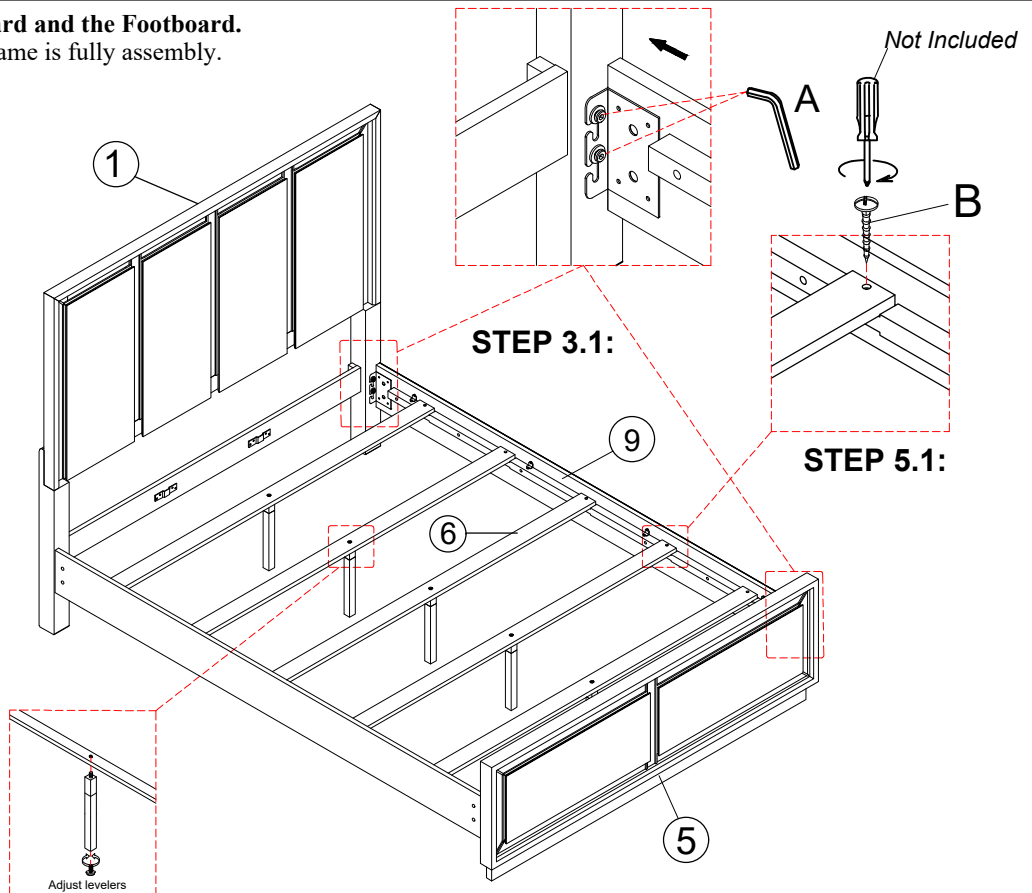

Hardware Pack Locations:

5924-54H QN PNL HDBD SKU# 32359247


5924-54F QN PNL FTBD SKU# 32759245

***Cautions: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.


Allen bolt is already attached to the Headboard and the Footboard.

Note: Do not tighten all screws until the Bed Frame is fully assembly.

STEP 3.2:

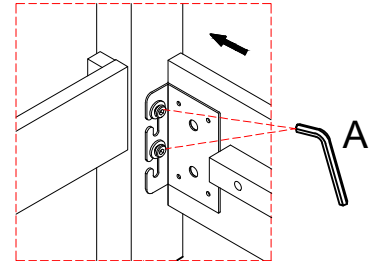

Not Included

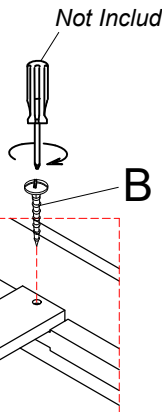


STEP 5.2:

OPTION-2



STEP 4.2:

Attach long support leg to the slat.

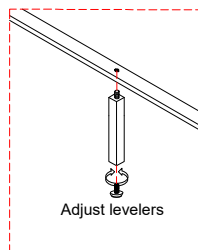

Adjust levelers