

# Assembly instructions for

RIEE: 32371407/ 32371421  
32471409/ 32471423

QN Arched Panel Headboard 7140/ 7142-147  
KG Arched Panel Headboard 7140/ 7142-148

Version#1 - 01/11/2024

PAGE 1 OF 3

**Caution:** Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.



1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.



## WARNING: To avoid serious personal injury:


- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. This furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to walls. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

NO.:	HARDWARE LIST (7140/ 7142-147/ 148)		Q'TY
1		(L57x4MM) ALLEN KEY	1 piece

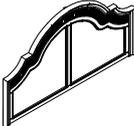NO.:	PARTS LIST		
A		Headboard	1 piece
B		Headboard legs (Left)	1 piece
C		Headboard legs (Right)	1 piece
D		Headboard Bottom Stretcher	1 piece

### Step 1

Bolts are pre-installed on Headboard Legs:  
Bolts: 5/16" x 18 x 2" L  
Flat Washer: 5/16" x  $\phi$ 19mm x 1.2mm T  
Spring Washer: 5/16" x  $\phi$ 13mm x 1.2mm T

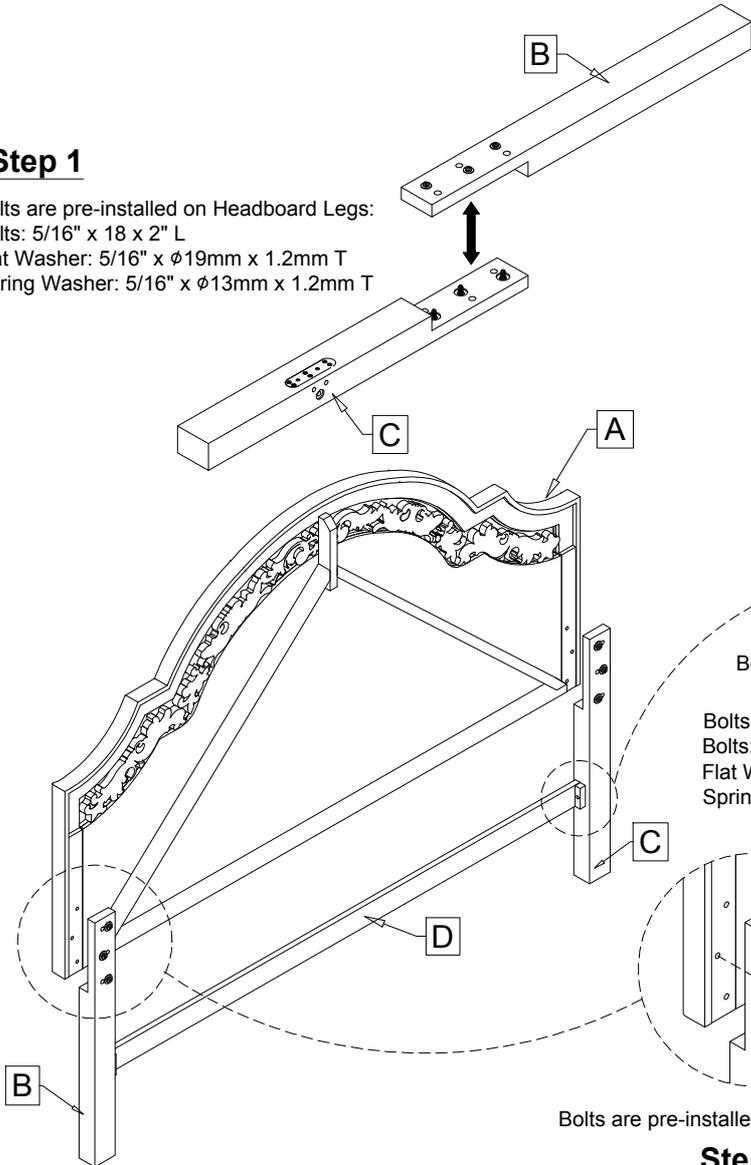


### Step 2

Bolts are pre-installed on HB bottom stretcher

Bolts are pre-installed on stretcher  
Bolts: 1/4" x 20 x 1-1/2" L  
Flat Washer: 1/4"  
Spring Washer: 1/4"

Bolts are pre-installed on bed posts

### Step 3

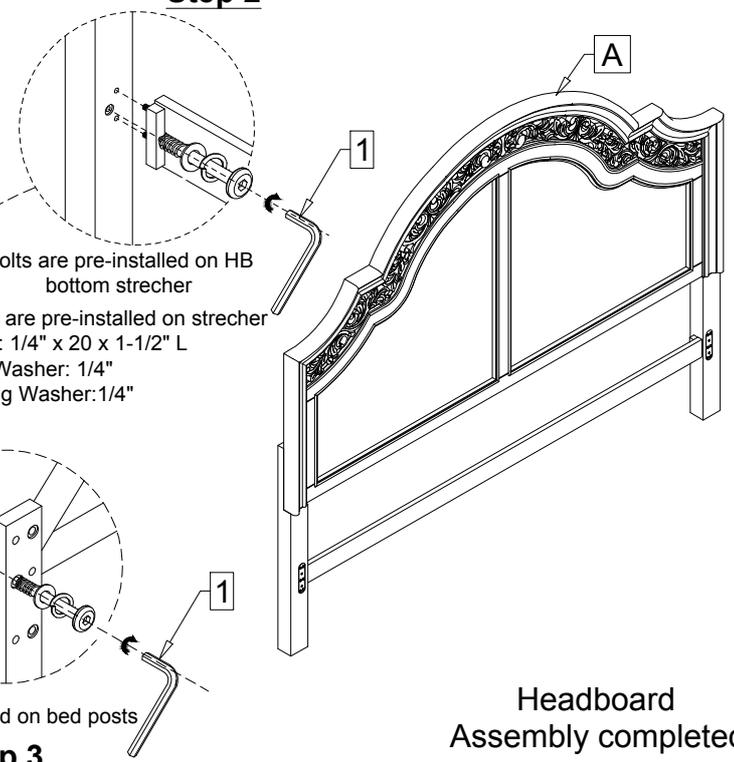

Headboard  
Assembly completed

# Assembly instructions for

32371407/ 32371421/ 32471409/ 32471423 QN & KG Arched Panel Headboard 7140/ 7142-147/ 148  
 RIEE: 32771405/ 32871407/ 32771429/ 32871421 QN & KG Panel Footboard 7140/ 7142-141/ 144  
 32971409/ 32971423 QN/KG Bed Rails 7140/ 7142-146

Version#1 - 01/11/2024  
 PAGE 2 OF 3

**Caution:** Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.





## WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. This furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to walls. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.


NO.:	HARDWARE LIST (7140/ 7142-147/ 148)		Q'TY
1		(L57x4MM) ALLEN KEY	1 piece

NO.:	HARDWARE LIST (7140/ 7142-141/ 144)		Q'TY
2		8*30MM SCREW	10 pieces
3		(L75MM*35MM*4MM) ALLEN KEY	1 piece

NO.:	PARTS LIST		
A		Headboard	1 piece
B		Headboard Legs (Left)	1 piece
C		Headboard Legs (Right)	1 piece
D		Headboard Bottom Stretcher	1 piece
E		Footboard	1 piece
F		Bun Feet	2 pieces
G		Side Rail	2 pieces
H		Bed Slat	5 pieces
I		Long Slat Support Leg	10 pieces
J		Short Slat Support Leg	10 pieces

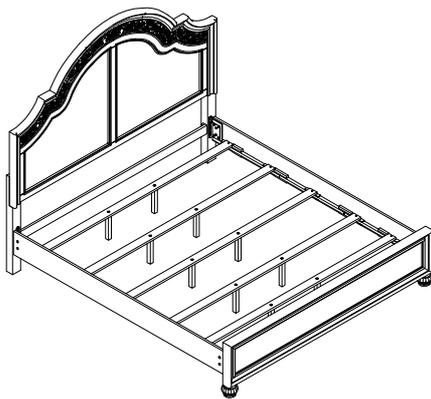


Option 1: Low Mattress Position

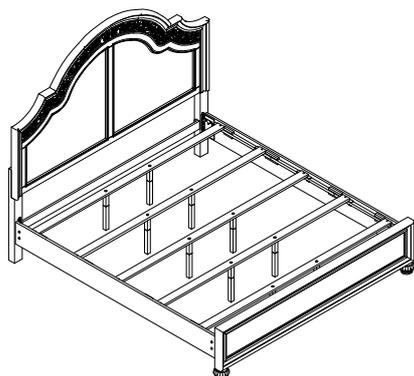

Option 2: High Mattress Position

## Step 1

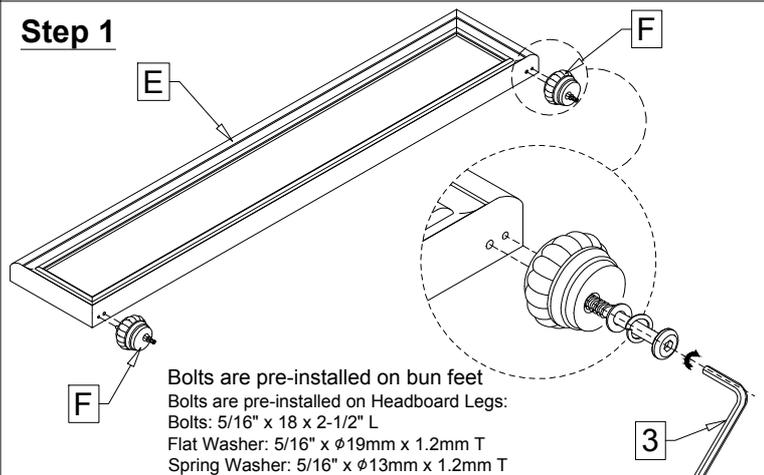

Bolts are pre-installed on bun feet  
 Bolts are pre-installed on Headboard Legs:  
 Bolts: 5/16" x 18 x 2-1/2" L  
 Flat Washer: 5/16" x  $\phi$ 19mm x 1.2mm T  
 Spring Washer: 5/16" x  $\phi$ 13mm x 1.2mm T

# Assembly instructions for


32371407/ 32371421/ 32471409/ 32471423  
 RIEE: 32771405/ 32871407/ 32771429/ 32871421  
 32971409/ 32971423

QN & KG Arched Panel Headboard 7140/ 7142-147/ 148  
 QN & KG Panel Footboard 7140/ 7142-141/ 144  
 QN/KG Bed Rails 7140/ 7142-146

Version#1 - 01/11/2024  
 PAGE 3 OF 3

The reversible siderails can be set up 2 options for mattress position.

Option 1: The cleats support slat are at low position so that the mattress is at low position. You will need just the long slat supports for this option.

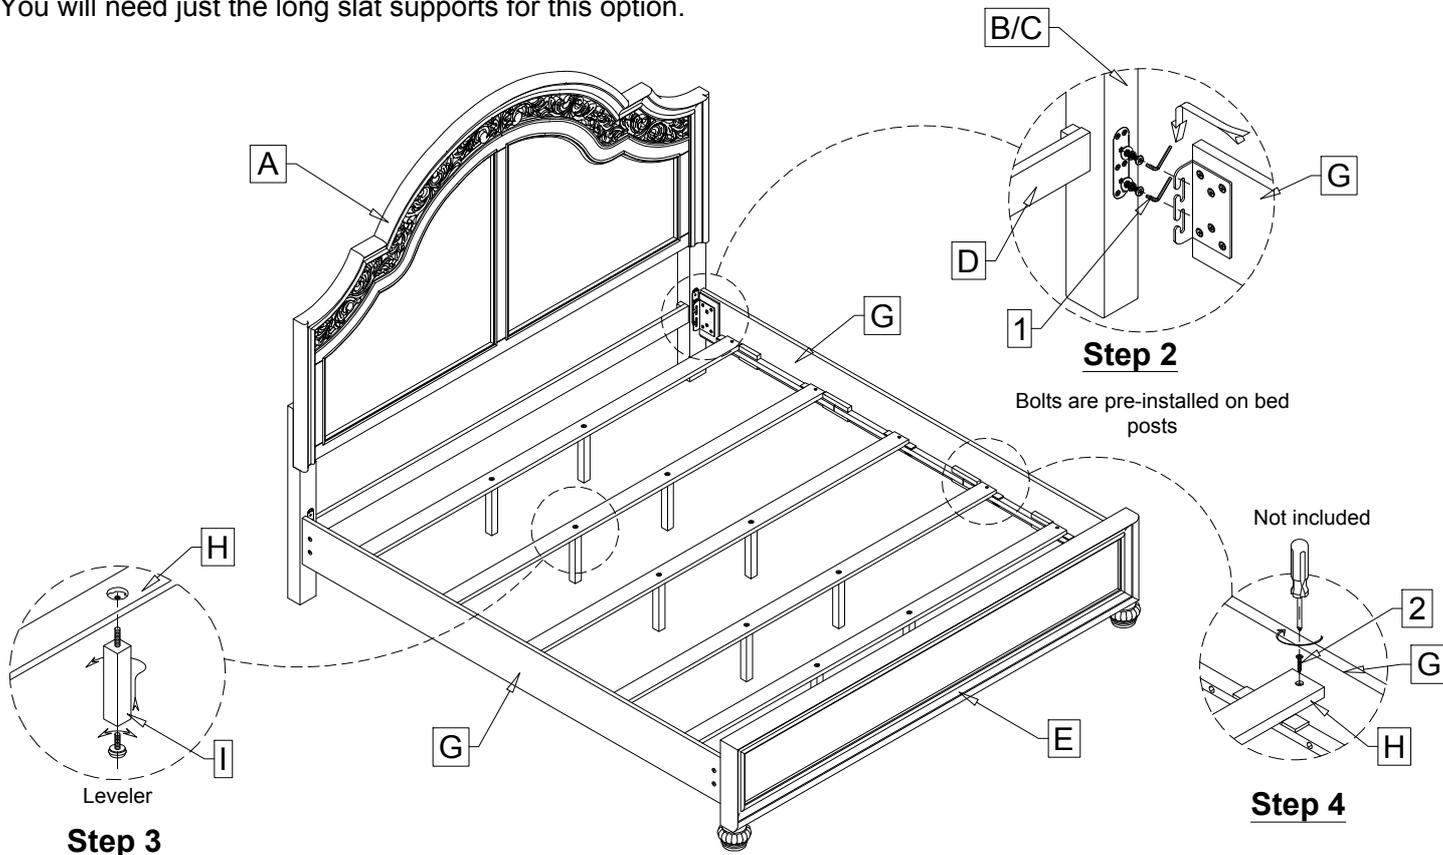

Option 2: The cleats support slat are high position so that the mattress is at high position. You will need both long & short slat supports for this option. The long & short supports are connected together before connect to the bed slats.

