



# Assembly Instruction






## RIPPLES 4 SLAT WITH RETRO LEG QUEEN BED



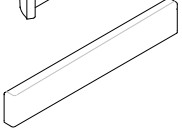

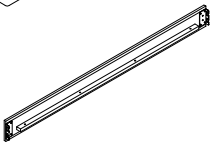

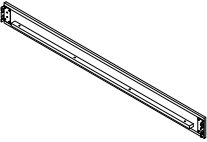
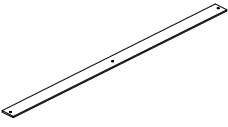
BSSB

32377827 QUEEN HEADBOARD FOOTBOARD SLAT RED  
32377839 QUEEN HEADBOARD FOOTBOARD SLAT GRAY  
32377841 QUEEN HEADBOARD FOOTBOARD SLAT BLUE  
32377853 QUEEN HEADBOARD FOOTBOARD SLAT YELLOW  
32977829 QUEEN / KING RAILS RED  
32977831 QUEEN / KING RAILS GRAY  
32977843 QUEEN / KING RAILS BLUE  
32977855 QUEEN / KING RAILS YELLOW

Manufactured for Rooms To Go

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the Hardware List as below:


Hardware List:			
No.	Picture	Description	QTY
①		Machine Screw (Bolt) M8 x P1.25 x 30mm	12PCS
		Spring Washer (M8)	
		Flat Washer (M8 x 18mm)	
②		Machine Screw (Bolt) M8 x P1.25 x 30mm	4PCS
		Spring Washer (M8)	
		Flat Washer (M8 x 18mm)	
③		Machine Screw (Bolt) M8 x P1.25 x 50mm	2PCS
		Spring Washer (M8)	
		Flat Washer (M8 x 18mm)	
④		Machine Screw (Bolt) M8 x P1.25 x 30mm	8PCS
⑤		Allen Key M5	1PCS

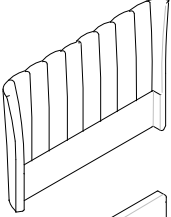Parts List:							
No.	Picture	Description	QTY	No.	Picture	Description	QTY
①		Headboard	1	⑤		Rubber Wood Leg	2
②		Footboard	1	⑥		Metal Bracket	2
③		Side Rail (Left) Reversible	1	⑦		Center Support Leg	4
④		Side Rail (Right) Reversible	1	⑧		Flat Slat	4

### Warning!!


This product contains small parts and packaging that should be kept away and out of reach from all children.

### OPTION 1

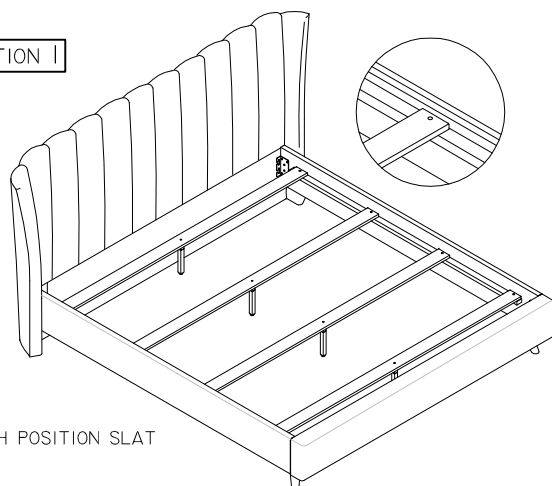

HIGH POSITION SLAT

### OPTION 2

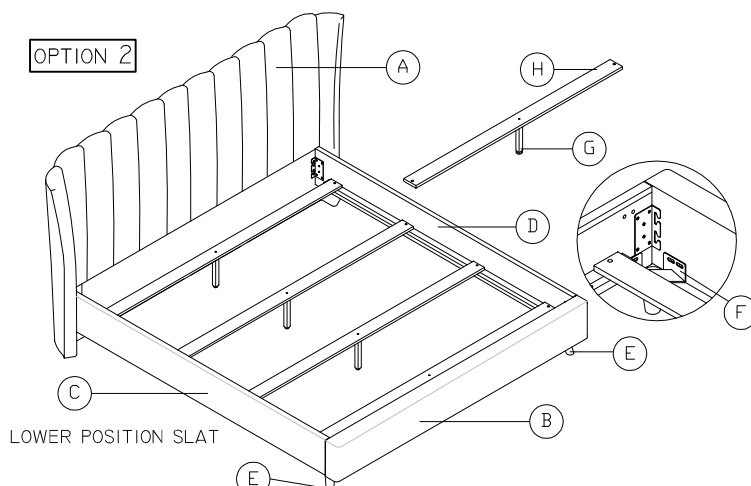


LOWER POSITION SLAT


### Manufactured for Rooms To Go

#### STEP 1 - ATTACHING METAL BRACKET TO THE FOOTBOARD.

TAKE OUT THE BOLTS FROM FOOTBOARD (B). ATTACH THE METAL BRACKET (F) TO THE FOOTBOARD. DO NOT TIGHTEN THE BOLTS. FOLLOW THE DIAGRAM SHOWN BELOW.

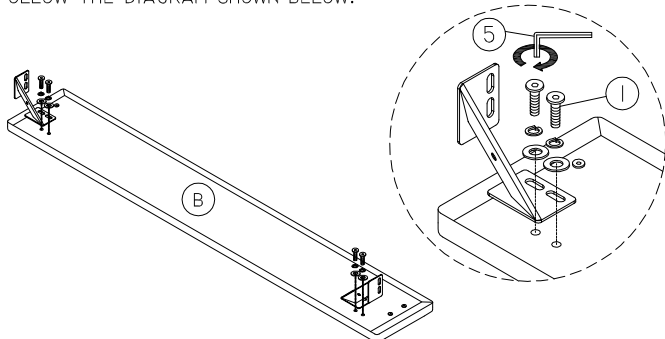


FROM BOTTOM VIEW





#### STEP 2 - ATTACHING LEG TO THE METAL BRACKET.

ATTACH THE LEG (E) TO THE METAL BRACKET (F) USING SCREW WITH WASHER (3). DO NOT TIGHTEN THE SCREW. FOLLOW DIAGRAM AS SHOWN.

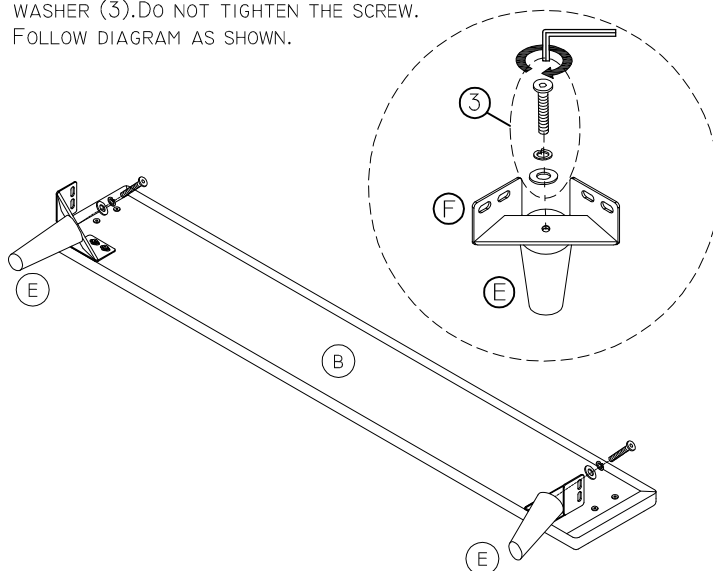



#### STEP 3 - ATTACHING SIDE RAIL TO HEADBOARD & FOOTBOARD

LOOSEN THE BOLTS (1) FROM HEADBOARD & FOOTBOARD. CHOOSE BETWEEN HIGH OR LOWER SLAT POSITION BEFORE ATTACH THE SIDE RAIL. HOOK SIDE RAIL BRACKET OVER THE BOLTS (1). TIGHTEN WITH THE ALLEN KEY (5) PROVIDED.

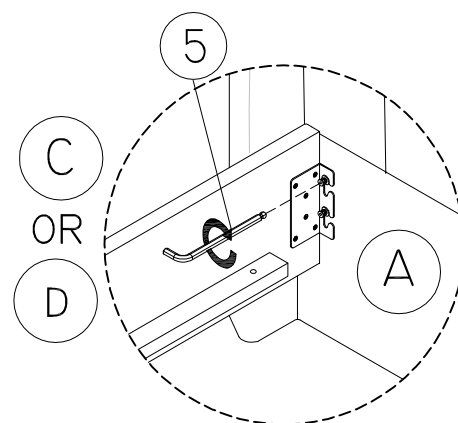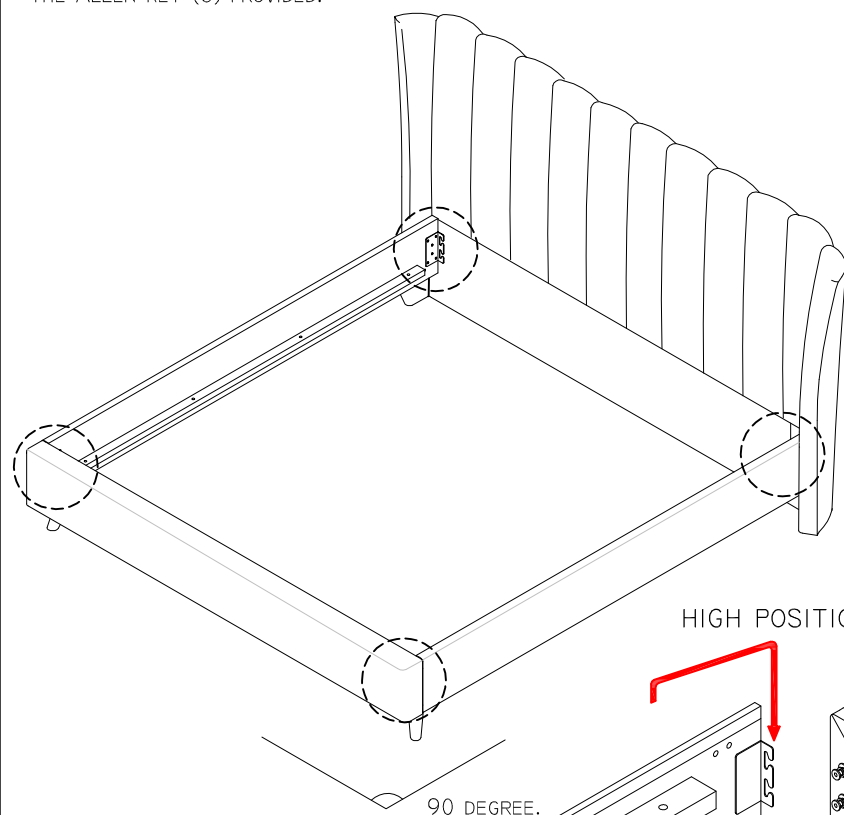

HIGH POSITION SLAT

LOWER POSITION SLAT

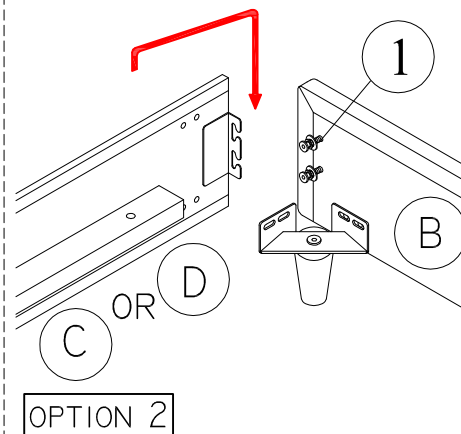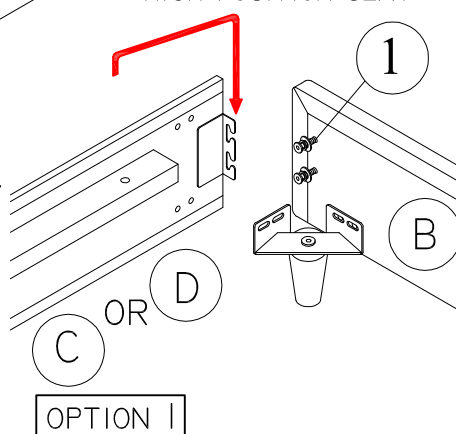



# Assembly Instruction

## RIPPLES 4 SLAT WITH RETRO LEG QUEEN BED


### BSSB

32377827 QUEEN HEADBOARD FOOTBOARD SLAT RED  
32377839 QUEEN HEADBOARD FOOTBOARD SLAT GRAY  
32377841 QUEEN HEADBOARD FOOTBOARD SLAT BLUE  
32377853 QUEEN HEADBOARD FOOTBOARD SLAT YELLOW  
32977829 QUEEN / KING RAILS RED  
32977831 QUEEN / KING RAILS GRAY  
32977843 QUEEN / KING RAILS BLUE  
32977855 QUEEN / KING RAILS YELLOW

### Manufactured for Rooms To Go


#### STEP 4 - ATTACH SCREW TO THE SIDE RAIL

ATTACHING SCREW (2) TO THE METAL BRACKET (F) AND FIX IT TO THE SIDE RAIL (C) & (D) USING ALLEN KEY (5) PROVIDED. FOLLOW DETAIL AS SHOWN.

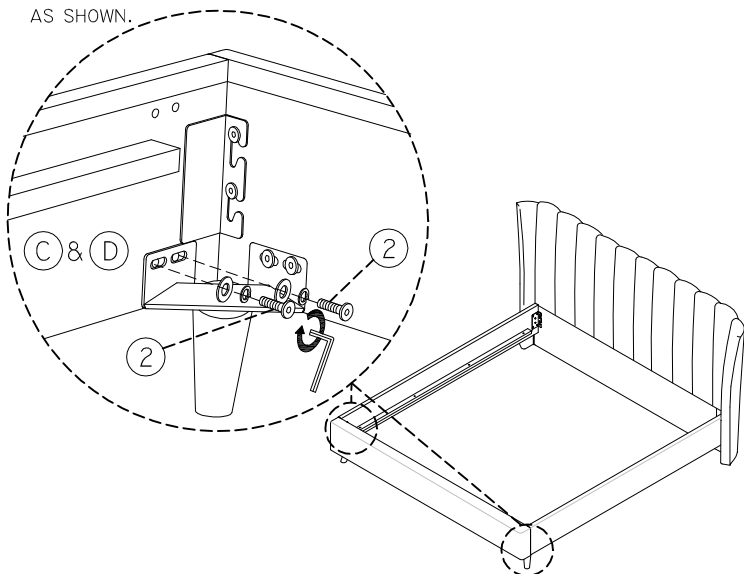


#### STEP 5 - FIX THE LEG POSITION

MAKE SURE THE BOTTOM LEG SURFACE FLUSH TO THE FLOOR LEVEL. THEN FULLY TIGHTEN THE BOLTS. FOLLOW DETAIL AS SHOWN.

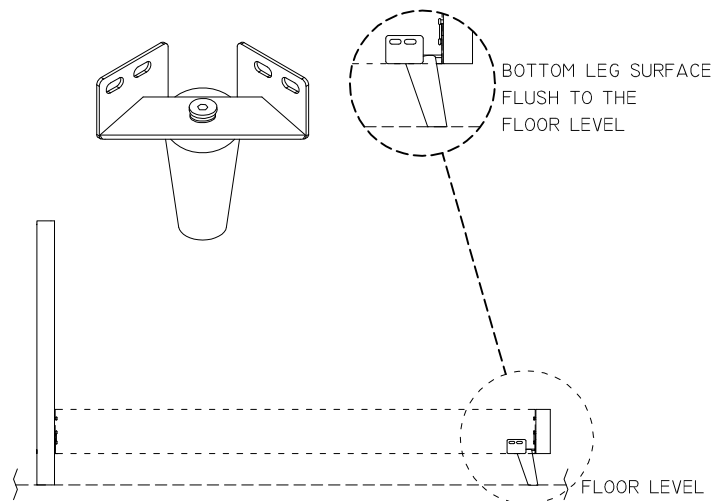


#### STEP 6 - ATTACHING CENTER SUPPORT LEG TO THE SLAT

TIGHTEN IN THE CENTER SUPPORT LEG (G) TO THE INSERT NUT HOLE AT THE SLAT (H). FOR LOWER POSITION SLAT, REMOVE THE TOP CENTER SUPPORT LEG AND ATTACH THE BOTTOM CENTER SUPPORT LEG TO INSERT NUT HOLE AT SLAT. PLACE THE SLAT (H) TO THE SIDE RAIL (C) & (D) AS SHOWN.

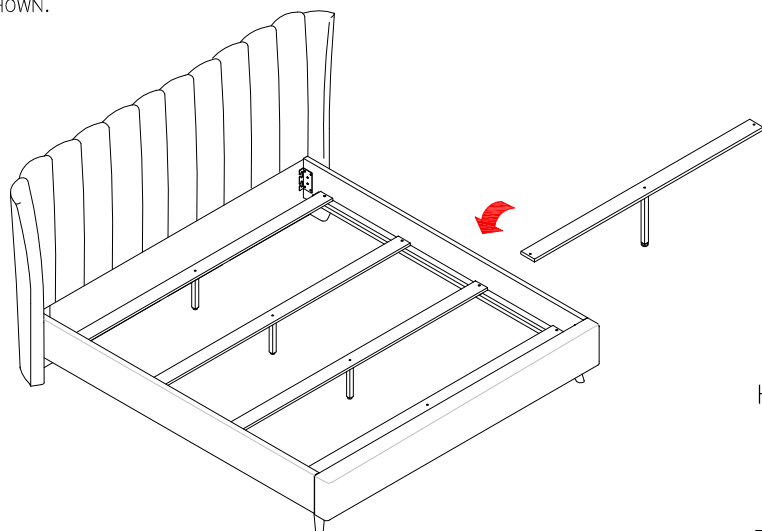


#### OPTION 1

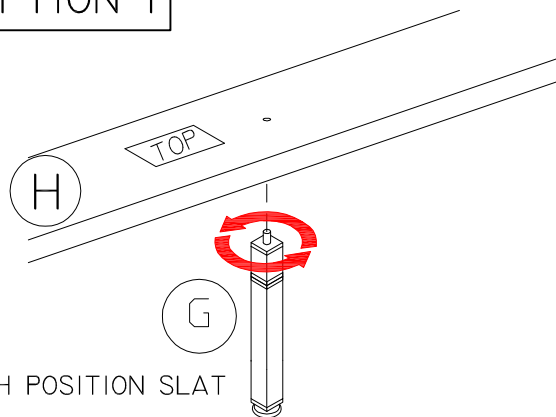

HIGH POSITION SLAT

ATTACH THE CENTER SUPPORT LEG TO SLAT

#### OPTION 2

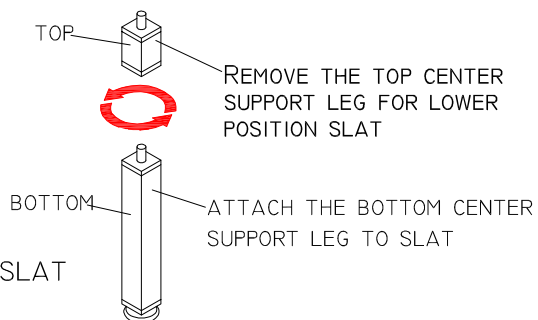

REMOVE THE TOP CENTER SUPPORT LEG FOR LOWER POSITION SLAT

ATTACH THE BOTTOM CENTER SUPPORT LEG TO SLAT



LOW POSITION SLAT

\*NOTE: THE THRU HOLE CAN BE FOUND AT THE MIDDLE OF THE SLAT.

### Manufactured for Rooms To Go

#### STEP 7 - ATTACHING BOLTS TO THE SLATS


FIX THE SLATS WITH BOLTS (4) USING ALLEN KEY (5) PROVIDED. THEN LEVEL THE LEG TO THE FLOOR.

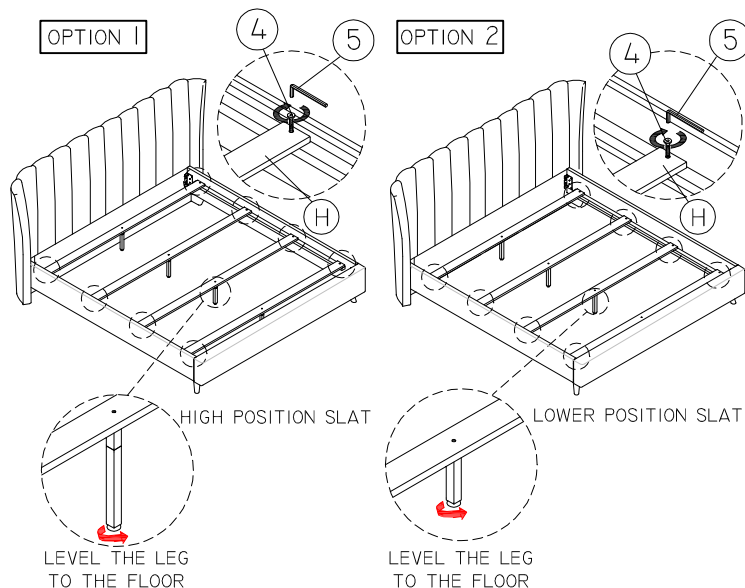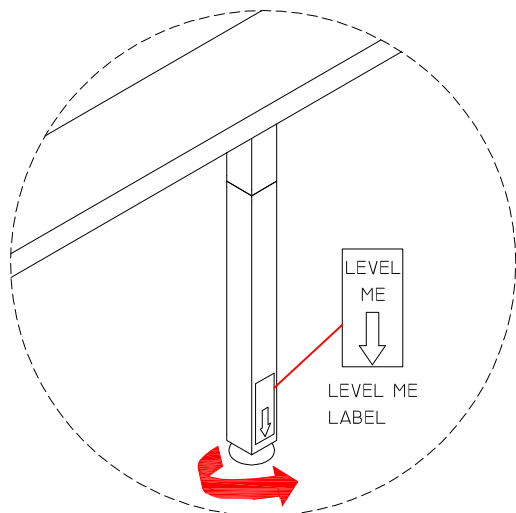

#### STEP 8 - FINAL TOUCH

##### PLEASE HEED THE FOLLOWING INSTRUCTIONS.

1. KEEP AWAY FROM DIRECT SUNLIGHT TO AVOID DISCOLOURATION.
2. DO NOT DRAG THE BED ACROSS THE FLOOR WHEN POSITIONING OR MOVING WHILST CLEANING.
3. WIPE CLEAN WITH A DAMP CLOTH.
4. TIGHTEN ALL SCREWS AT REGULAR INTERVALS, TO AVOID DAMAGE TO THE FRAME.
5. ENJOY YOUR PRODUCT.

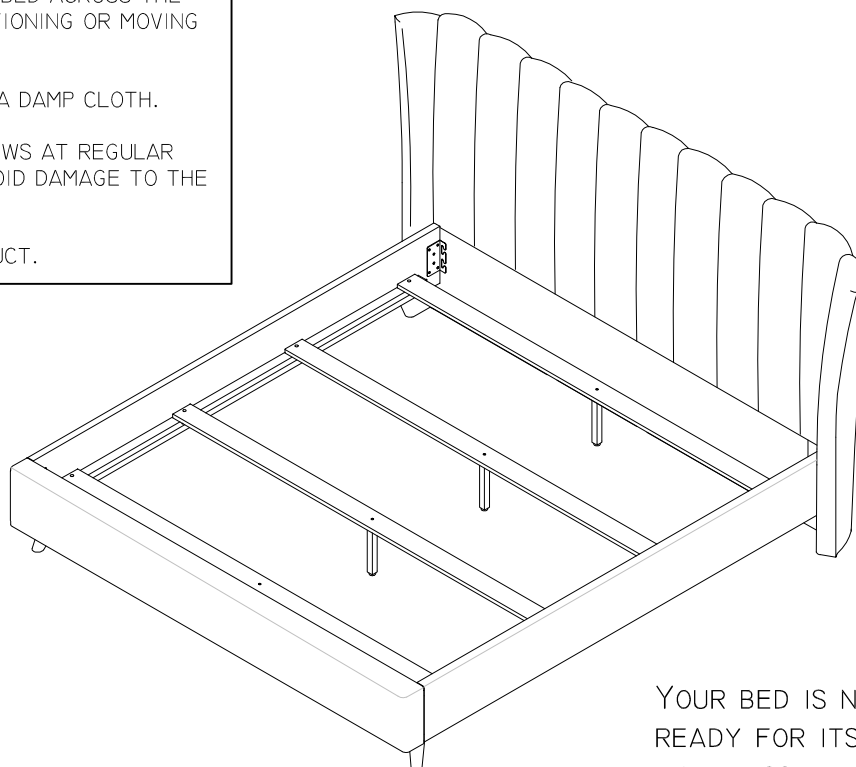

YOUR BED IS NOW  
READY FOR ITS  
MATTRESS.