














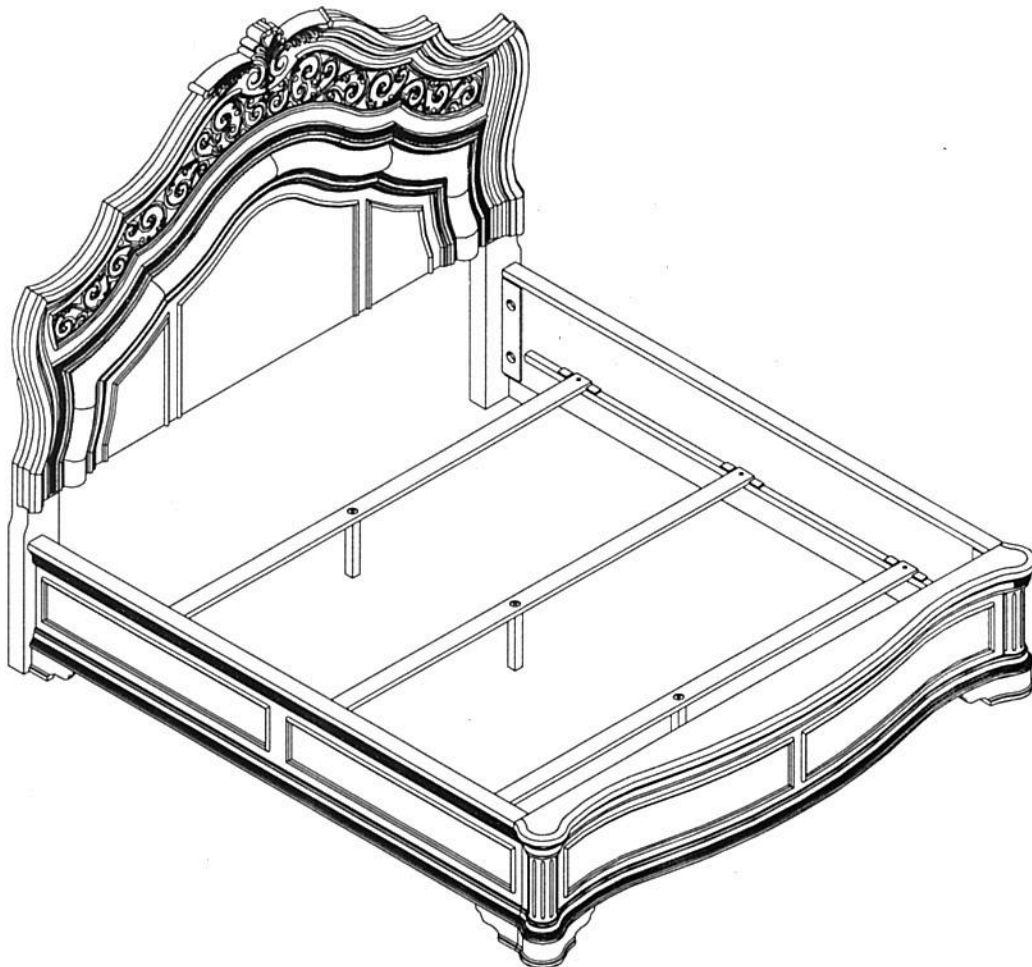


Assembly Instruction

SLAW 135-8584-250	5/0 Headboard	SKU# 32385848
SLAW 135-8584-251	5/0 Footboard w/ Slats	32785846
SLAW 135-8584-270	6/6 Headboard	32485840
SLAW 135-8584-271	6/6 Footboard w/ Slats	32885848
SLAW 135-8584-400	5/0-6/6 Bed Rails	32985840

Code	PARTS LIST:		
A	Headboard		1Pc
B	Left Headboard		1Pc
C	Right Headboard		1Pc
D	Footboard		1Pc
E	Side Rails		2Pcs
F	Slats		3Pcs
G	Center leg		3Pcs

Step	Code	Hardware List		
1	H	Allen Bolt - Ø5/16x18x45mm		6Pcs
		Flat washer - Ø5/16x22x1.5mm		6Pcs
		Lock washer - Ø5/16		6Pcs
1	I	Allen Key - 5mm		1Pc
2	J	Bolt - Ø5/16x18x89mm		8Pcs
		Flat washer - Ø5/16x19x1.5mm		8Pcs
		Lock washer - Ø5/16		8Pcs
		Curved washer - Ø5/16		8Pcs
		Nut - Ø5/16		8Pcs
	K	Wrench - Ø5/16		1Pc
	L	Wooden pegs- Ø10x40mm		4Pcs
4	M	Wood screw- #8x32mm		6Pcs






Assembly Instruction


SLAW 135-8584-250 5/0 Headboard
SLAW 135-8584-251 5/0 Footboard w/ Slats
SLAW 135-8584-270 6/6 Headboard
SLAW 135-8584-271 6/6 Footboard w/ Slats
SLAW 135-8584-400 5/0-6/6 Bed Rails

SKU# 32385848
32785846
32485840
32885848
32985840

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

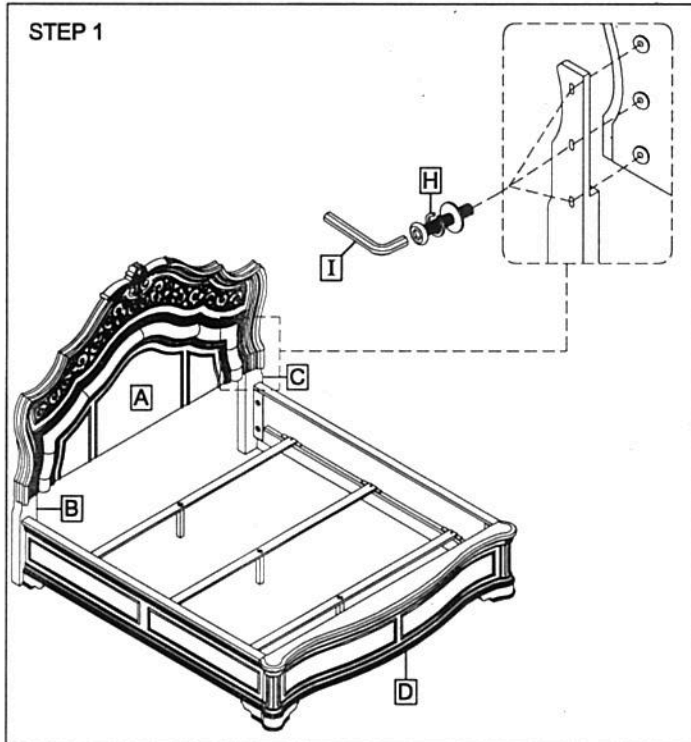

Assemble the legs with the HB.
Note: left leg to left side HB, Right leg to right side HB Do not tighten all bolts until HB is fully assembly.

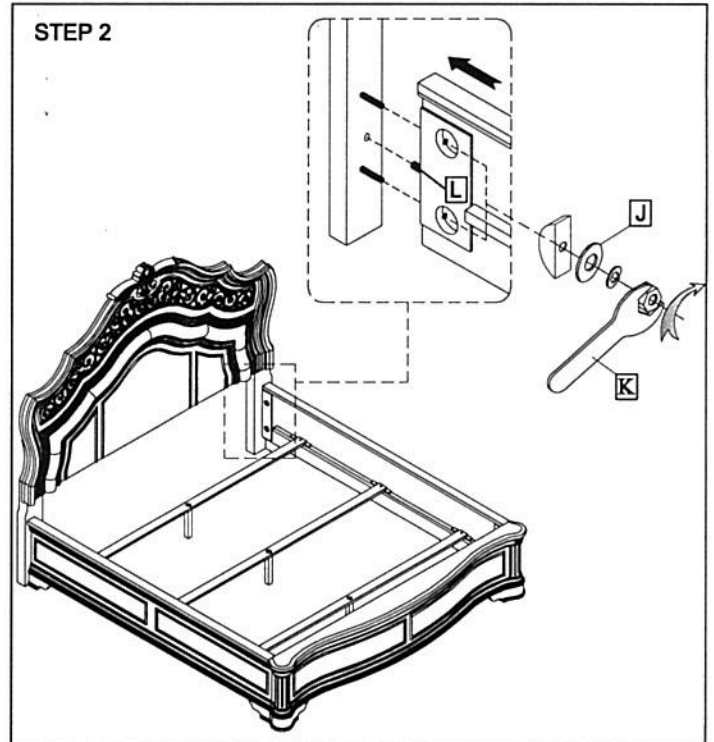

Assemble the side rails to the HB and FB.

