

ASSEMBLY INSTRUCTION

DVDR 957-490HB QUEEN HEADBOARD
 DVDR 957-491FB QUEEN FOOTBOARD
 DVDR 957-510SR QUEEN/KING SIDE RAILS

SKU# 32395712
 SKU# 32795710
 SKU# 32995714


Version#1 -20/05/2025

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

PARTS LIST

No.	Description	Picture	Q'ty
1	Queen Headboard		1Pc


PARTS LIST

No.	Description	Picture	Q'ty
2	Queen Footboard		1Pc
3	Slats		5Pcs
4	Long Support Leg		5Pcs
5	Short Support Leg		5Pcs



PARTS LIST

No.	Description	Picture	Q'ty
6	Side Rails		2Pcs



HARDWARE LIST

LIST OF HARDWARE			
No.	Description	Picture	Q'ty
Pre-installed on Part 1 & 2	Allen Head Bolt $\phi 5/16$ "-18 x 1" PRE-INSTALLED		8Pcs
	Spring Washer $\phi 5/16$ " PRE-INSTALLED		8Pcs
	Flat Washer $\phi 5/16$ " x 19*2mm PRE-INSTALLED		8Pcs
A	Allen Key 4mm		1Pc
B	Screw #8 x 1"		10Pcs
TOOL REQUIRED (NOT PROVIDED)			
		Phillip Screwdriver	

OPTION - 1

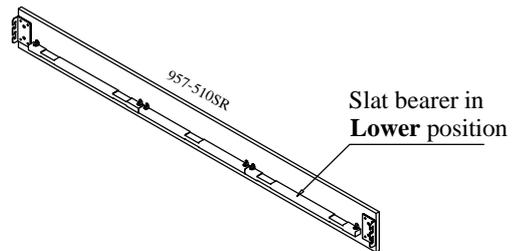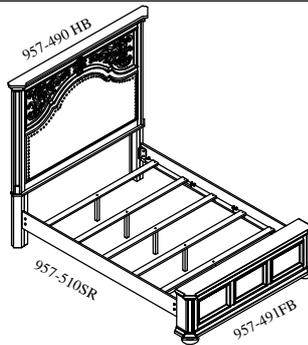

OPTION - 2

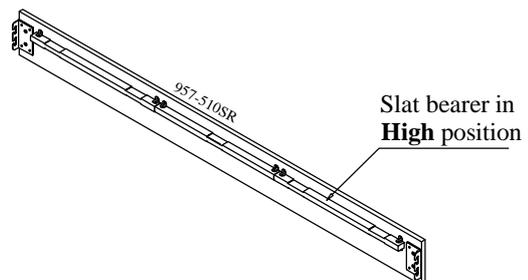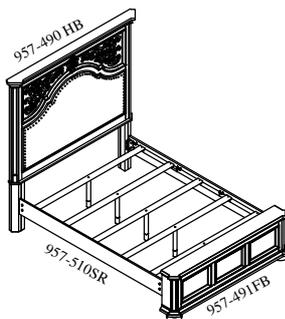

Hardware Pack Location (S): 957-491FB QN FOOTBOARD - SKU #32795710

Manufactured by DVDR for Rooms To Go

MADE IN VIETNAM


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

OPTION -1: Assembly Queen Bed with Slat bearer in Lower Position

STEP 2: Assemble the Side Rails to the Headboard. Use an Allen Key to tight the nut. Similarly, install the Side Rails for the Footboard.

STEP 3: Assemble the Support Legs to the Slat. When installing, the Support Legs needs to be tightened to fit your hand and adjust Leveler on Support Legs for balance.

STEP 4: Place the Slat in the correct position on Side Rails. Then use an screwdriver to screw Slats into the Side Rails to secure it. Screwdriver (Not Provided) .

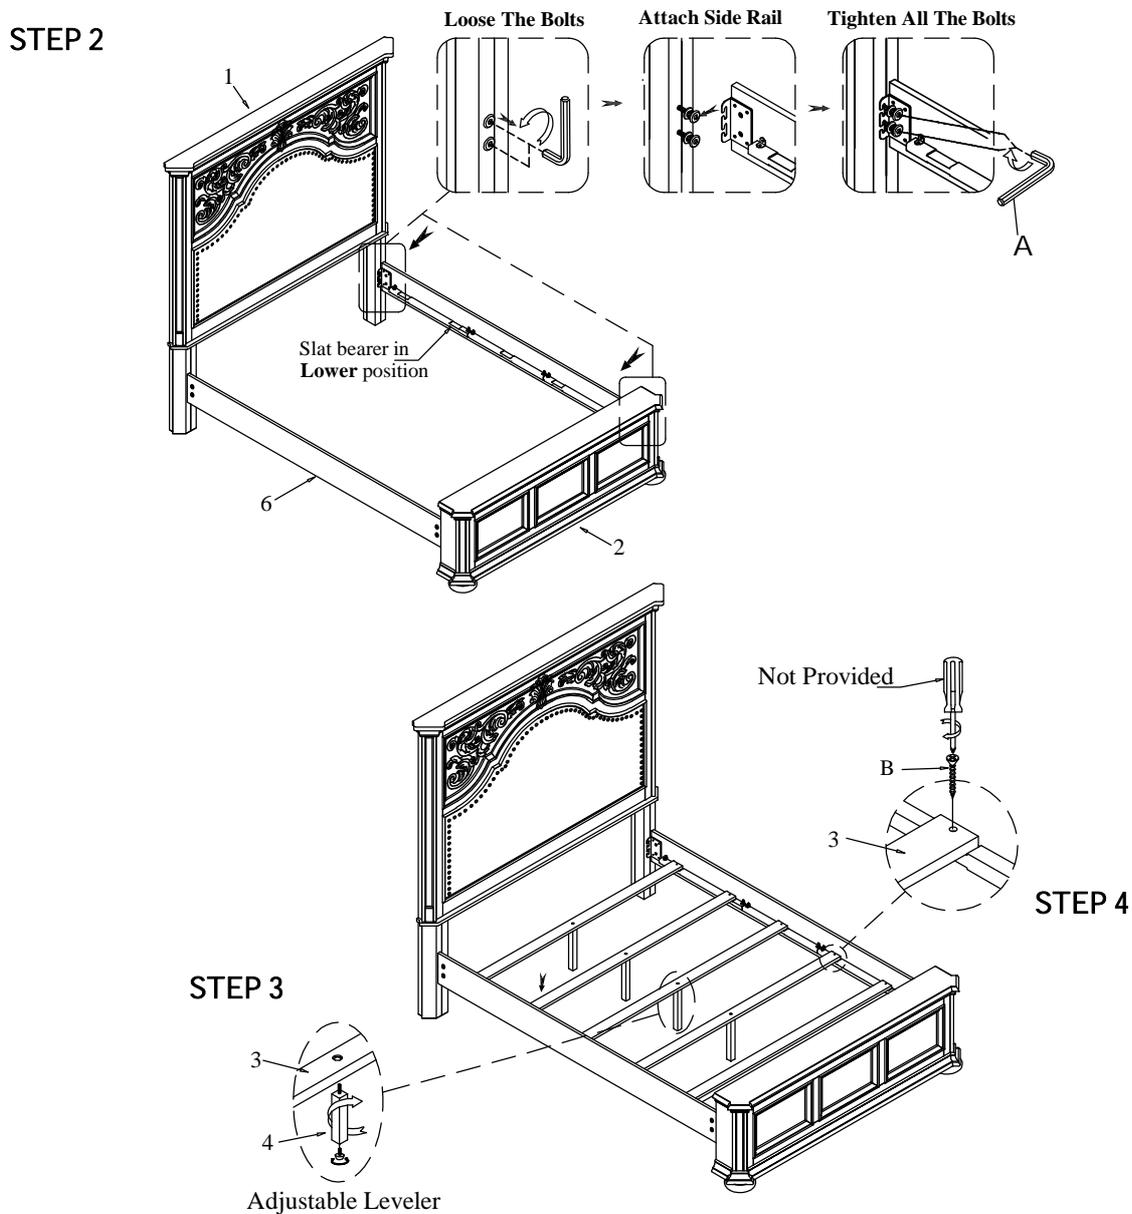

Hardware Pack Location (S): 957-491FB QN FOOTBOARD - SKU #32795710

Manufactured by DVDR for Rooms To Go


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

OPTION -2: Assembly Queen Bed with Slat bearer in High Position

STEP 2: Assemble the Side Rails to the Headboard. Use an Allen Key to tight the nut. Similarly, install the Side Rails for the Footboard.

STEP 3: Screw the short Support Legs into the long Support Legs. Then, screw the newly installed bar into the bed slats. When installing, you need to tighten the Slat Support Legs bar to fit your hand and adjust the Leveler on the Support Legs for balance .

STEP 4: Place the Slat in the correct position on Side Rails. Then use a screwdriver to screw Slats into the Side Rails to secure it. Screwdriver (Not Provided) .

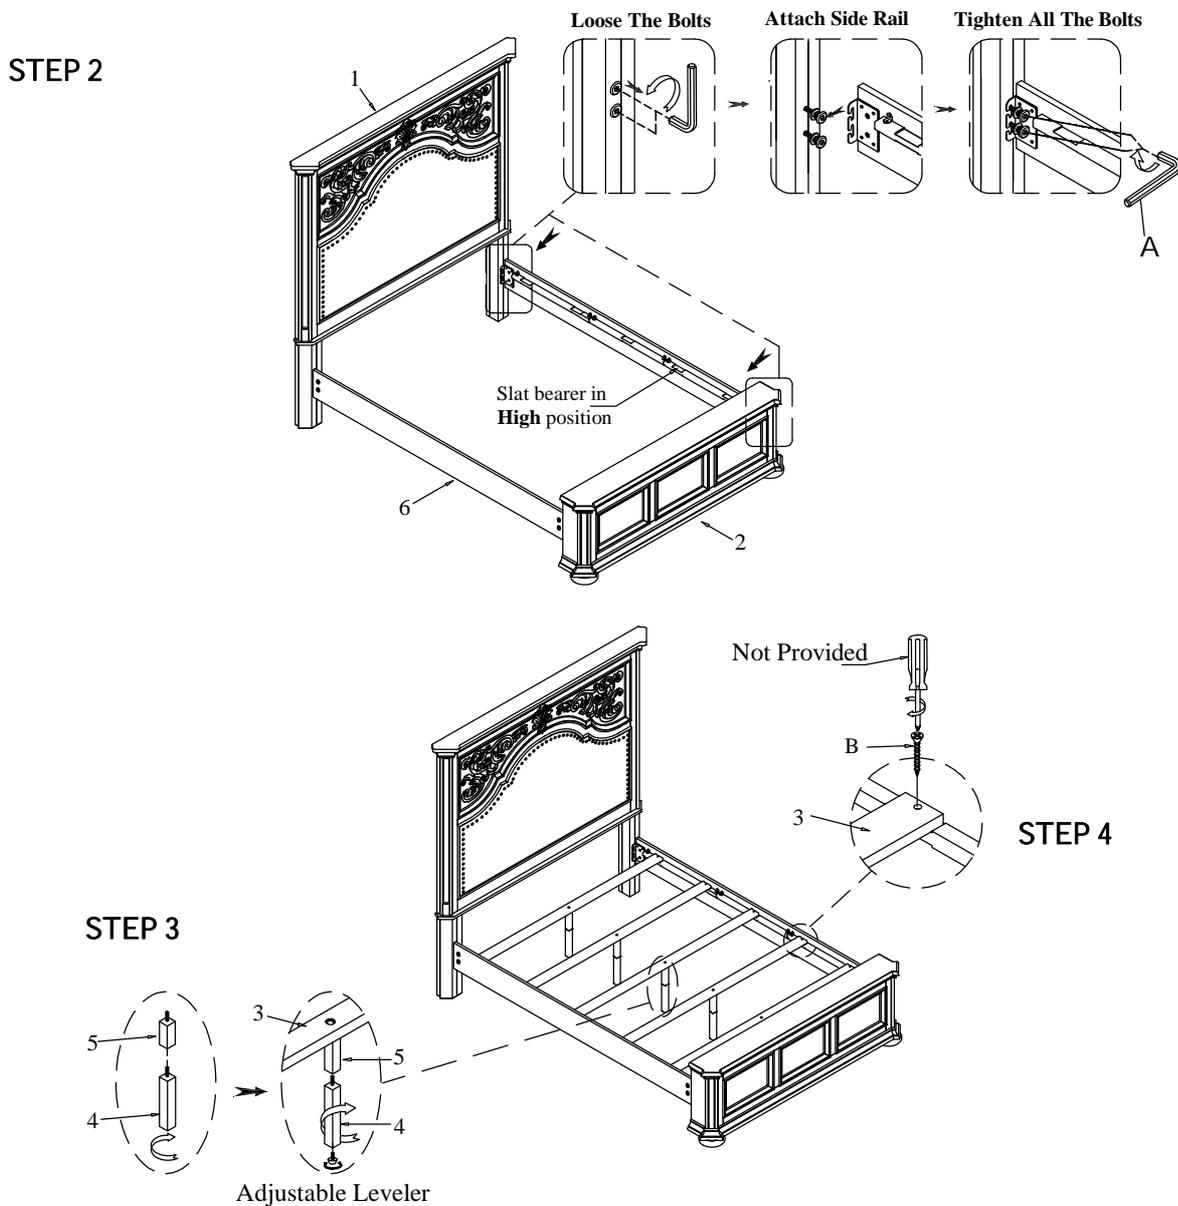

Hardware Pack Location (S): 957-491FB QN FOOTBOARD - SKU #32795710

Manufactured by DVDR for Rooms To Go