

ASSEMBLY INSTRUCTION

GBHS 1708-4 / 1708-8 / 1708-9 KING BED SKU# 32417087 / 32817085 / 32917087


THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS. WHICH MAY HAVE COME LOOSE INSIDE THE CARTON DURING SHIPMENT. IDENTIFY AND COUNT ALL PARTS AND COMPARE WITH THE HARDWARE LIST BELOW.

COMPONENT LIST


NO	DESCRIPTION	QTY.
A	HEADBOARD	1
B	HEADBOARD BASE	1
C	FOOTBOARD	1
D	SIDE RAIL	2
E	SLATS	5
F	CENTER LEG	10

HARDWARE LIST IN HEADBOARD & FOOTBOARD


NO	DESCRIPTION	QTY.
1	WASHER+LOCK WASHER 	12
2	ALLEN BOLT (6x30mm-Thread count 28) 	12
3	ALLENKEY (4mm) 	1
4	ALLENKEY (5mm) 	1
5	SCREW 	10
6	SCREW DRIVER (NOT INCLUDED)	-

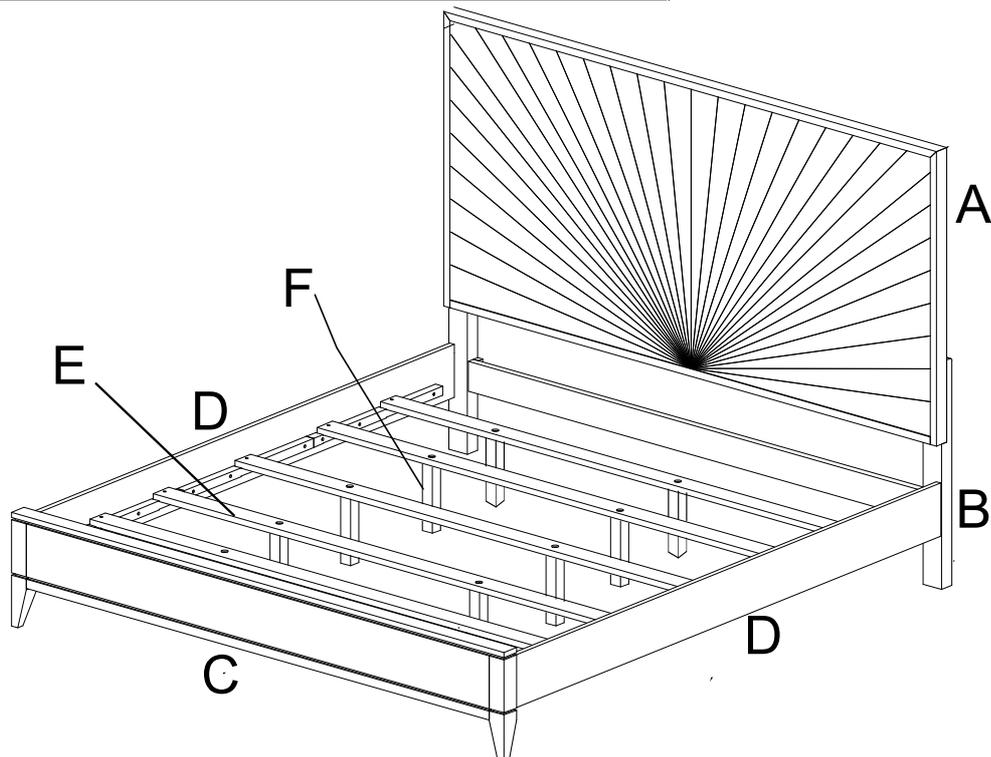

STEP-1

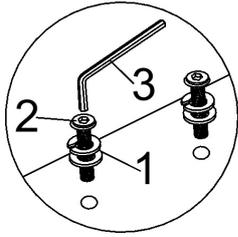

ASSEMBLE HEADBOARD FRAME TO BASE. LOOSELY INSERT ALL 12 BOLTS INTO HEADBOARD, THEN TIGHTEN ALL BOLTS.

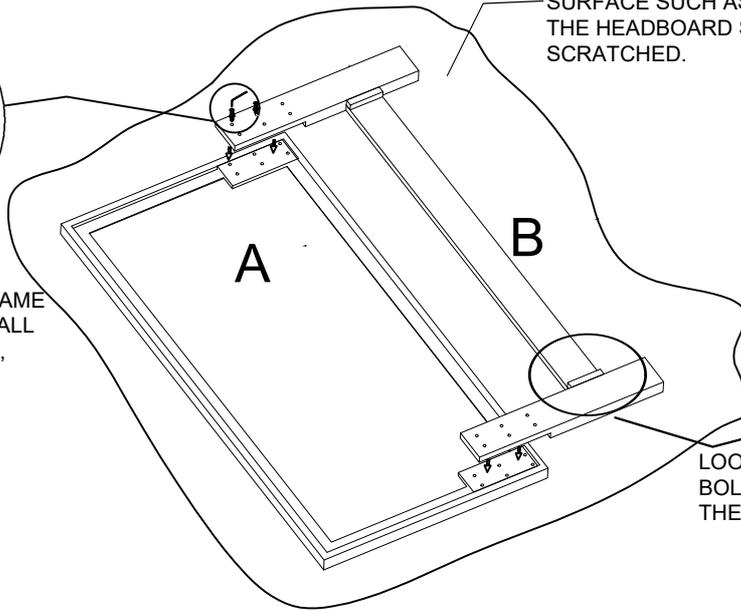


-PLACE HEADBOARD ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE HEADBOARD SURFACE FROM BEING SCRATCHED.

LOOSEN AND TIGHTEN THESE BOLTS AS NEEDED TO ASSEMBLE THE HEADBOARD.


STEP-2

ASSEMBLE HEADBOARD WITH SIDE RAIL & FOOTBOARD.

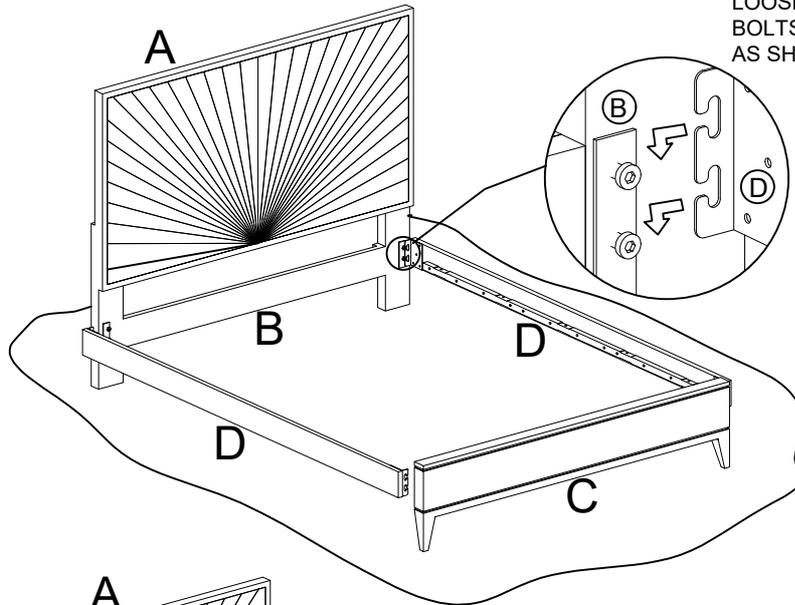


LOOSEN PRE-PARTIALLY TIGHTENED BOLTS, ALIGN SIDERAIL WITH BOLTS AS SHOWN.

STEP-3

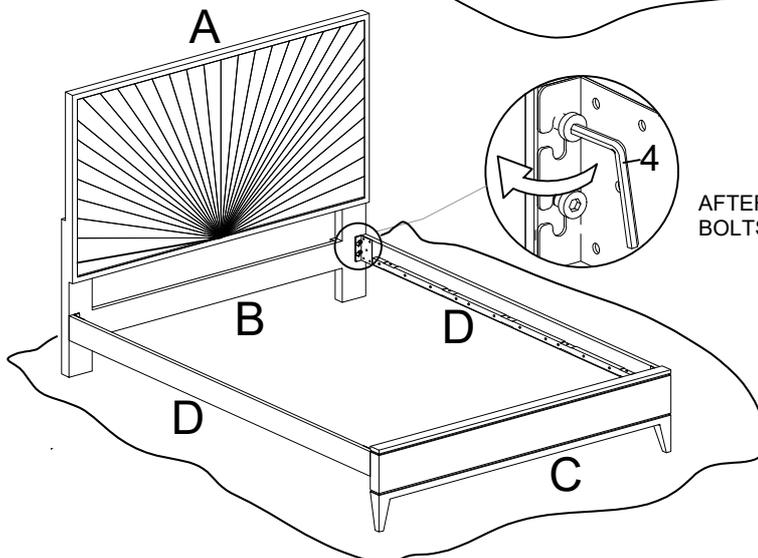


AFTER SIDERAIL SET IN POSITION TIGHTEN THE BOLTS COMPLETELY.


STEP-4

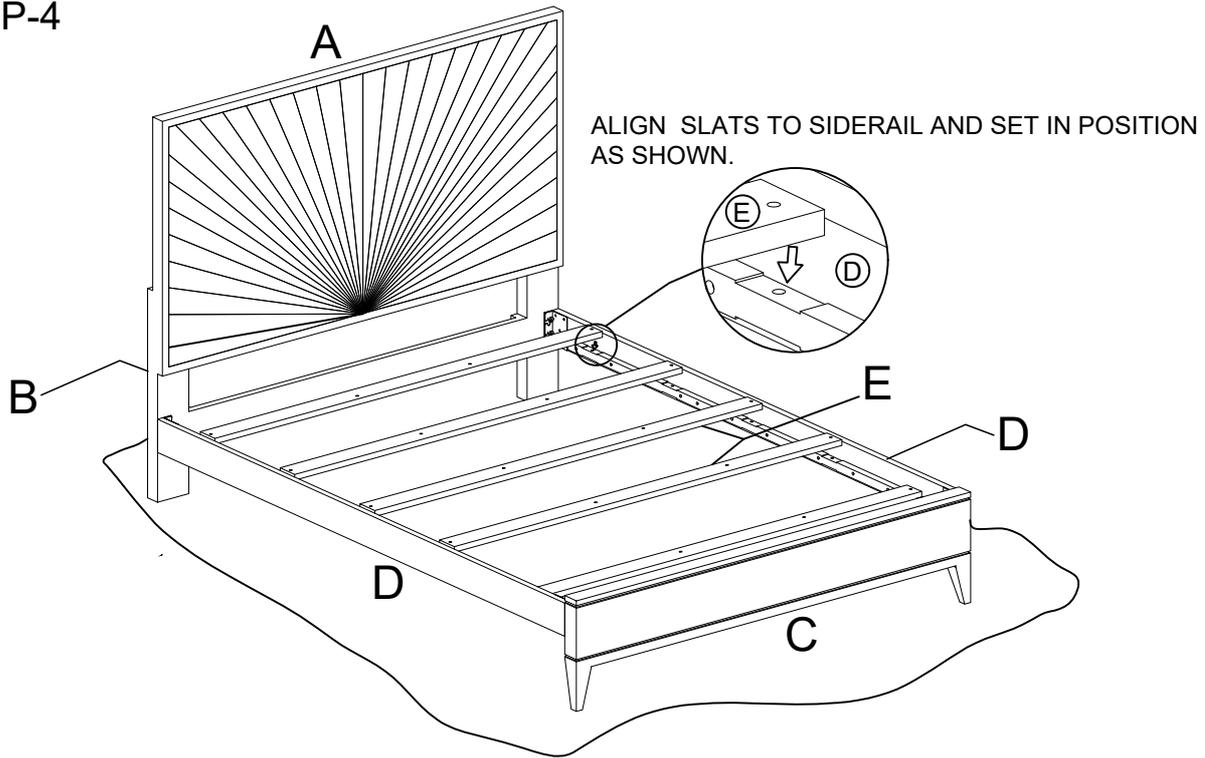

STEP-5

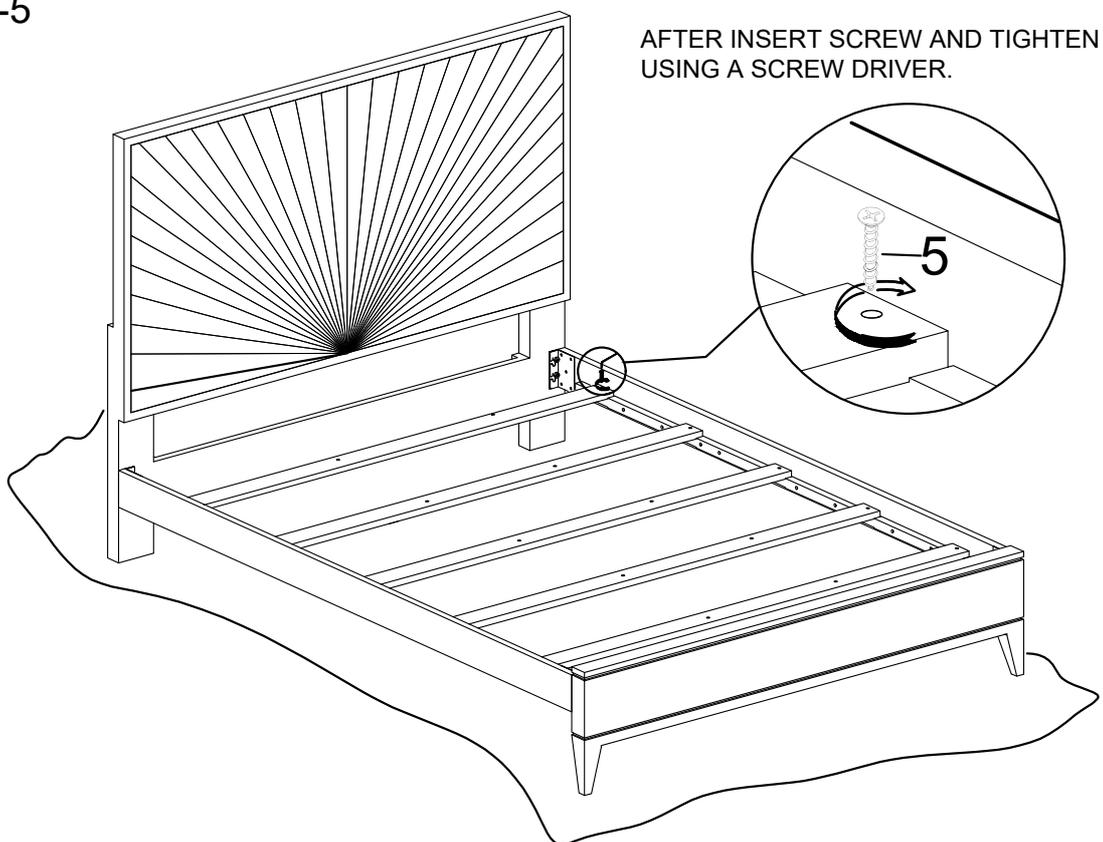

STEP-6

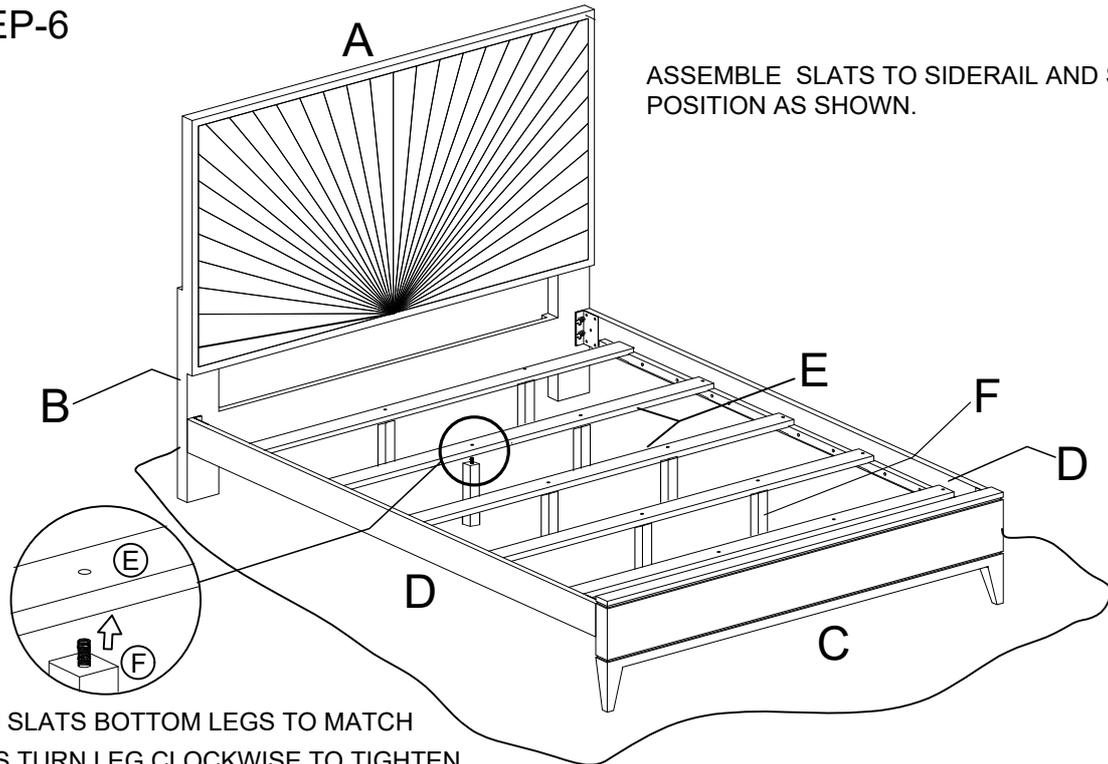

ALIGN SLATS BOTTOM LEGS TO MATCH HOLES TURN LEG CLOCKWISE TO TIGHTEN COMPLETE, REPEAT STEP FOR OTHER LEGS.

STEP-7

COMPLETE PRODUCT

