

# HEADBOARD ASSEMBLY INSTRUCTIONS


DS-2530/2532/2534-250/270

Questions? Call 1-800-994-3390


MADE IN CHINA

## Parts and Hardware List

Please check to make sure you have all parts and hardware before starting the assembly process.  
(Attention: The legs & hardware bag can be found in the back of the headboard.)

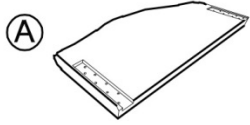

x1  
Headboard

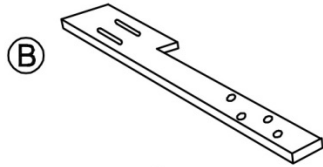

x2  
Wooden Legs




x8  
Bolts M8x45MM



x8  
Flat Washers M8



x8  
Spring Washers M6




x1  
Wrench M5


## Assembly Instructions

Please read and understand all assembly instructions before beginning assembly process.

**STEP 1: OPEN THE NON-WOVEN FABRIC OF HEADBOARD BACK. TAKE OUT THE 2 LEGS.**

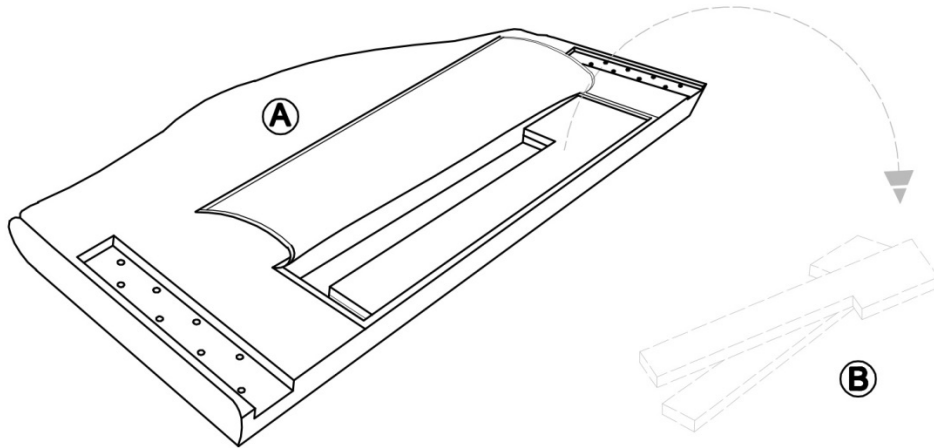

**STEP 2: CLOSE THE NON-WOVEN FABRIC.**

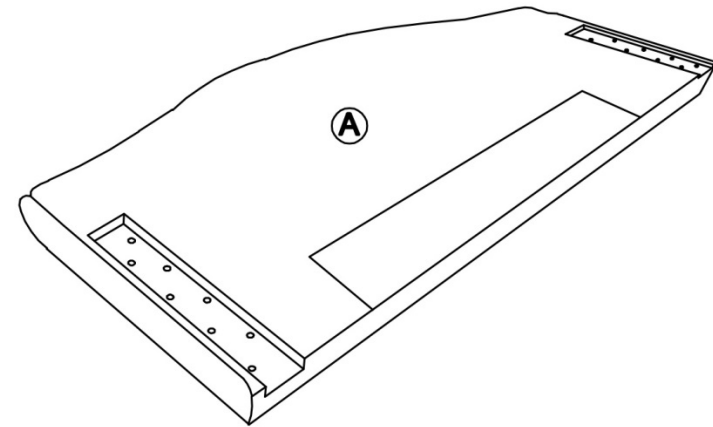

# HEADBOARD ASSEMBLY INSTRUCTIONS

DS-2530/2532/2534-250/270


Questions? Call 1-800-994-3390

MADE IN CHINA


## Assembly Instructions

Please read and understand all assembly instructions before beginning assembly process.

**STEP 3: THE HEADBOARD CAN BE ADJUSTED TO DIFFERENT HEIGHTS. SELECT THE DESIRED HEIGHT AND USING BOLTS (C)+SPRING WASHERS(E)+FLAT WASHERS(D) TO ASSEMBLE THE LEGS(B) TO THE HEADBOARD(A), TIGHTEN WITH WRENCH(F). (INSTRUCTION SHOWS HEADBOARD VIEWED FROM THE BACK.)**

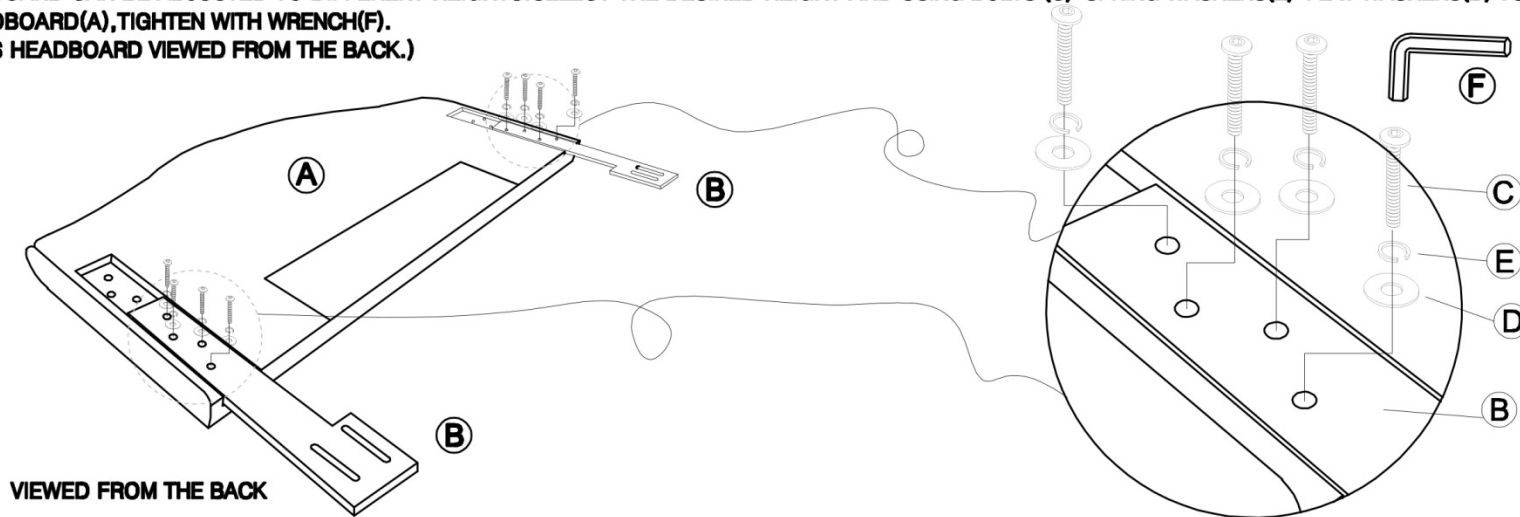

STEP 4: COMPLETED

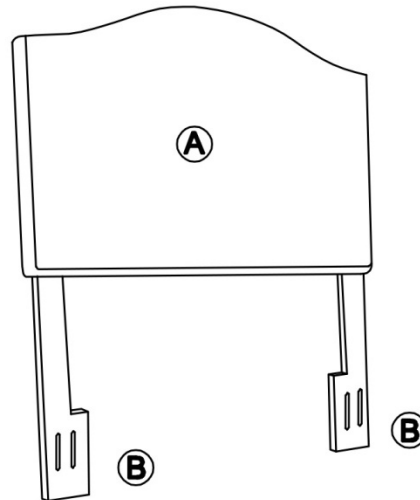

THE ABOVE PHOTO FOR REFERENCE ONLY, HEADBOARD STYLES MAY VARY.

Page 2 of 2