

ASSEMBLY INSTRUCTIONS



PHOM 3827-210 : QN WOVEN PANEL HDBD # SKU 32338279
PHOM 3827-211 : QN WOVEN PANEL FTBD # SKU 32738277
PHOM 3827-20R : QN/KG PANEL & POSTER SIDE RAILS # SKU 32938271

PHOM 3827-220 : KG WOVEN PANEL HDBD # SKU 32438271
PHOM 3827-221 : KG WOVEN PANEL FTBD # SKU 32838279
PHOM 3827-20R : QN/KG PANEL & POSTER SIDE RAILS # SKU 32938271

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
Identify and count all parts and compare with the Hardware List below.
Tools Required for assembly: Phillips Screwdriver (not provided)

Headboard	No.	Description	Q'ty
	A	Headboard	1 Pc
	B	Legs (L-R)	2 Pcs
	C	Strecher	1 Pc


Footboard	D	Footboard	1 Pc
	E	Slats	2 Pcs
	F	Regular Leg Support	5 Pcs
	G	Leg Extensions	5 Pcs

Siderail	H	Siderails	2 Pcs
----------	---	-----------	-------

Hardware List	No.	Picture	Description	Dimension	Q'ty
	1		Bolt w/ Stopper	Ø5/16 x 18 x 2"	10 Pcs
	2		Bolt w/ Stopper	Ø5/16 x 18 x 1"	8 Pcs
	3		Lock Washer	5/16"	18 Pcs
	4		Flat Washer	Ø8 x Ø18 x 1 mm	18 Pcs
	5		Allen Key	5 x 70 mm	1 Pc
	6		Screw	Ø8 x 1"	10 Pcs





Tools Required for Assembly	7		Phillips Screwdriver (NOT PROVIDED)
-----------------------------	---	--	---------------------------------------

PART DETAIL

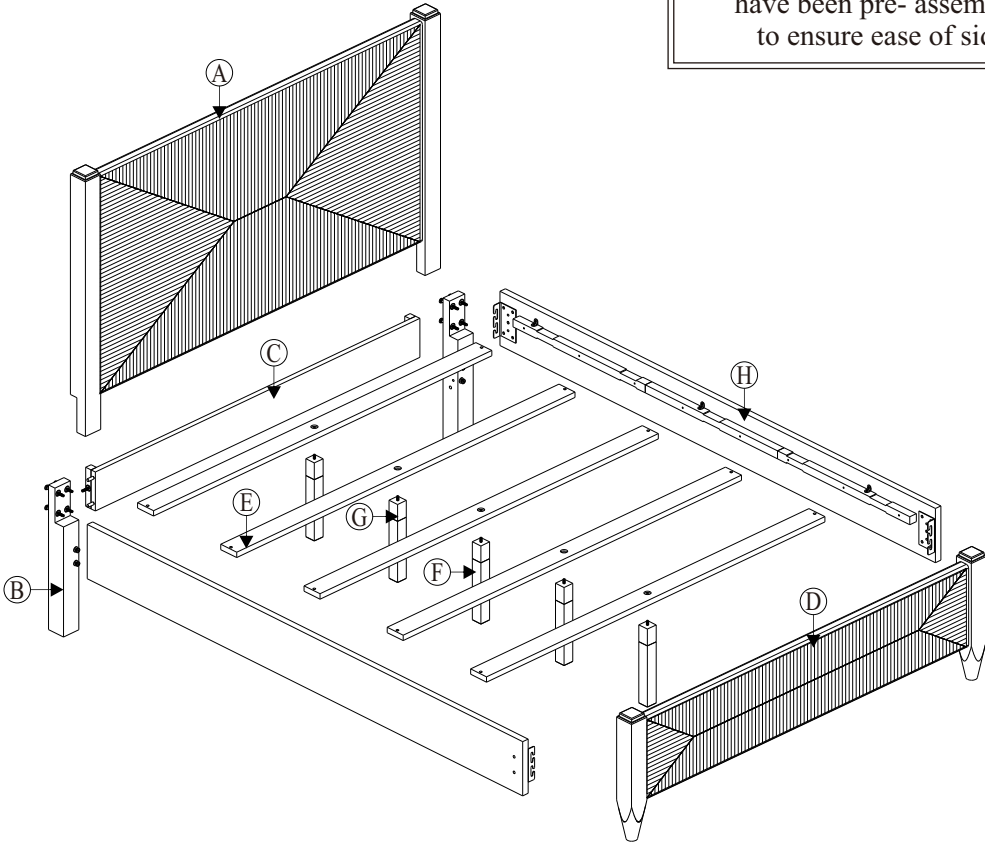


The bolts, lock washer, and flat washer have been pre- assembled at the factory to ensure ease of side rail assembly.


ASSEMBLY STEP

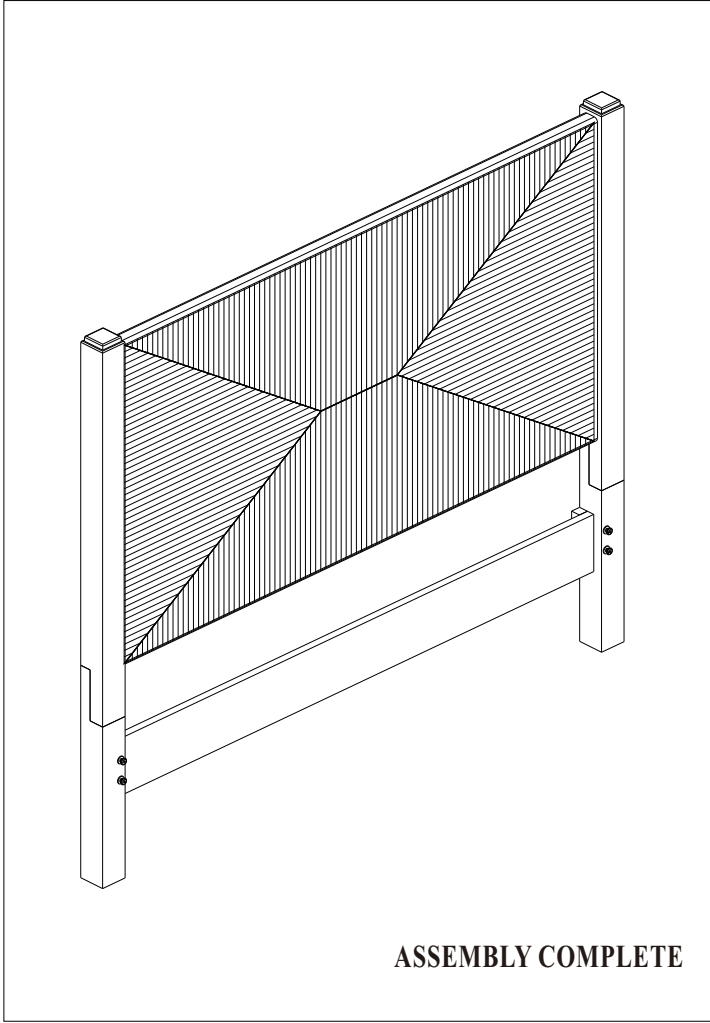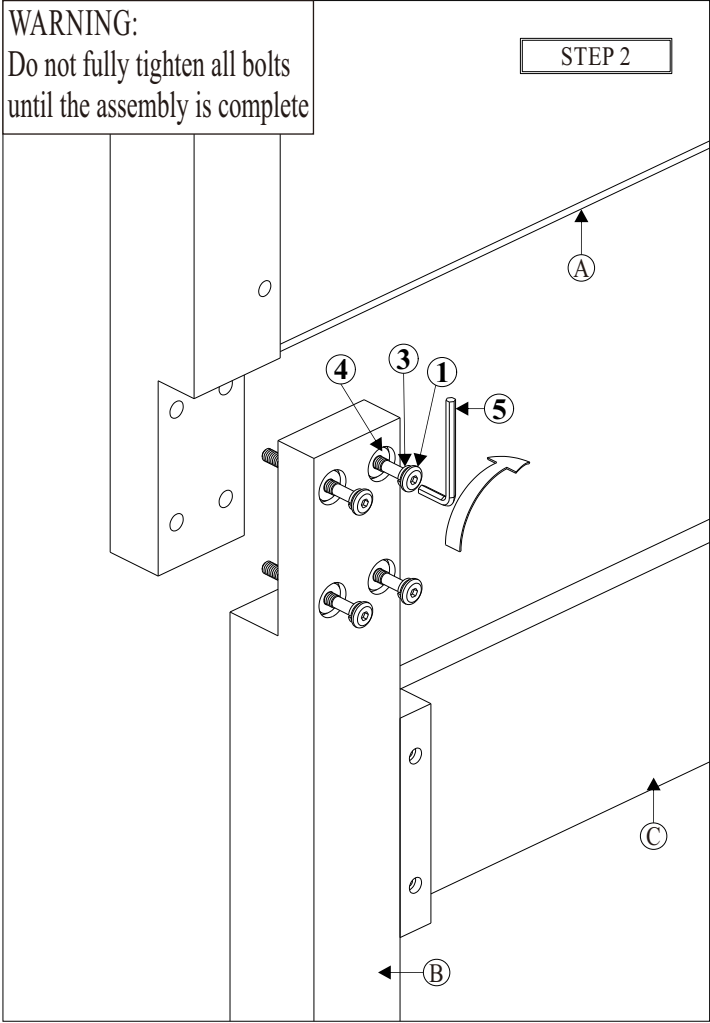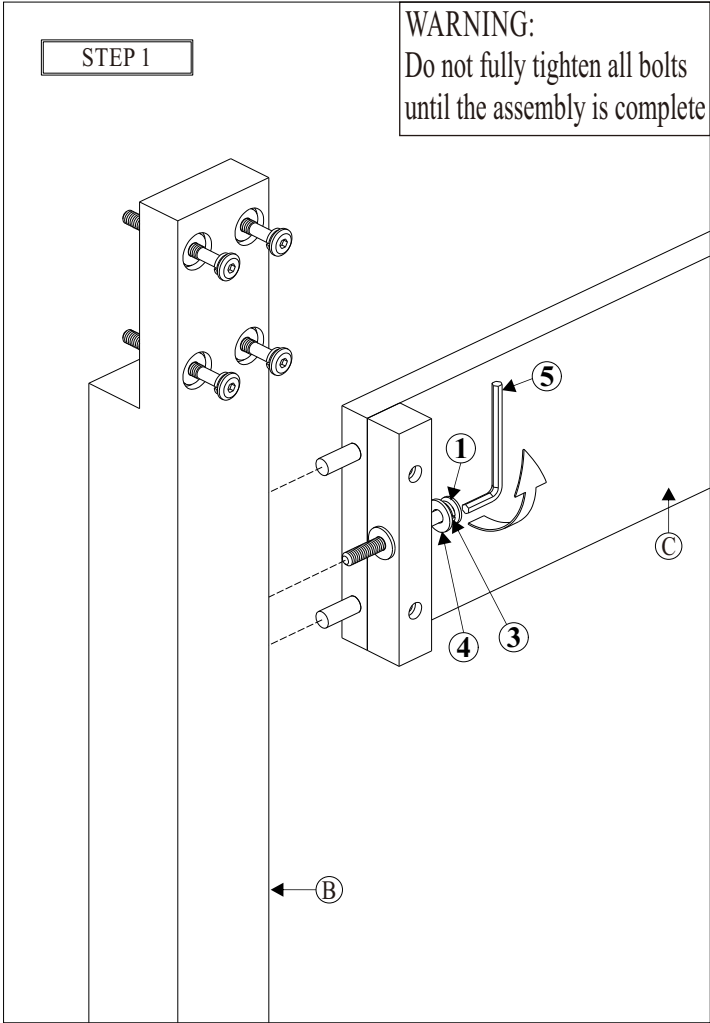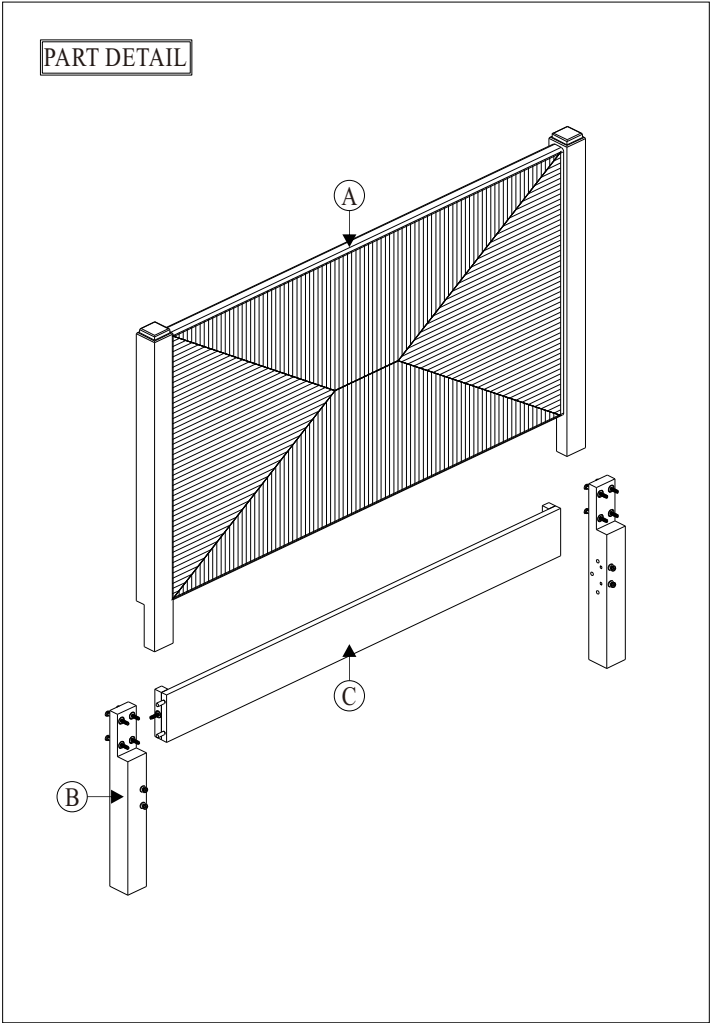


ASSEMBLY STEP

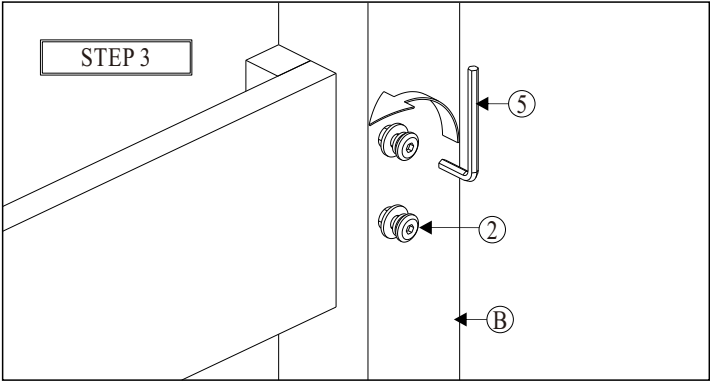


Slightly Loose the Bolt on the Panel Leg Headboard (B)

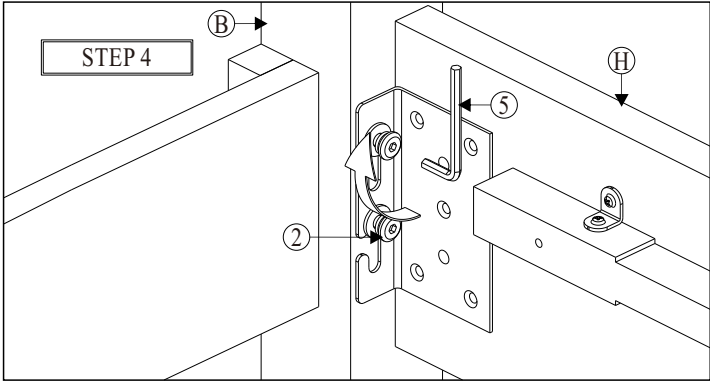


Attach Siderail (H) to Panel Leg Headboard (B)

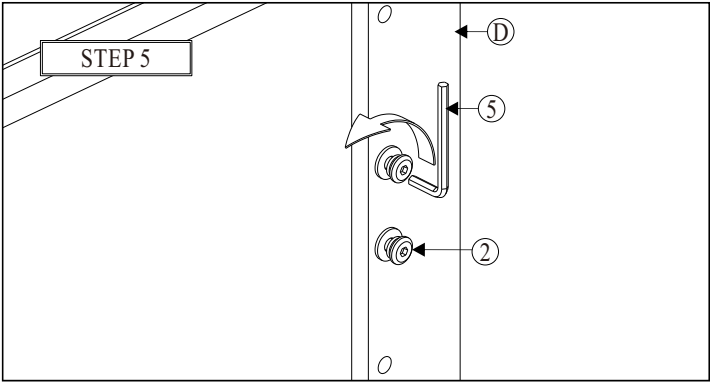

Slightly Loose the Bolt on the Panel Footboard (D)

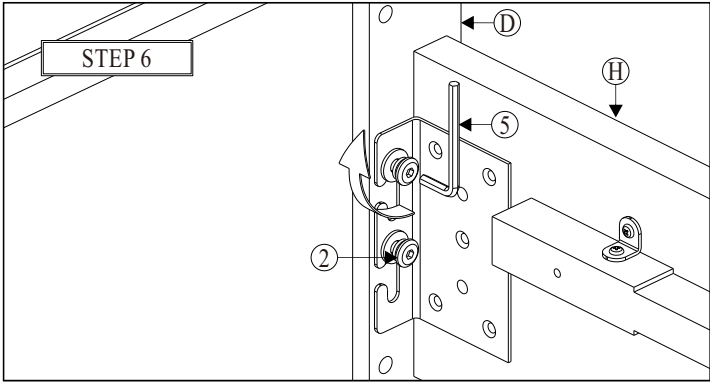


Attach Siderail (H) to Panel Footboard (D)

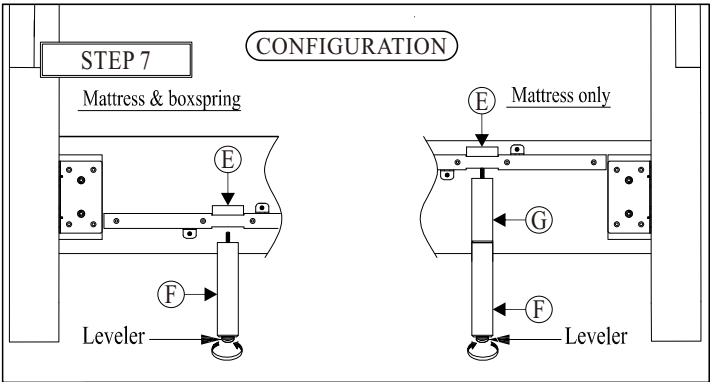


Tighten leg support (F) to Slat (E)


Tighten leg ext (G) to Slat (E)

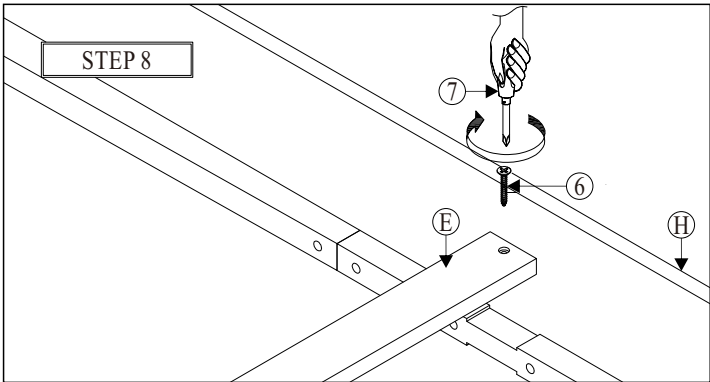

Attach Slats (E) to Siderails (H) using screw (6) with screw driver (7) follow pre-drill on the slats

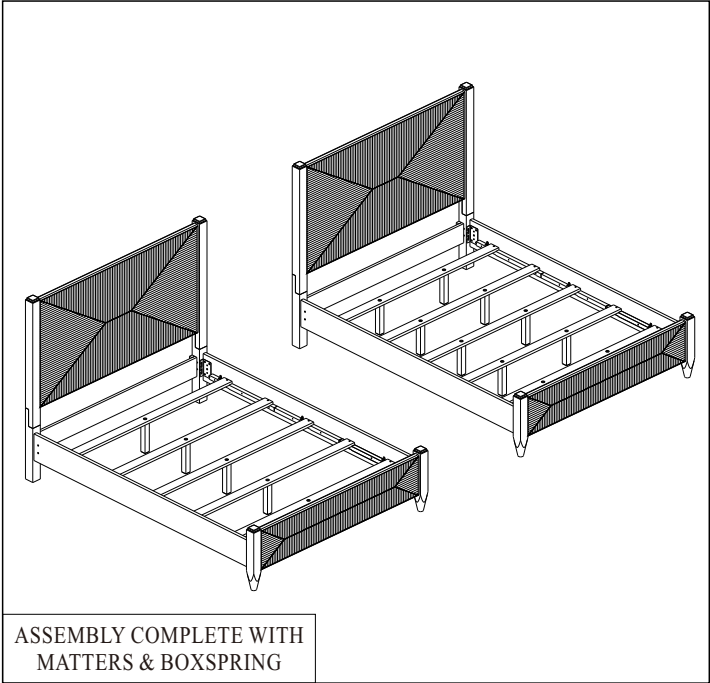

ASSEMBLY COMPLETE WITH
MATTERS & BOXSPRING

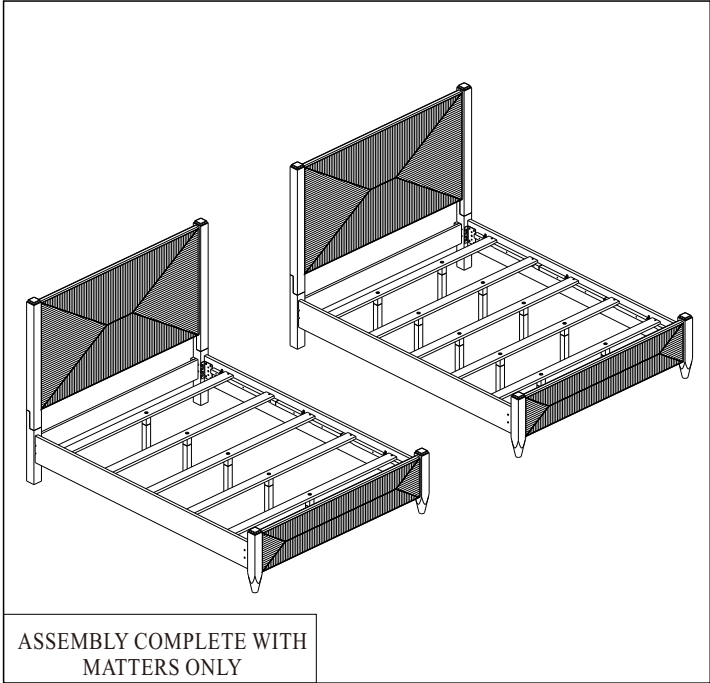

ASSEMBLY COMPLETE WITH
MATTERS ONLY