ROOMSTO GOD

Manufactured by MGNH for Rooms To Go.

Assembly Instructions

MGNH 5924-64H KG PNL HDBD SKU# 32459249 MGNH 5924-64F KG PNL FTBD SKU# 32859247 MGNH 5924-54R QN/KG PNL RAIL SKU# 32959249

Version 1 - 12/20/2024

***Cautions: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

PARTS LIST

No.	Description	Sketch	Q'ty
1	Panel Headboard		1 Pc
2	Bottom Headboard Stretcher		1 Pc
3	Left Headboard Leg		1 Pc
4	Right Headboard Leg		1 Pc
5	Panel Footboard		1 Pc
6	Slat		5 Pcs
7	Long Support Leg	←	10 Pcs
8	Short Support Leg	Ŋ	10 Pcs
9	Side Rail		2 Pcs

HARDWARE LIST

No.	Description	Size	Sketch	Q'ty			
A	Allen Key	M4		1 Pc			
В	Screw	M4*30mm	(X)	10 Pcs			
TOOLS REQUIRED (NOT PROVIDED)							
Description		Sketch					
Phillips screwdriver							





1 OF 3

Hardware Pack Locations:

5924-64H KG PNL HDBD SKU# 32459249 5924-64F KG PNL FTBD SKU# 32859247

ROOMSTO GO

Assembly Instructions


Manufactured by MGNH for Rooms To Go.

MGNH 5924-64H KG PNL HDBD SKU# 32459249 MGNH 5924-64F KG PNL FTBD SKU# 32859247 MGNH 5924-54R QN/KG PNL RAIL SKU# 32959249

Version 1 - 12/20/2024

2 OF 3

***Cautions: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

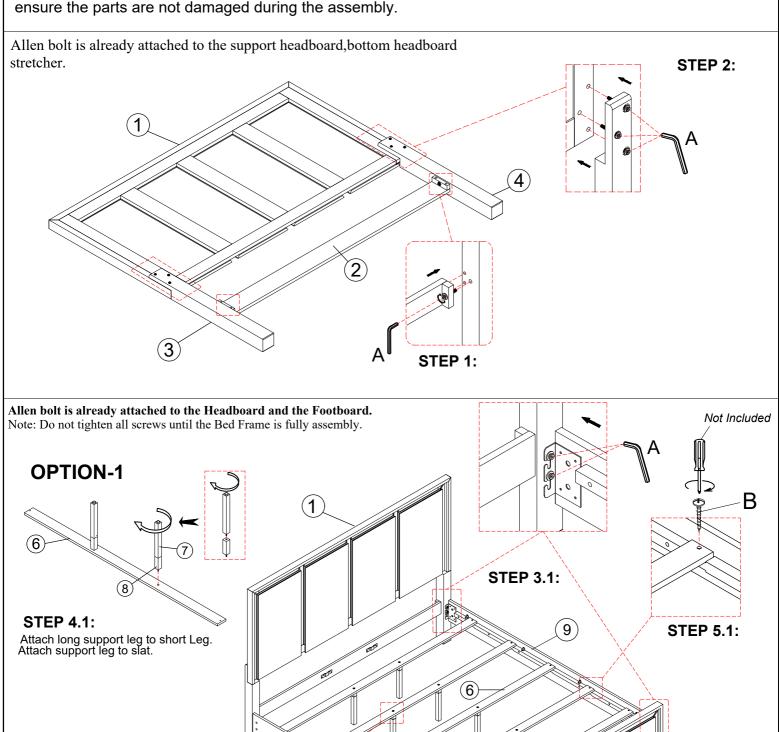

Hardware Pack Locations:

5924-64H KG PNL HDBD SKU# 32459249 5924-64F KG PNL FTBD SKU# 32859247

ROOMSTO GO

Assembly Instructions

Manufactured by MGNH for Rooms To Go.

MGNH 5924-64H KG PNL HDBD SKU# 32459249 MGNH 5924-64F KG PNL FTBD SKU# 32859247 MGNH 5924-54R QN/KG PNL RAIL SKU# 32959249

Version 1 - 12/20/2024

***Cautions: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

Allen bolt is already attached to the Headboard and the Footboard.

Note: Do not tighten all screws until the Bed Frame is fully assembly.

