



ROOMS**TO GO****LWYE ASSEMBLY INSTRUCTIONS**MODEL : 7450 / 7452
/ 7454**KG PNL HDBD / FTBD / RVS RAIL**

7450 / 7452 / 7454 - 143 / 144 / 142

SKU # 32474506 / 32474520 / 32474544 / 32874504 / 32874528 / 32874542 / 32974506 / 32974520 / 32974544


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts. Which may have come loose inside the carton during shipment. Identify and count all parts and compare with the hardware list below :

	No.	Picture	Description	Dimension	Qty
Hardware List	①		JCBB (M8) with washer	8 x P1.25 x 20mm	8 Pcs
	②		C.S.K Screw (M4)	4 x 32mm	10 Pcs
	③		Allen Wrench (M5)	5 x 65mm	1 Pc
	④		Screw Driver (*)		1 Pc


	No.	Description	Qty
Parts List	A	Footboard	1 Pc
	B	Side Rail	2 Pcs
	C	Wooden Slat	5 Pcs
	D	Wooden Slat Support	10 Pcs
	E	Connector Wooden Support	10 Pcs

Notes : (*) The manufacturer does NOT provided Item 4.


COMPLETED HEADBOARD

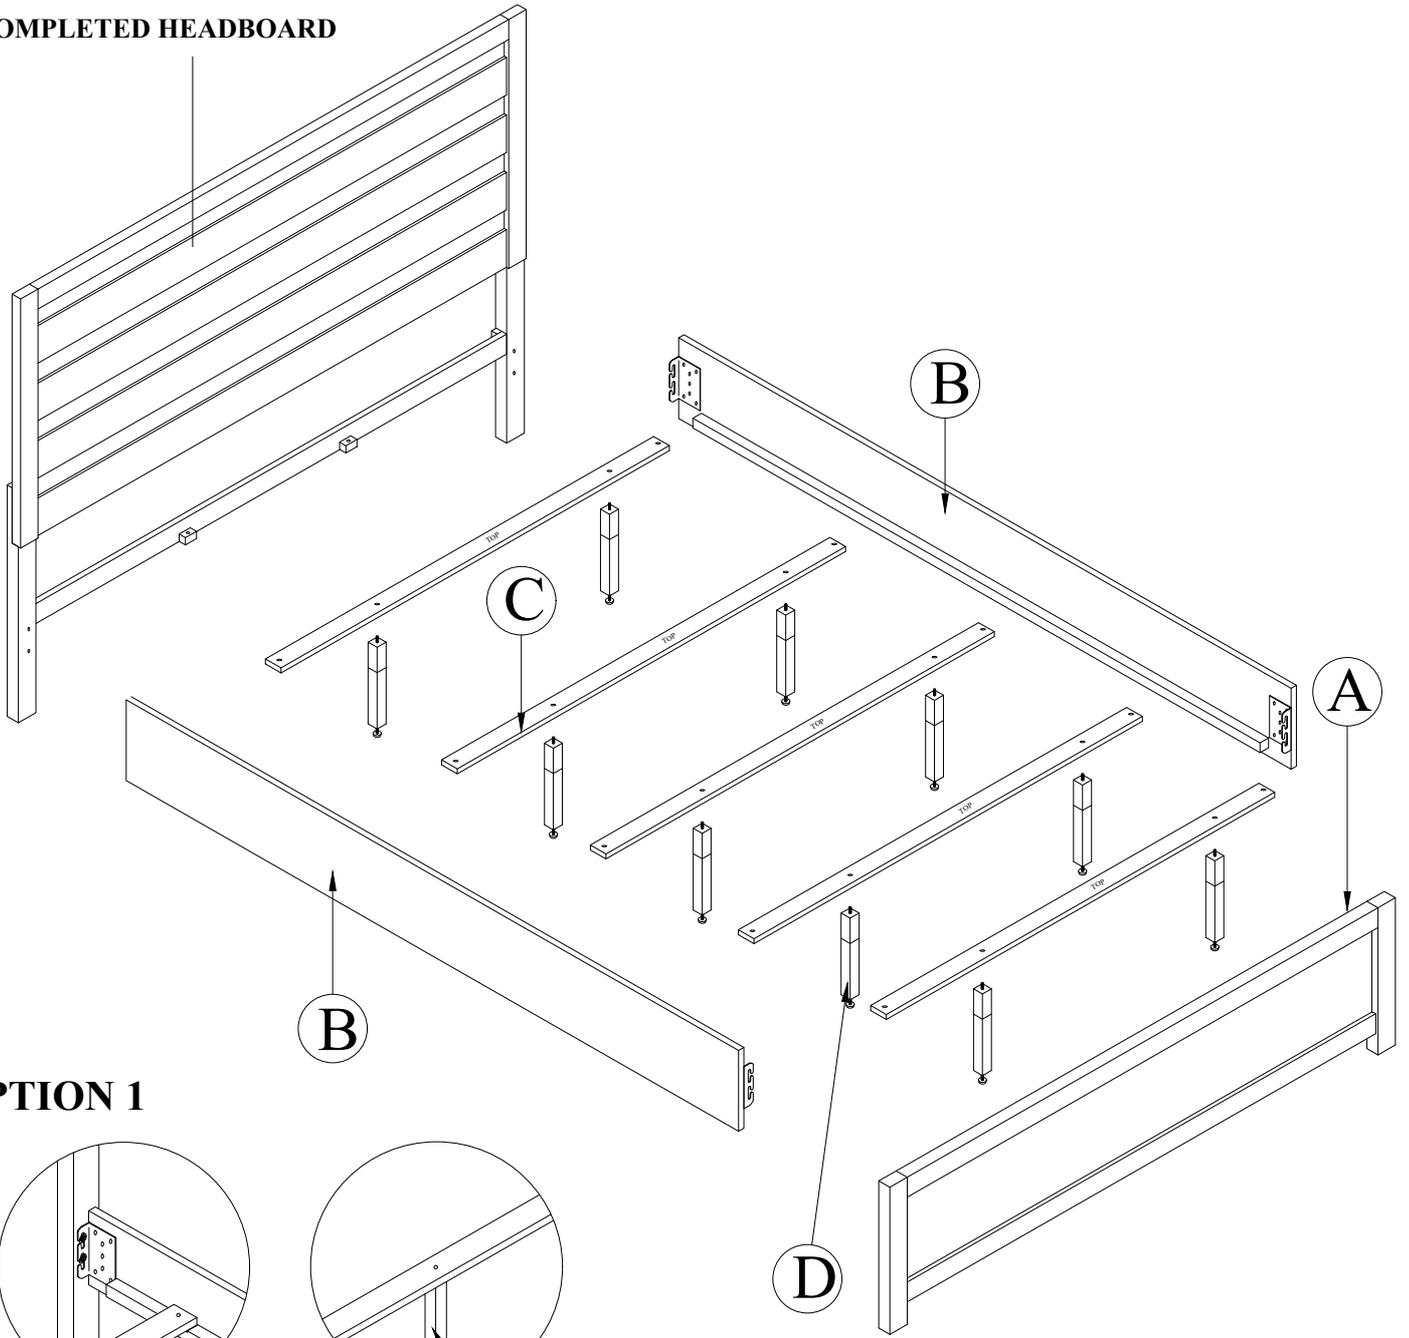

OPTION 1

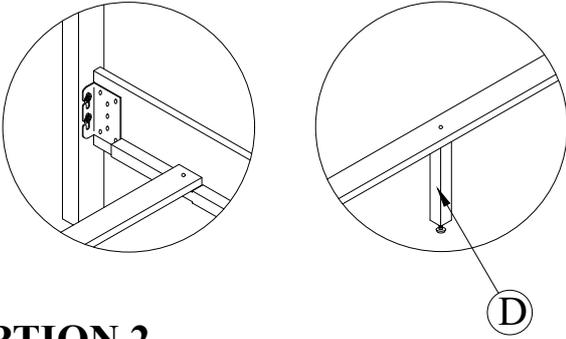

OPTION 2

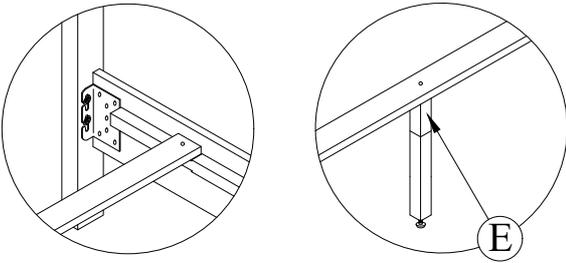

PARTS DETAILS

NOTE :


OPTION 1

Assembly step

To be used with Mattress and Boxspring

STEP 1

To assemble side rail to headboard and footboard

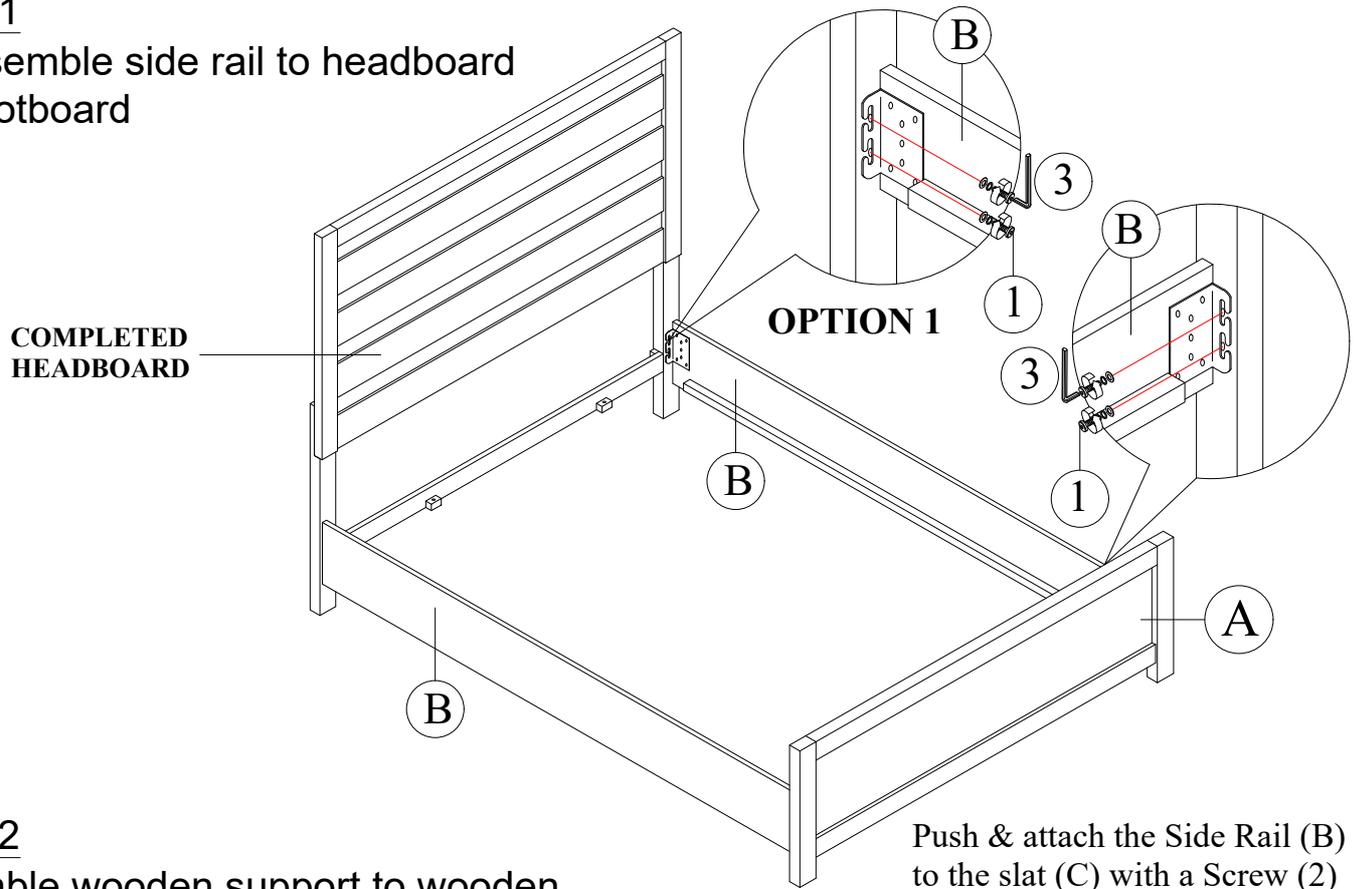


STEP 2

Assemble wooden support to wooden slats

Push & attach the Side Rail (B) to the slat (C) with a Screw (2) using a Phillips screwdriver (4) (not provided).

STEP 3

Assemble wooden slats to bed

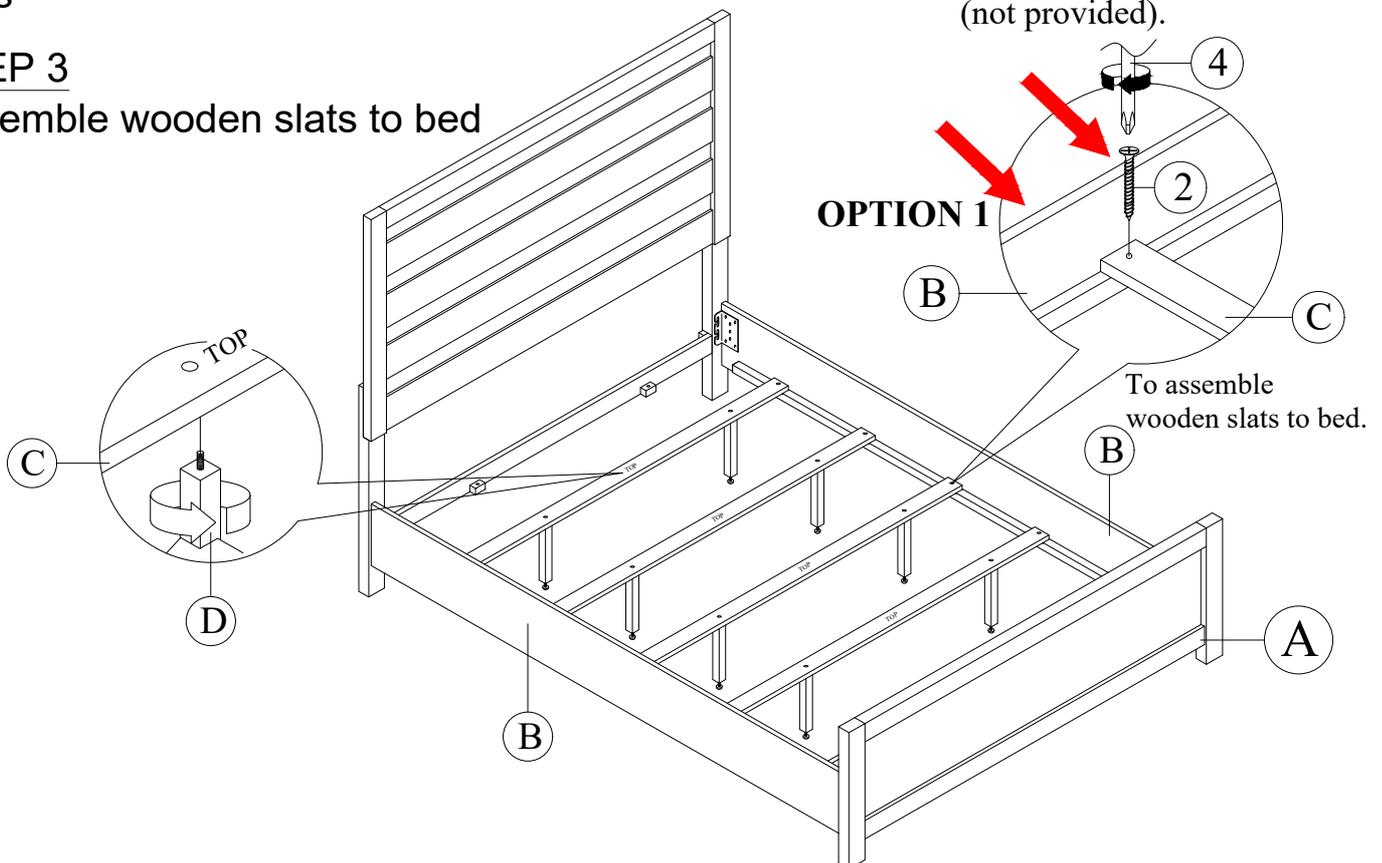

NOTE :

OPTION 2

Assembly step



To be used with Mattress

STEP 1

To assemble side rail to headboard and footboard

COMPLETED HEADBOARD

OPTION 2

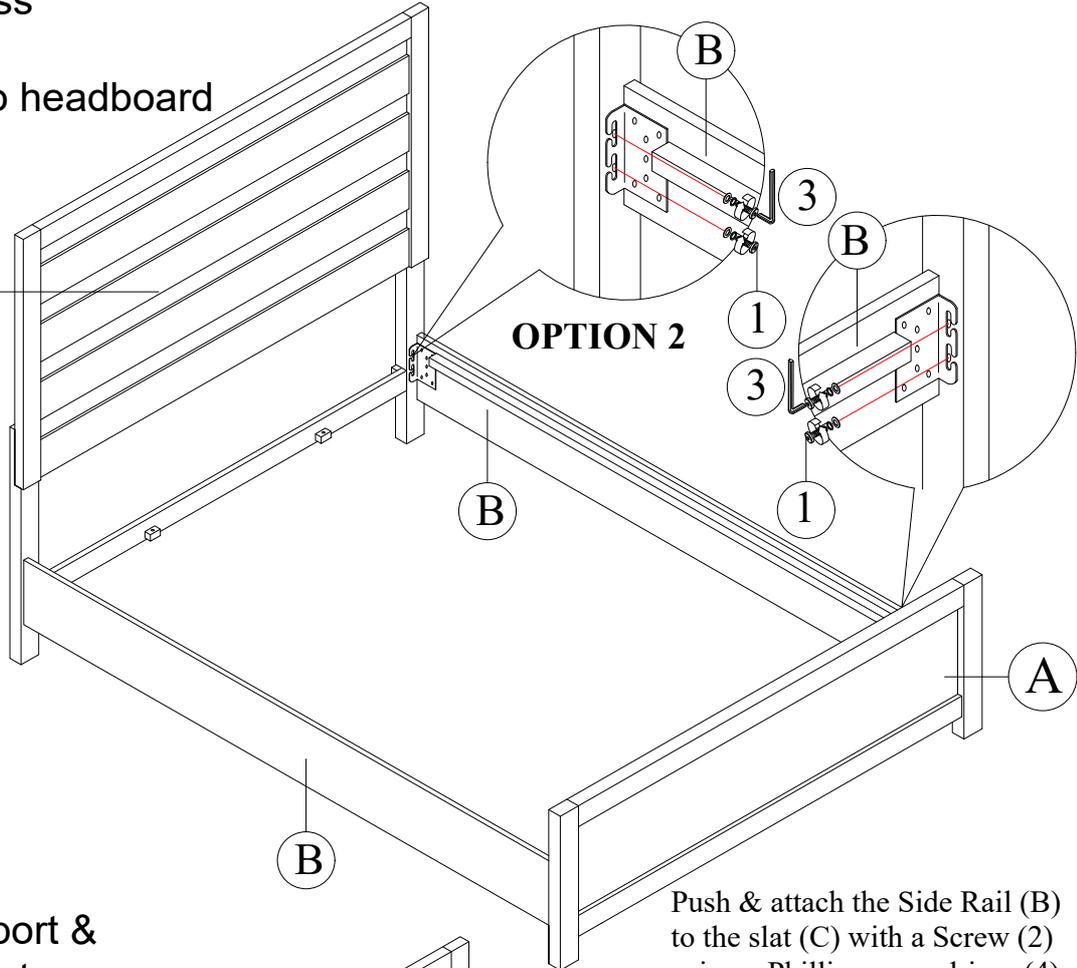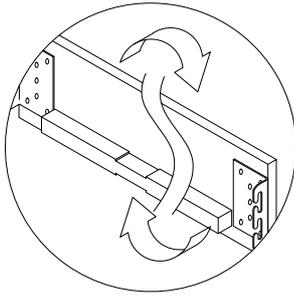


STEP 2

Assemble wooden support & connector to wooden slat


STEP 3

Assemble wooden slats to bed

Push & attach the Side Rail (B) to the slat (C) with a Screw (2) using a Phillips screwdriver (4) (not provided).

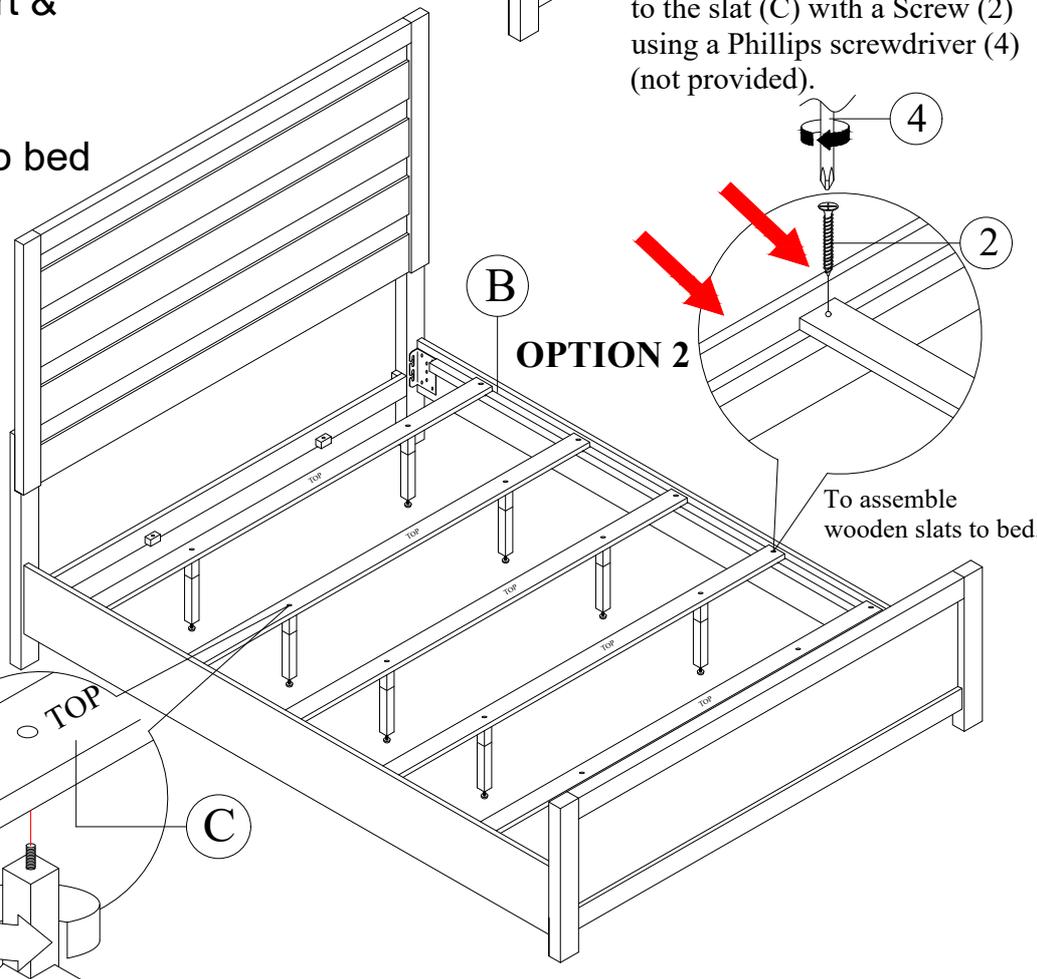

OPTION 2

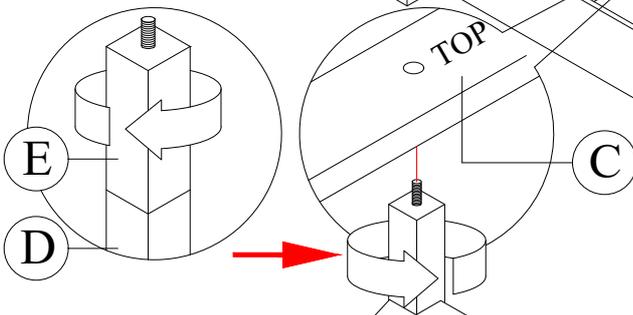

NOTE :