



No.	PART LIST		Q'TY
A	HEADBOARD		1 PC
B	LEFT LEG		1 PC
C	RIGHT LEG		1 PC
D	STRETCHER		1 PC
E	FOOTBOARD		1 PC
F	SLAT		5 PCS
G	CENTER LEG		10 PCS
H	SUPPORT LEG		10 PCS
I	SIDE RAIL		2 PCS

HARDWARE PACKED IN HEADBOARD


No.	HARDWARE LIST		Q'TY
1		BOLT 5/16" x 18 x 2"	8 SET
		LOCK WASHER 5/16" x 11 x 2mm	
		FLAT WASHER 5/16" x 19 x 2mm	
2		ALLEN WRENCH (4mm)	1 PC

HARDWARE PACKED IN FOOTBOARD

No.	HARDWARE LIST		Q'TY
3		SCREW 25mm	10 PCS


Step 1 . Attach headboard left leg (B) to headboard and secure with flat washers, lock washers and bolts (1) using allen wrench (2) .


Step 2 . Attach headboard right leg (C) to headboard and secure with flat washers, lock washers and bolts (1) using allen wrench (2) .

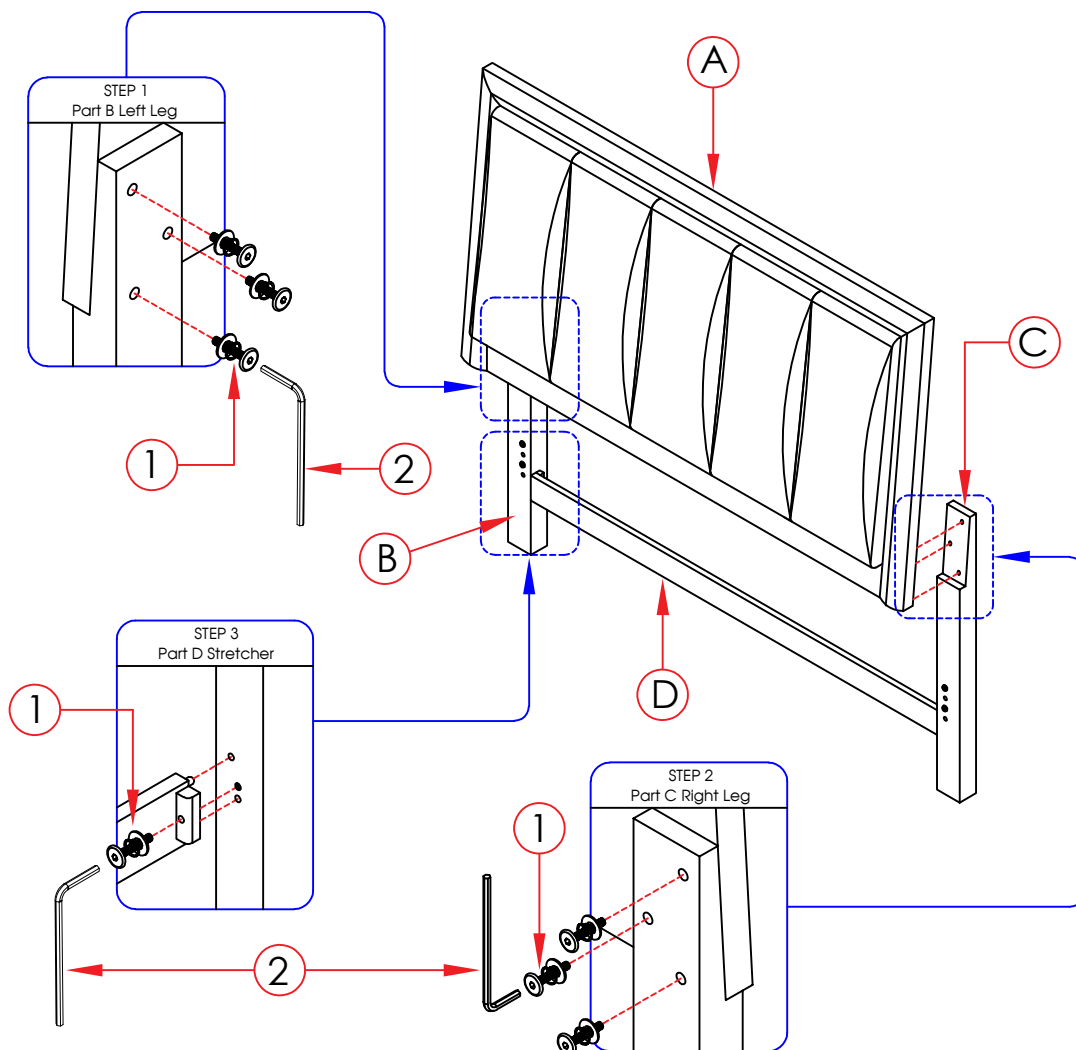

Step 3 . Attach the headboard Stretcher (D) to headboard leg and secure with flat washers, lock washers and bolts (1) using allen wrench (2) .

Step 4 . Using allen wrench (2) to loose the bolts from the headboard & footboard legs.
Step 5 . Attach the side rails (I) to headboard and footboard.
Step 6 . Tighten all the bolts using allen wrench (2).

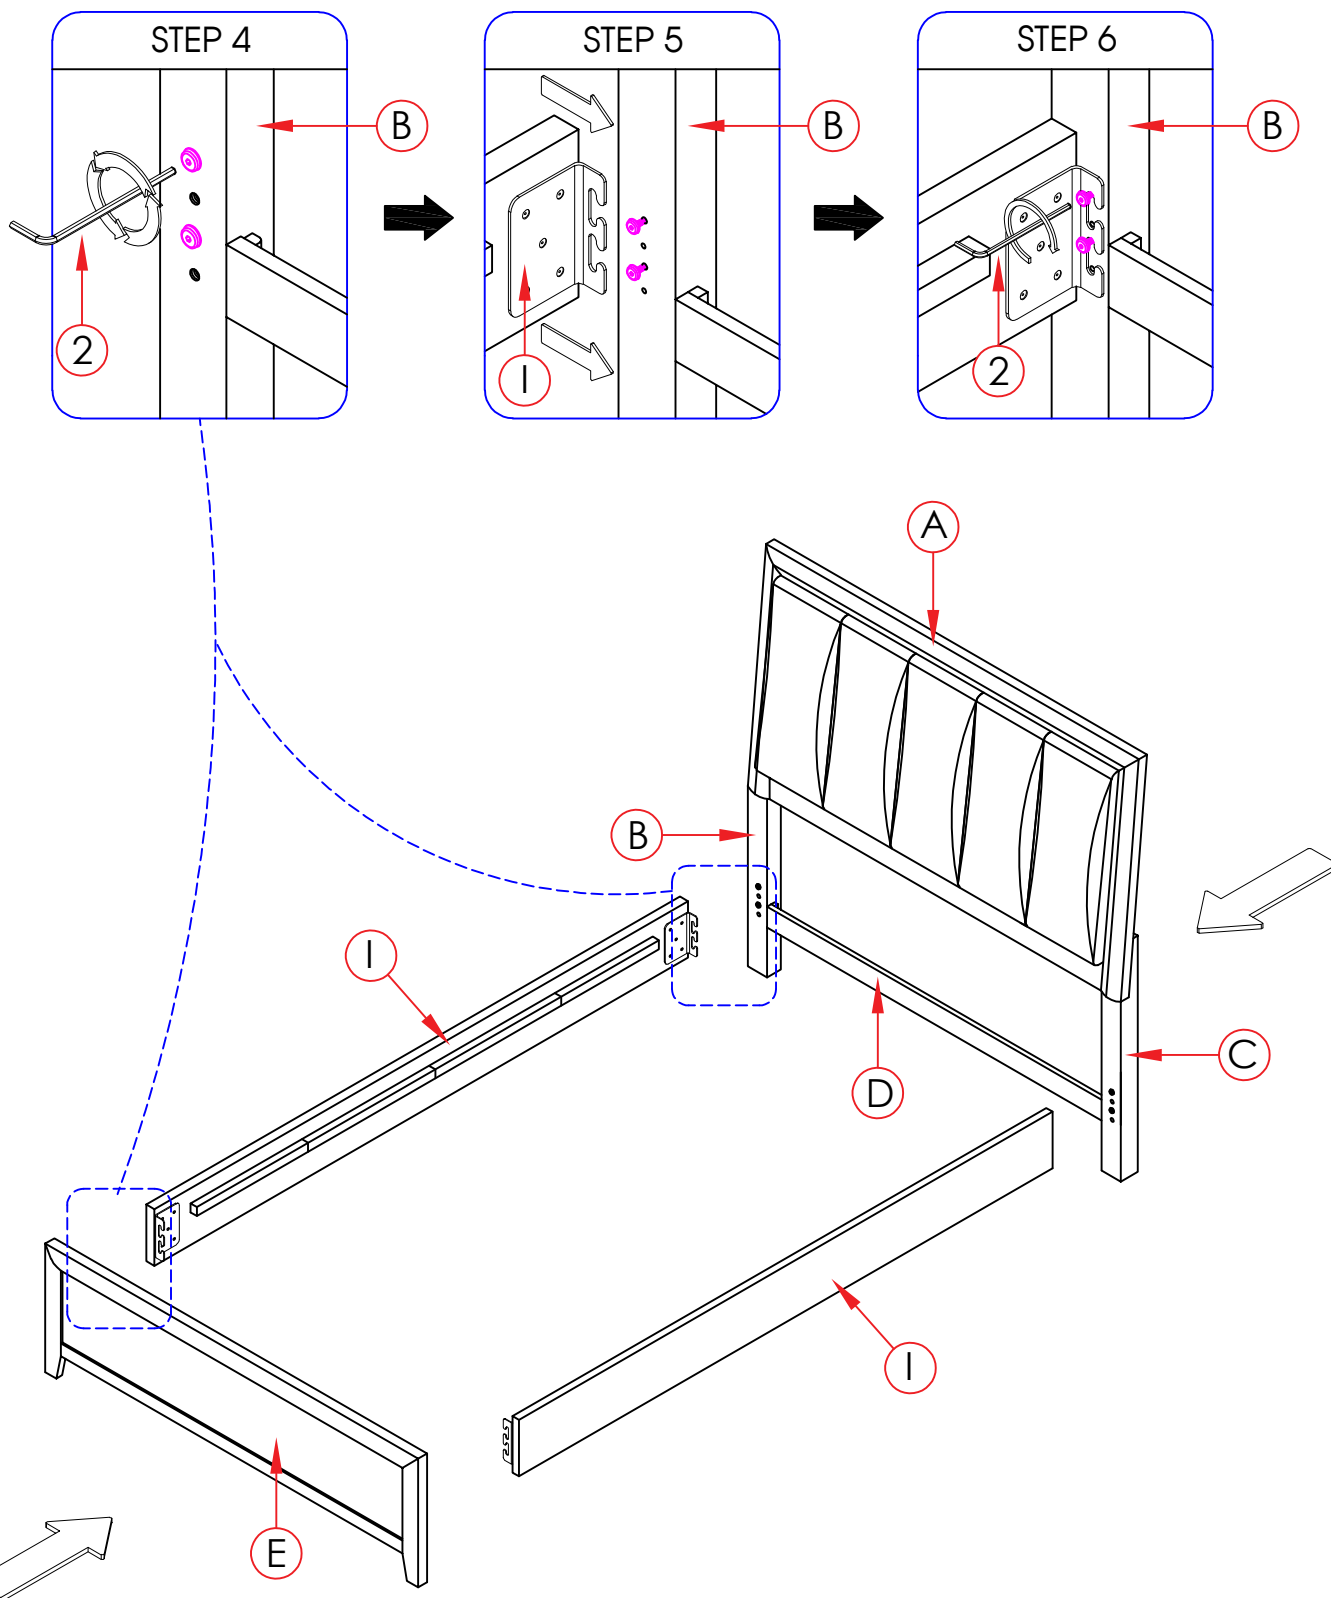

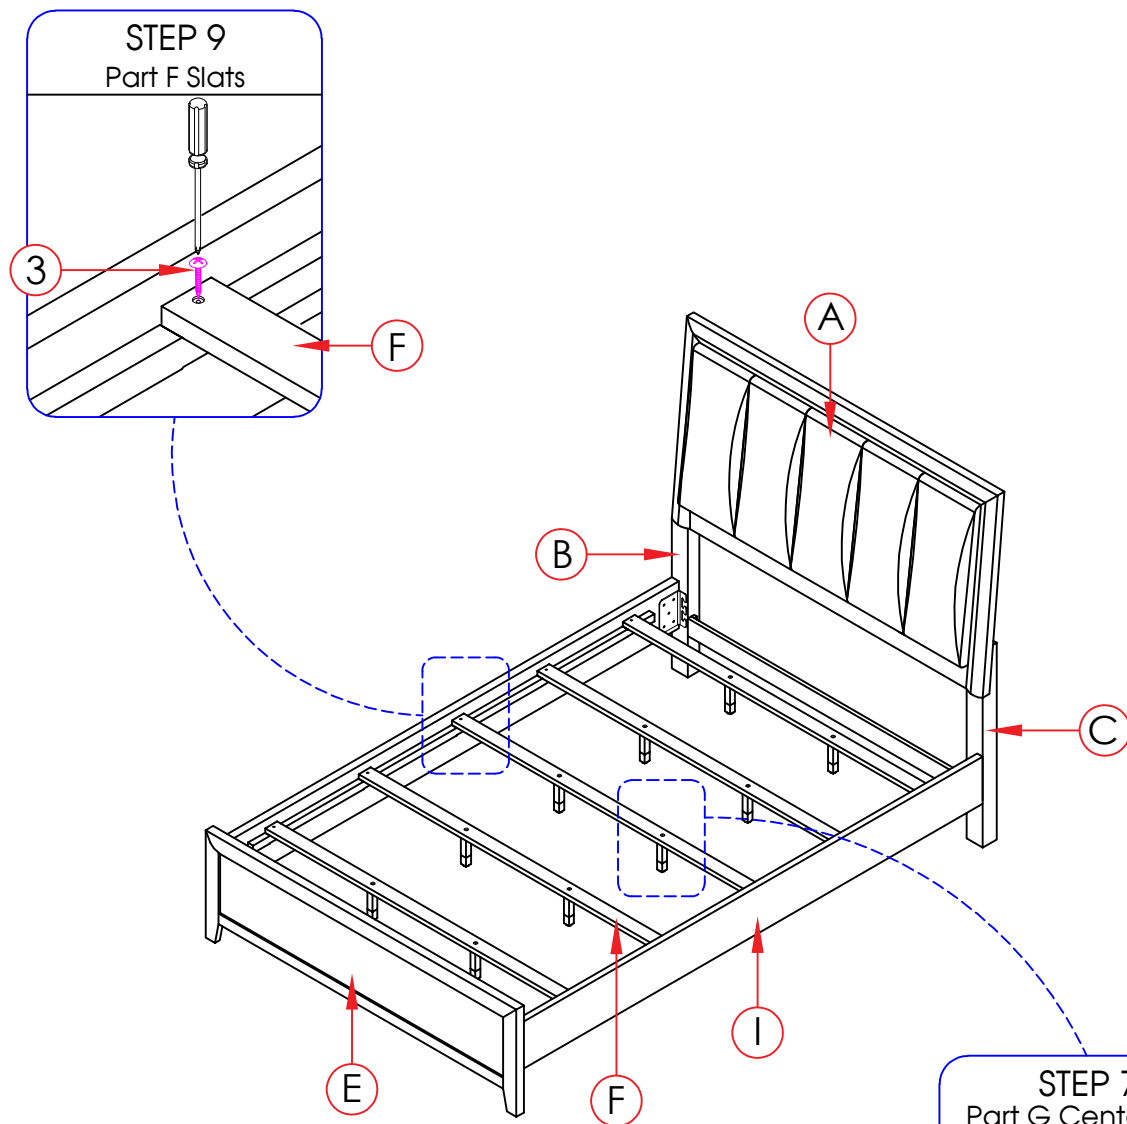

Step 7 . Insert the bolts on the center leg (G) into the pre-drilled holes on the slats (F) secure by turning clockwise.

Step 8 . Insert the bolts on the support center leg (H) into the pre-drilled holes on the center legs (G) secure by turning clockwise.

Step 9 . Attach slats (F) to side rails (I). Secure with wood screws (3) using philips head screwdriver (not provided).

