



### Parts and Hardware

Please check to make sure you have all parts and hardware before starting the assembly process.  
(Attention: The Headboard Legs & Headboard Hardware bag can be found in the back of Headboard)

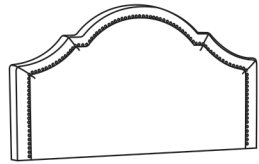

(A) Up Headboard 1pc



Right




Left

(B1) Headboard Left Leg 1pc  
(B2) Headboard Right Leg 1pc



(C) Footboard 1pc



(D) Side Rails 2pcs




(E) Legs 2pcs



(F) Slats 4pcs



(G) Slat support legs 4pcs




(H) Allen head bolts M6X80 2pcs




(I) Allen head bolts M6X40 12pcs



(J) Allen head bolts M6X50 8pcs



(K) Allen head bolts M8X110 4pcs

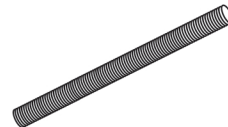

(L) Threaded bolts M8X110 4pcs



(M) Flat washers 14pcs




(N) Nuts 8pcs



(O) Metal plates 4pcs



(P) Allen wrench 1pc



(Q) Nut wrench 1pc




(R) Nut wrench 2pcs

### Assembly Instructions


Please read and understand all assembly instructions before beginning assembly process.

**STEP1:** Headboard height can be adjusted to different heights. Select the desired height, using Allen head bolts(J), Flat washers(M) to attach the legs(B1)(B2) to the headboard(A), tighten with Allen wrench(P)

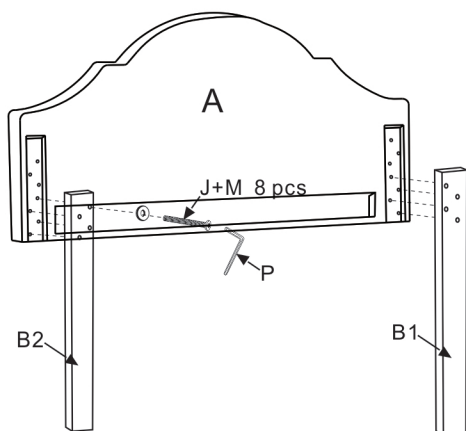


*(Instructions shows Headboard viewed rom the back.)*

**STEP2:** Attach Footboard Legs(E) to Footboard( C) using Allen head bolts(H) and Flat washers(M) tighten with Allen wrench(P).

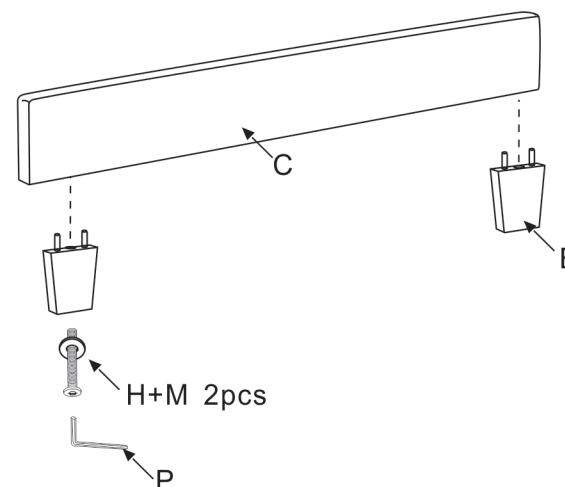


**STEP3:** Attach Side rails(D) to connect headboard(A) and footboard( C) Assemble headboard using Allen head bolts(K), Flat washers(M), Metal plates(O) and Nuts(N) tighten with Allen wrench(P) and Nut wrench(Q). Tighten Threaded bolts(L) on holes of footboard( C) at first, then through the holes of side rails with Metal plates(O) and Nuts(N) with Nut wrench( Q) to tighten. Don't tighten bolts completely until you finish all.

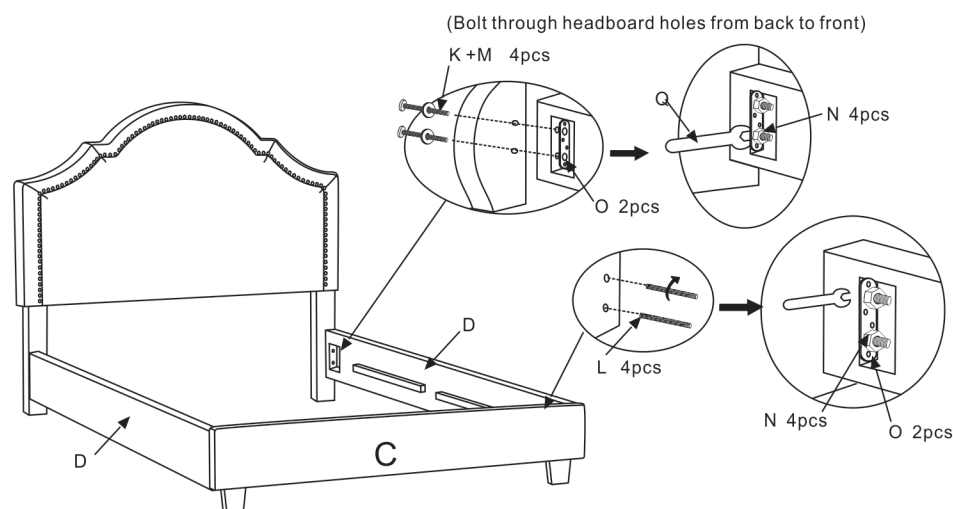


### Assembly Instructions

Please read and understand all assembly instructions before beginning assembly process.

**STEP4:** Attach slat support leg(G) to slats(F) using Allen head bolts(I), tighten with (P).

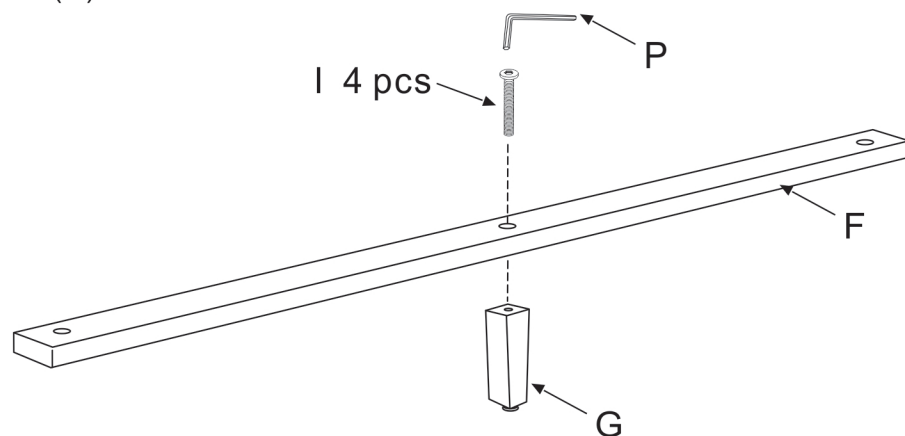

**STEP5:** Assemble slats (F) to Side rails(D), using Allen head bolt(I), tighten with Allen wrench(P). Don't tighten bolts completely until you finish all.

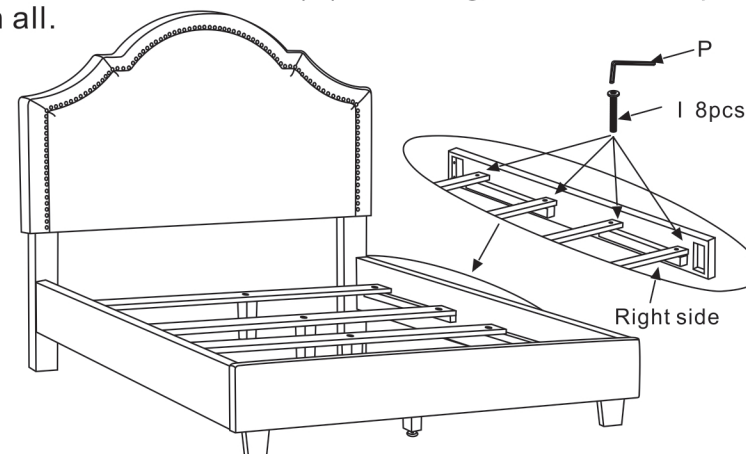

Additional Assemble Instruction for using this Headboard with Hollywood Bed Frame use Included Adaptors.

