





Assembly Instructions

BFGP 3199-123 GLASS DOOR NIGHTSTAND - SKU# 32531990

Manufactured by BFGP for Rooms To Go


VERSIONS# 1 - 07/06/2024

STEP	CODE	HARDWARE		Q'TY
3	1		Furniture Tipping Restraint (Not included screwdriver)	1SET
	2		Allen Key 4mm	1PC

PLEASE NOTE:

To avoid the possibility of the furniture tipping and injury,
the Anti-tip hardware must be installed.


PART LISTS

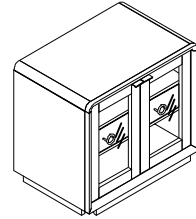

A. Glass Door Nightstand - 1 PC



B. Legs - 4 PCS

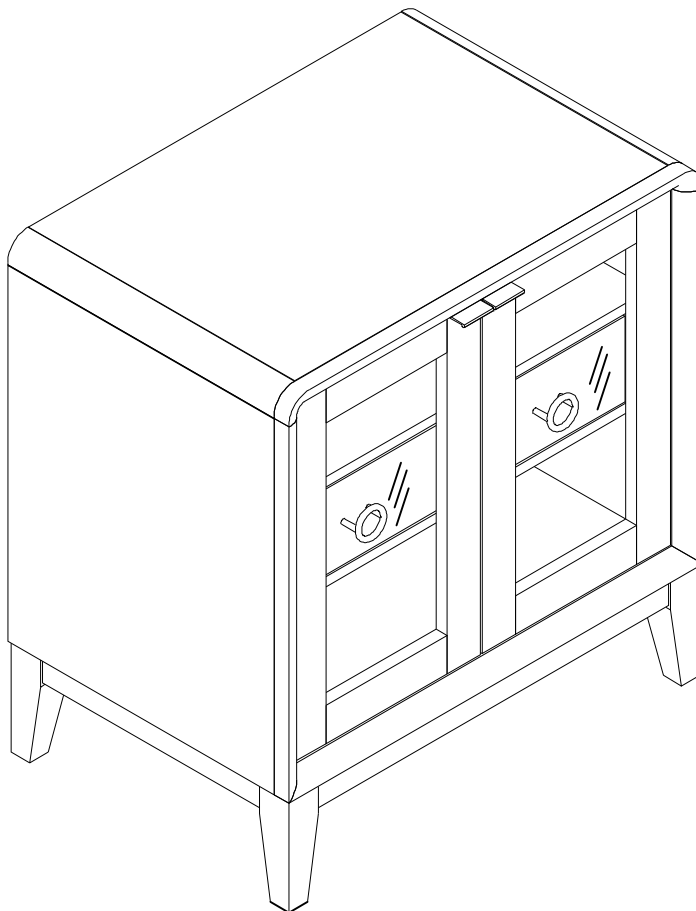

Hardware Pack Location (s):BFGP 3199-123 GLASS DOOR NIGHTSTAND - SKU# 32531990

MADE IN VIETNAM

1 OF 2



Assembly Instructions


BFGP 3199-123 GLASS DOOR NIGHTSTAND - SKU# 32531990

Manufactured by BFGP for Rooms To Go


VERSIONS# 1 - 07/06/2024

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

STEP 1: Legs are in the bottom. Remove Legs (B) from inner box.

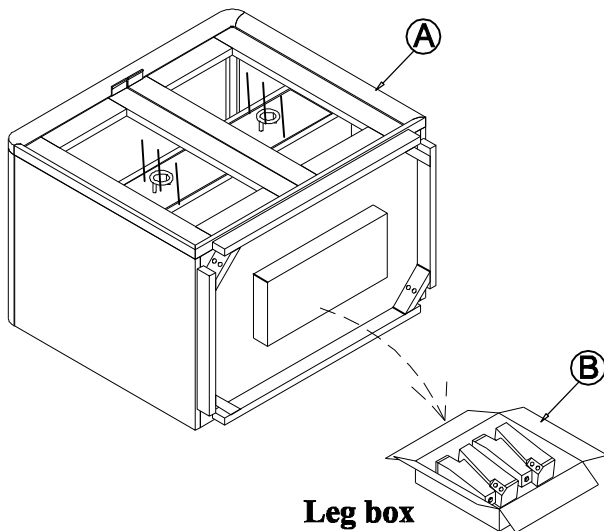

STEP 2: Assemble the Legs (B) to the Glass Door Nightstand (A) as shown.

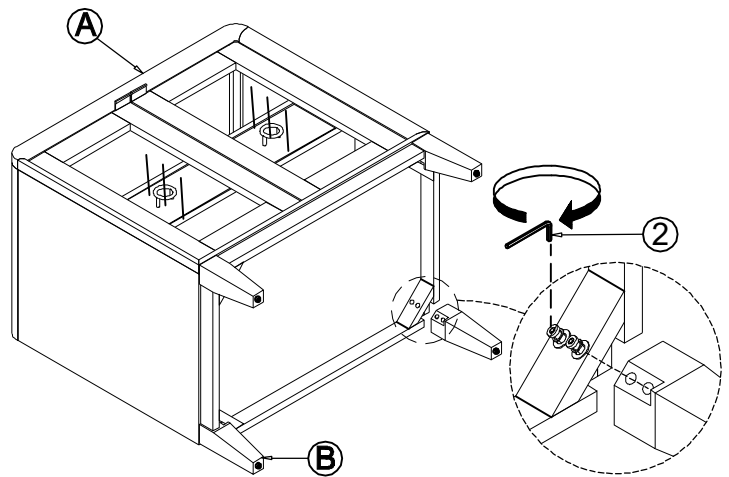


NOTE:

The bolts were pre-installed on Glass Door Nightstand (A)


STEP 3: Move the Glass Door Nightstand into final position and use tipping restraint attach to wall. Insert the screw (1) by using the screwdriver.

***Not included**

REMARK:
Anti-tip hardware -customer
assembly required

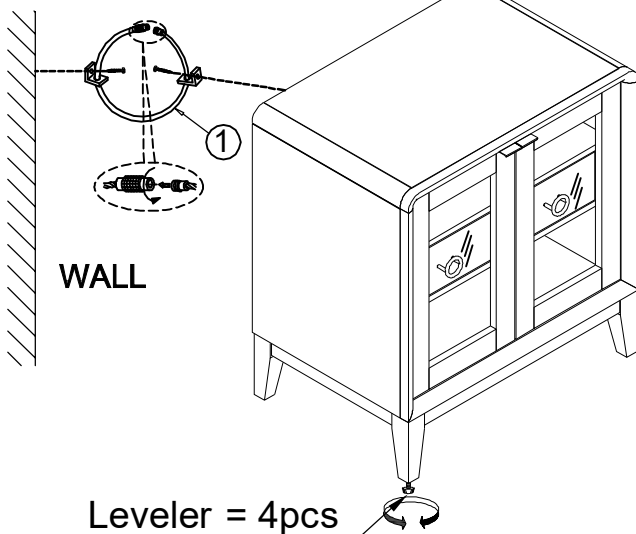

COMPLETED

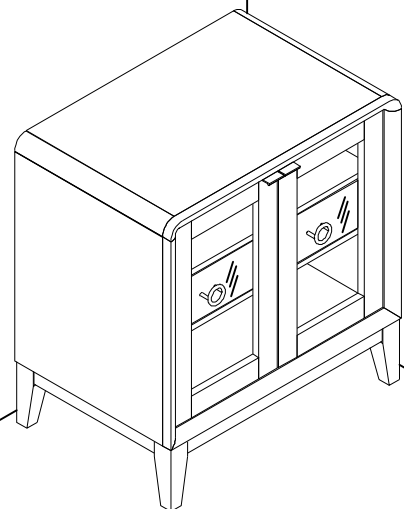

Hardware Pack Location (s):BFGP 3199-123 GLASS DOOR NIGHTSTAND - SKU# 32531990

MADE IN VIETNAM

2 OF 2